STR-DE697

SERVICE MANUAL

Ver 1.1 2004. 10

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model

Photo: Black type

Manufactured under license from Dolby Laboratories.
“Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories.
“DTS”, “DTS-ES”, “Neo:6” and “DTS 96/24” are trademarks of Digital Theater Systems, Inc.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
(Models of area code US only)
With 8 ohm loads, both channels driven, from 20 – 20,000 Hz; rated 90 watts per channel minimum RMS power, with no more than 0.09 % total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Power Output

Models of area code US, CND
Rated Power Output at Stereo Mode
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
90 W + 90 W [1)]
Reference Power Output [1)]
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
FRONT [2)] : 90 W/ch
CENTER [2)] : 90 W
SURR [2)] : 90 W/ch
SURR BACK [2)] : 90 W/ch

(8 ohms 1 kHz, THD 0.7 %)
FRONT [2)] : 100 W/ch
CENTER [2)] : 100 W
SURR [2)] : 100 W/ch
SURR BACK [2)] : 100 W/ch

Models of area code AEP, UK
Rated Power Output at Stereo Mode
(8 ohms 1 kHz, THD 0.7 %)
100 W + 100 W [1)]
Reference Power Output [1)]
(8 ohms 1 kHz, THD 0.7 %)
FRONT [2)] : 100 W/ch
CENTER [2)] : 100 W
SURR [2)] : 100 W/ch
SURR BACK [2)] : 100 W/ch

Models of area code SP, MY
Rated Power Output at Stereo Mode
(8 ohms 1 kHz, THD 0.7 %)
100 W + 100 W [1)]
Reference Power Output [1)]
(8 ohms 1 kHz, THD 10 %)
FRONT [2)] : 120 W/ch
CENTER [2)] : 120 W
SURR [2)] : 120 W/ch
SURR BACK [2)] : 120 W/ch

– Continued on next page –

FM STEREO/FM-AM RECEIVER

9-877-763-02
2004J04-1
© 2004. 10

Sony Corporation
Audio Group
Published by Sony Engineering Corporation

SONY

Models of area code AUS
Rated Power Output at Stereo Mode
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
80 W + 80 W [1)]
(8 ohms 1 kHz, THD 0.7 %)
100 W + 100 W [1)]
Reference Power Output [1)]
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
FRONT [2)] : 80 W/ch
CENTER [2)] : 80 W
SURR [2)] : 80 W/ch
SURR BACK [2)] : 80 W/ch

(8 ohms 1 kHz, THD 0.7 %)
FRONT [2)] : 100 W/ch
CENTER [2)] : 100 W
SURR [2)] : 100 W/ch
SURR BACK [2)] : 100 W/ch

(8 ohms 1 kHz, THD 10 %)
FRONT [2)] : 120 W/ch
CENTER [2)] : 120 W
SURR [2)] : 120 W/ch
SURR BACK [2)] : 120 W/ch

1) Measured under the following conditions:

Area code	Power requirements
US, CND	120 V AC, 60 Hz
AEP, UK, SP, MY	230 V AC, 50 Hz
AUS	240 V AC, 50 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

Frequency response	
MULTI CH IN, SA-CD/ CD, MD/TAPE, DVD, AUX, VIDEO 1, 2, 3	10 Hz – 70 kHz +0.5/–2 dB (with sound field and equalizer bypassed)

Inputs (Analog)	
MULTI CH IN, SA-CD/ CD, MD/TAPE, DVD, AUX, VIDEO 1, 2, 3	Sensitivity: 500 mV Impedance: 50 kiloohms S/N [3)] : 96 dB (A, 500 mV [4)])

3) INPUT SHORT (with sound field and equalizer bypassed).
4) Weighted network, input level.

Inputs (Digital)	
DVD, SA-CD/CD (Coaxial)	Sensitivity: – Impedance: 75 ohms S/N: 100 dB (A, 20 kHz LPF)
VIDEO 2, MD/TAPE, SA-CD/CD (Optical)	Sensitivity: – Impedance: – S/N: 100 dB (A, 20 kHz LPF)

Outputs (Analog)	
MD/TAPE (OUT), VIDEO 1 (AUDIO OUT)	Voltage: 500 mV Impedance: 10 kiloohms
SUB WOOFER	Voltage: 2 V Impedance: 1 kiloohms

Outputs (Digital)	
MD/TAPE (Optical)	Sensitivity: –

EQ	
Gain levels	±6 dB, 1 dB step

FM tuner section

Tuning range	87.5 – 108.0 MHz
Antenna	FM wire antenna
Antenna terminals	75 ohms, unbalanced
Intermediate frequency	10.7 MHz
Sensitivity	
Mono:	18.3 dBf, 2.2 μV/75 ohms
Stereo:	38.3 dBf, 22.5 μV/75 ohms
Useable sensitivity	11.2 dBf, 1 μV/75 ohms
S/N	
Mono:	76 dB
Stereo:	70 dB
Harmonic distortion at 1 kHz	
Mono:	0.3%
Stereo:	0.5%
Separation	45 dB at 1 kHz
Frequency response	30 Hz – 15 kHz, +0.5/–2 dB
Selectivity	60 dB at 400 kHz

AM tuner section

Tuning range	
Models of area code US, CND	
With 10-kHz tuning scale:	530 – 1,710 kHz [5)]
With 9-kHz tuning scale:	531 – 1,710 kHz [5)]
Models of area code AEP, UK, AUS, SP, MY	
With 9-kHz tuning scale:	531 – 1,602 kHz
Antenna	Loop antenna
Intermediate frequency	450 kHz
Usable sensitivity	50 dB/m (at 1,000 kHz or 999 kHz)
S/N	54 dB (at 50 mV/m)
Harmonic distortion	0.5 % (50 mV/m, 400 Hz)
Selectivity	
At 9 kHz:	35 dB
At 10 kHz:	40 dB

5) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down PRESET TUNING + or TUNING +, press I/⏻. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

Video section

Inputs/Outputs

Video:	1 Vp-p, 75 ohms
S-video:	Y: 1 Vp-p, 75 ohms
	C: 0.286 Vp-p, 75 ohms

COMPONENT VIDEO:
(Except for models of area code AEP, UK)

	Y: 1 Vp-p, 75 ohms
	P_B/C_B/B-Y: 0.7 Vp-p, 75 ohms
	P_R/C_R/R-Y: 0.7 Vp-p, 75 ohms

80 MHz HD Pass Through

General

Power requirements

Area code	Power requirements
US, CND	120 V AC, 60 Hz
AEP, UK	230 V AC, 50/60 Hz
AUS	240 V AC, 50 Hz
SP, MY	220 – 230 V AC, 50/60 Hz

Power consumption

Area code	Power consumption
US	250 W
CND	340 VA
AEP, UK, AUS, SP, MY	265 W

Power consumption (during standby mode)
0.3 W (when "P.SAVE." in the CUSTOMIZE menu is set to "ON")

AC outlets

Area code	AC outlets
US, CND	1 switched, 120 W/1A MAX
AEP, UK, AUS, SP, MY	1 switched, 100 W MAX

Dimensions (w/h/d) (Approx.)
430 × 157.5 × 312 mm (16 7/8 × 6 2/8 × 12 2/8 inches) including projecting parts and controls

Mass (Approx.) 8.5 kg (18 lb 12 oz)

Supplied accessories
FM wire antenna (1)
AM loop antenna (1)
Remote commander RM-PP413 (1)
R6 (size-AA) batteries (2)

Design and specifications are subject to change without notice.

• Abbreviation
CND : Canadian model
AUS : Australian model
SP : Singapore model
MY : Malaysia model

SAFETY CHECK-OUT (US MODEL)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

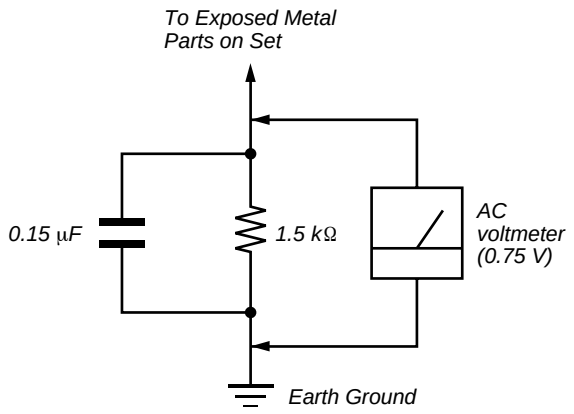

Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MODEL IDENTIFICATION
— BACK PANEL —

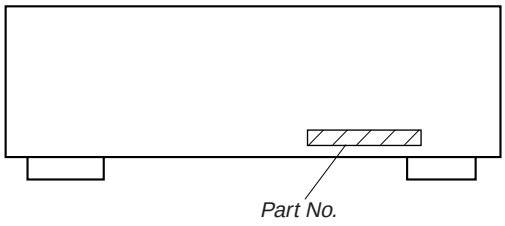

MODEL	PART No.
US	4-252-501-0☐
CND	4-252-501-1☐
AEP	4-252-501-2☐
UK	4-252-501-3☐
SP, MY	4-252-501-4☐
AUS	4-252-501-5☐

- Abbreviation
  CND: Canadian model
  AUS : Australian model
  SP : Singapore model
  MY : Malaysia model

TABLE OF CONTENTS

1. GENERAL
Main unit 5
Remote button description 6

2. DISASSEMBLY
2-1. Case 7
2-2. Front Panel Section 8
2-3. Back Panel Section 8
2-4. Digital Board 9
2-5. Standby Board 9
2-6. Main Board 10
2-7. Surr Back Board 10

3. TEST MODE 11

4. DIAGRAMS
4-1. IC Pin Descriptions 12
4-2. Circuit Boards Location 15
4-3. Block Diagram – Tuner/Audio Section – 16
4-4. Block Diagram – Digital Section – 17
4-5. Block Diagram – Video Section – 18
4-6. Block Diagram – Key/Display Section – 19
4-7. Block Diagram – Power Section – 20
4-8. Printed Wiring Boards – Main Section – 22
4-9. Schematic Diagram – Main Section (1/2) – 23
4-10. Schematic Diagram – Main Section (2/2) – 24
4-11. Printed Wiring Board – Digital Section (1/2) – 25
4-12. Printed Wiring Board – Digital Section (2/2) – 26
4-13. Schematic Diagram – Digital Section (1/3) – 27
4-14. Schematic Diagram – Digital Section (2/3) – 28
4-15. Schematic Diagram – Digital Section (3/3) – 29
4-16. Printed Wiring Boards – Center/Surround Back Speaker Section – 30
4-17. Schematic Diagram – Center/Surround Back Speaker Section – 31
4-18. Printed Wiring Board – Video Section – 32
4-19. Schematic Diagram – Video Section – 33
4-20. Printed Wiring Board – S-video Section – 34
4-21. Schematic Diagram – S-video Section – 34
4-22. Printed Wiring Boards – Display Section – 35
4-23. Schematic Diagram – Display Section – 36
4-24. Printed Wiring Boards – Power Section – 37
4-25. Schematic Diagram – Power Section – 38
4-26. IC Block Diagrams 39

5. EXPLODED VIEWS
5-1. Case Section 42
5-2. Front Panel Section 43
5-3. Back Panel Section 44
5-4. Chassis Section 45

6. ELECTRICAL PARTS LIST 46

SECTION 1
GENERAL

This section is extracted from instruction manual.

List of button locations and reference pages

How to use this page

Use this page to find the location of buttons that are mentioned in the text.

Illustration number
↓
DISPLAY 3 (26, 27, 53)
↑ Name of button/part ↑ Reference page

Main unit

ALPHABETICAL ORDER

A - H

A.F.D. (button/indicator) 11 (30, 31, 32, 52, 53)
AUX 21 (22)
DIMMER 4 (27)
DISPLAY 3 (26, 27, 53)
Display 7 (26, 27)
DVD 25 (22)
ENTER 15 (17, 18, 39, 54)
FM MODE 32 (23)

I - O

Input buttons 20 (22, 35, 38, 39, 53)
INPUT MODE 17 (35)
IR (receptor) 5 (43, 54)
MAIN MENU 8 (18, 35, 37, 39)
MASTER VOLUME –/+ 16 (17, 21, 22, 52)
MD/TAPE 24 (22)
MEMORY 34 (25)
MOVIE (button/indicator) 12 (31, 32, 52, 53)
MULTI CHANNEL DECODING (indicator) 6 (23)
MULTI CH IN 9 (23)
MUSIC (button/indicator) 13 (32, 52, 53)

P - Z

PHONES (jack) 33 (22, 52)
PRESET TUNING –/+ 29 (25, 56)
SA-CD/CD 23 (22)
SPEAKERS (OFF/A/B/A+B) 2 (16, 40, 52)
SURR BACK DECODING 14 (33)
TUNER FM/AM 22 (22, 23, 24, 25, 39)
TUNING –/+ 30 (23, 56)
VIDEO 1 28 (22)
VIDEO 2 27 (22)
VIDEO 3 26 (22)
VIDEO 3 INPUT (jacks) 31 (13)

NUMBERS AND SYMBOLS

2CH (button/indicator) 10 (30, 32, 36)
I/⏻ (power) 1 (17, 18, 24, 36, 54, 56)
</> 19 (18, 35, 37, 39)
–/+ jog dial 18 (18, 35, 37, 39)

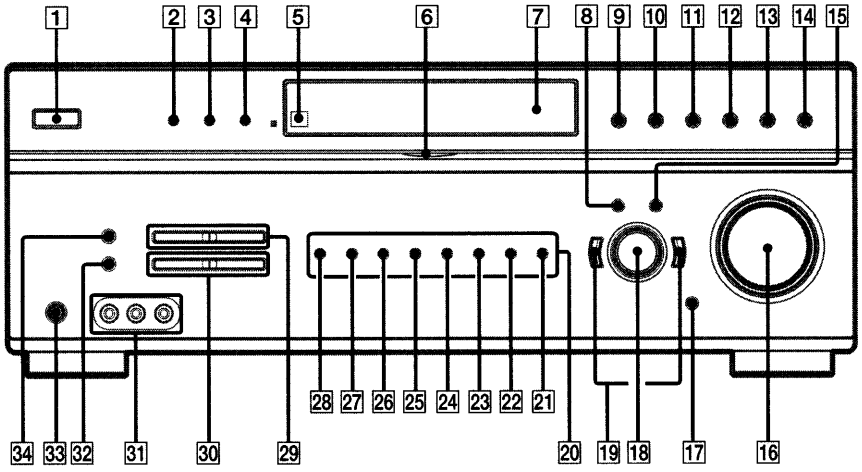

Operations Using the Remote RM-PP413

You can use the remote RM-PP413 to operate the components in your system.

Before you use your remote

Inserting batteries into the remote

Insert R6 (size-AA) batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor ■ on the receiver.

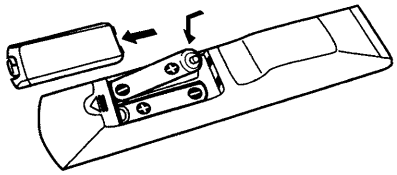

Tip

Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all batteries with new ones.

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Remote button description

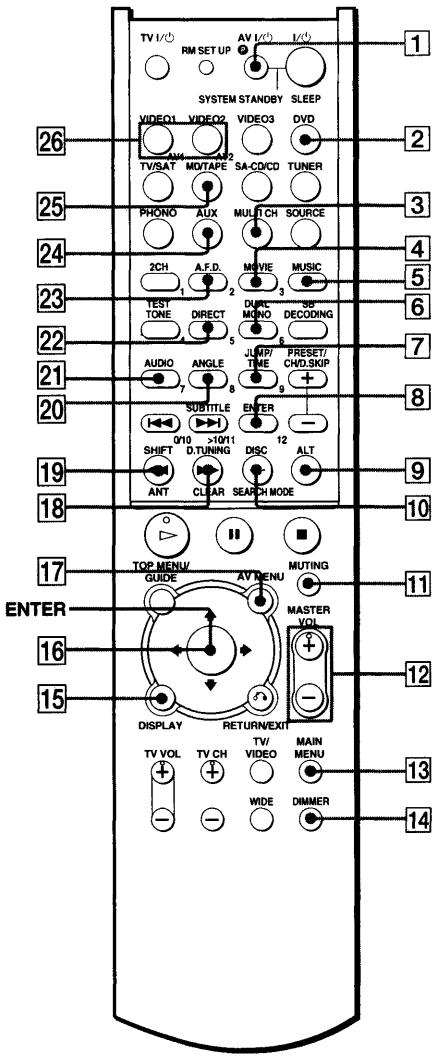

continued

SECTION 2
DISASSEMBLY

Note : This set can be disassemble according to the following sequence.

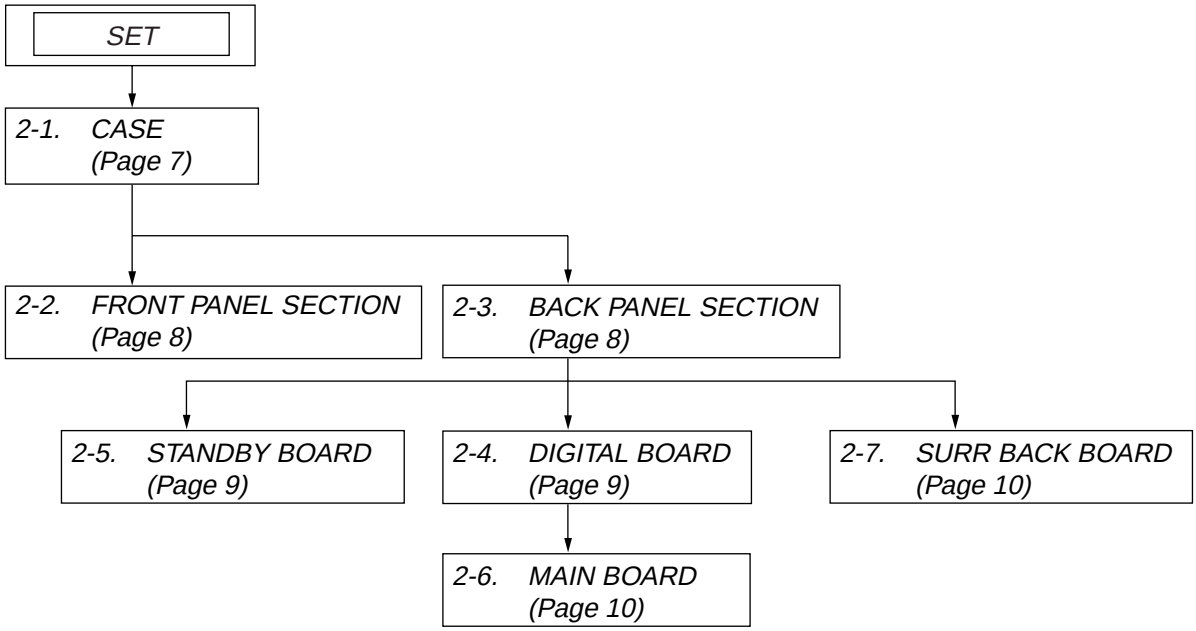

Note : Follow the disassembly procedure in the numerical order given.

2-1. CASE

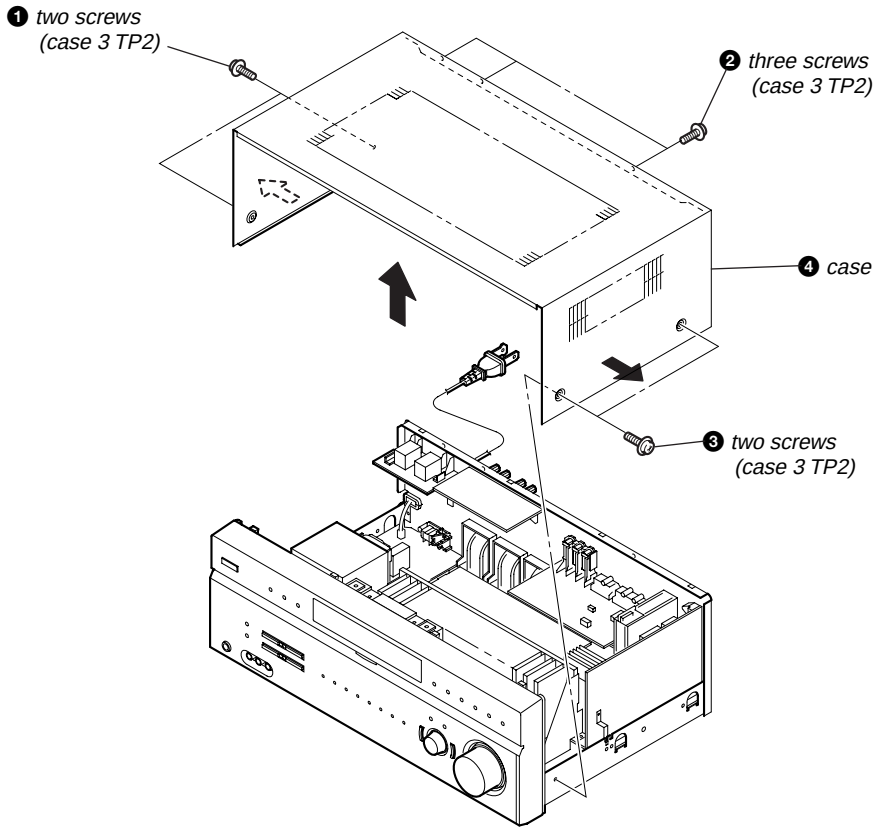

2-2. FRONT PANEL SECTION

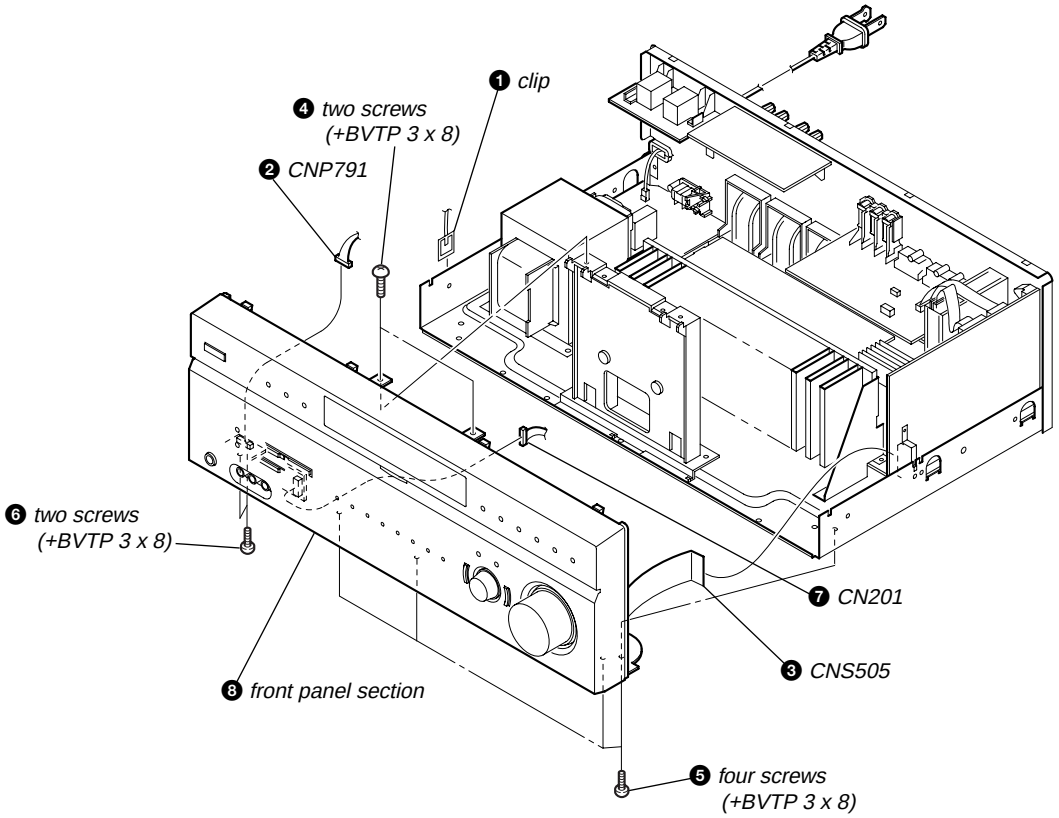

2-3. BACK PANEL SECTION

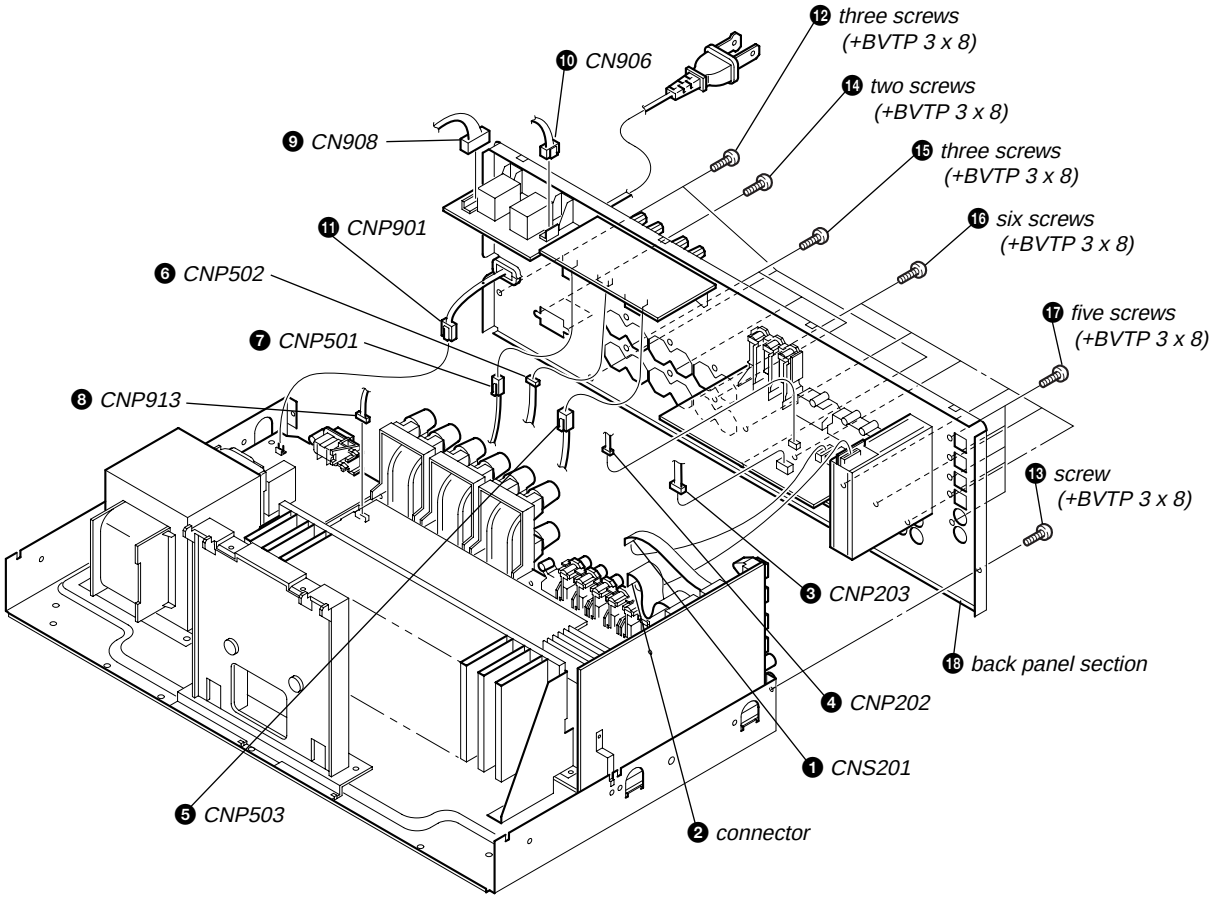

2-4. DIGITAL BOARD

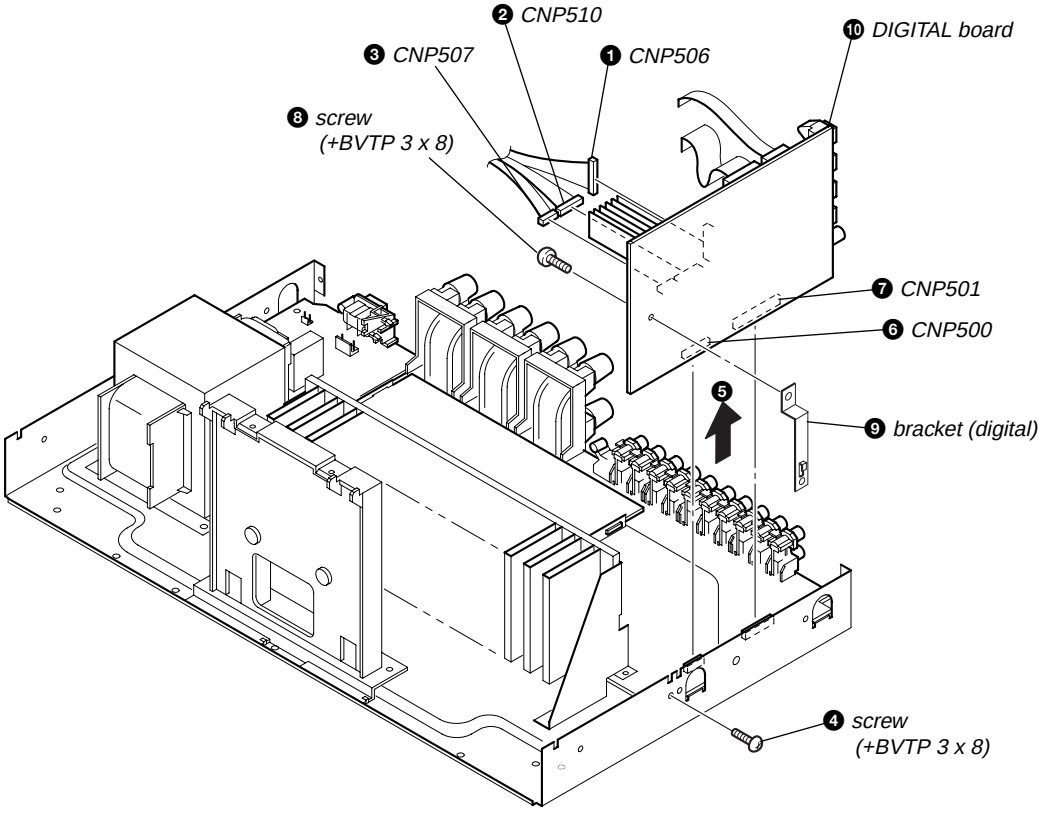

2-5. STANDBY BOARD

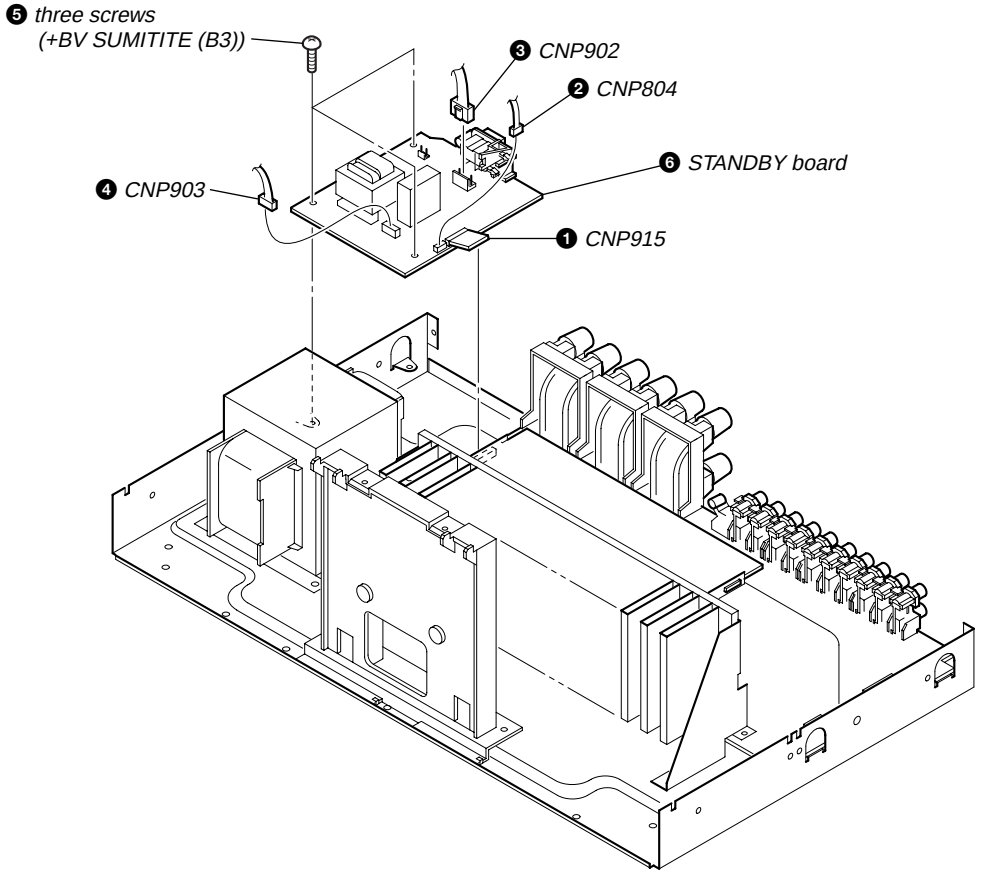

2-6. MAIN BOARD

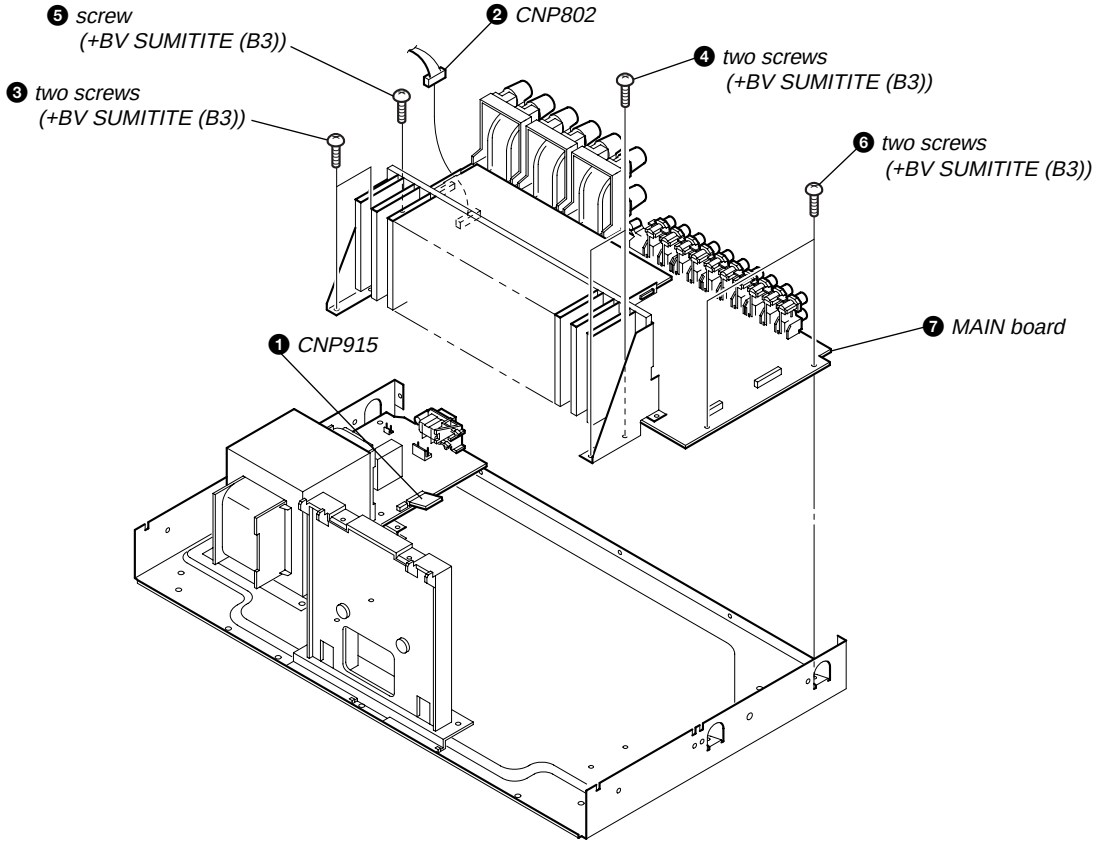

2-7. SURR BACK BOARD

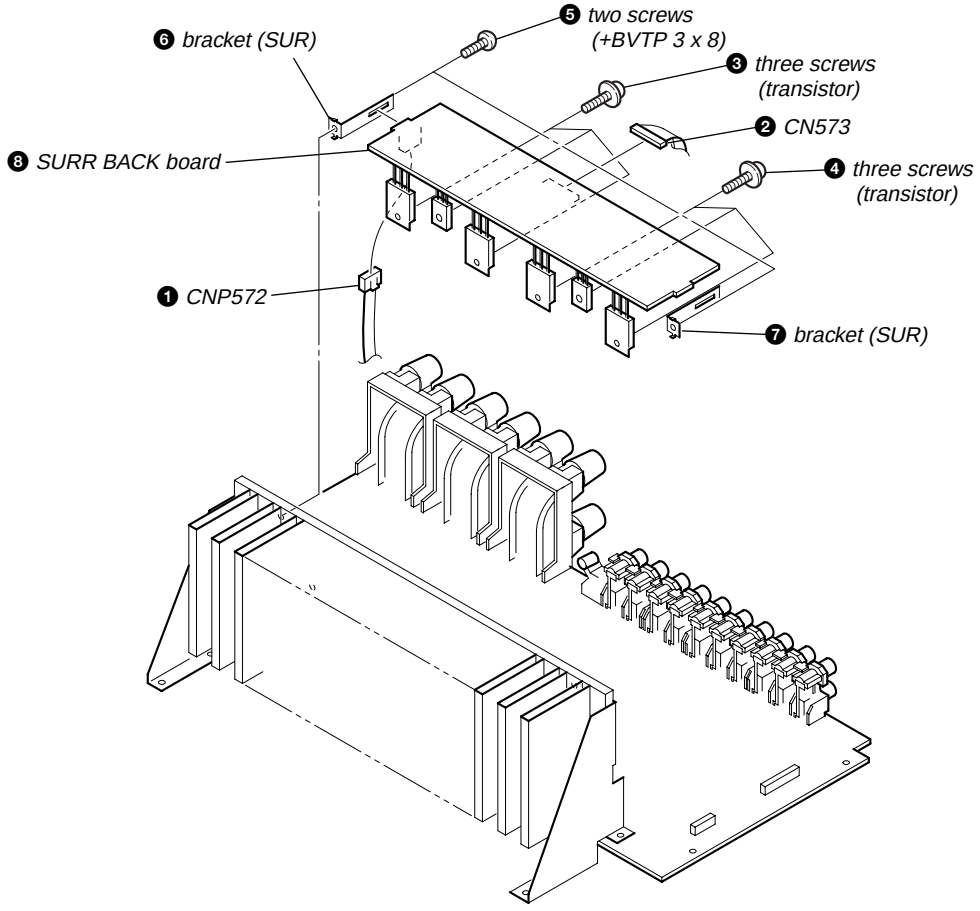

SECTION 3
TEST MODE

FACTORY PRESET MODE

* All preset contents are reset to the default setting.
* Procedure:
  While depressing the [FM MODE] and the [DISPLAY] buttons simultaneously, press the [I/⏻] button to turn on the main power.
  The message "FACTORY" appears for a moment and the present contents are reset to the default values.

AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE (US, Canadian model only)

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
* Procedure:
  Press the [TUNER FM/AM] button to set AM and press the [I/⏻] button to turn off the main power.
  While depressing the [PRESET TUNING +] button or the [TUNING +] button, press the [I/⏻] button to turn on the main power.
  Either the message "9k STEP" or "10k STEP" appears for a moment and select the desired step.

SPEAKER SIZE SELECTION MODE

* Either the normal speaker or micro satellite speaker can be selected.
* Procedure:
  While depressing the [DIMMER] button, press the [I/⏻] button to turn on the main power.
  Either the message "NORM. SP." or "MICRO SP." appears for a moment and select the desired speaker size.

FLUORESCENT INDICATOR TUBE TEST MODE

* All fluorescent segments are tested.
  When this test is activated, all segments light on at the same time, then each segment lights on one after another.
* Procedure:
  While depressing the [TUNING –] and the [SPEAKERS (OFF/A/B/A+B)] buttons simultaneously, press the [I/⏻] button to turn on the main power.

1. ALL segments light on.

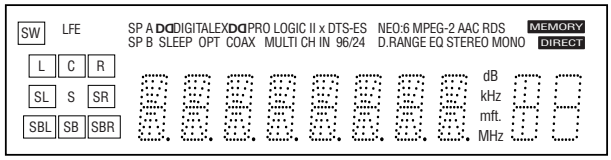

[2CH], [A.F.D.], [MOVIE], [MUSIC] and [MULTI CHANNEL DECODING] LED light on.

2. Press the [VIDEO 1] button, confirm display.

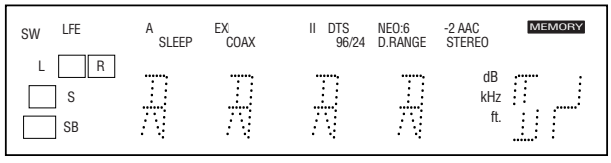

[A.F.D.] and [MUSIC] LED light on.

3. Press the [VIDEO 1] button, confirm display.

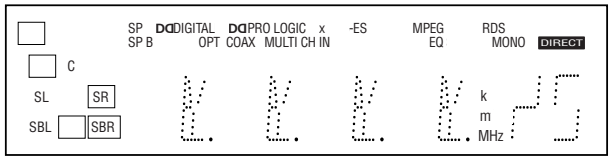

[2CH], [MOVIE] and [MULTI CHANNEL DECODING] LED light on.

4. Press the [VIDEO 1] button, all segments and all LEDs light off.

5. Every pressing the [VIDEO 1] button turns on each segment and LED one after another in the same order.
   (Not only the [VIDEO 1] button, but also the other buttons such as [VIDEO 2], [VIDEO 3], [DVD], [MD/TAPE], [SA-CD/CD], [TUNER FM/AM] and [AUX] can be used.)

SOUND FIELD CLEAR MODE

* The preset sound field is cleared when this mode is activated.
  Use this mode before returning the product to clients upon completion of repair.
* Procedure:
  While depressing the [2CH] button, press the [I/⏻] button to turn on the main power.
  The message "SF. CLR." appears for a moment and initialization is performed.

SOFTWARE VERSION DISPLAY MODE

* The software version is displayed.
* Procedure:
  While depressing the [TUNING –] and the [DISPLAY] buttons simultaneously, press the [I/⏻] button to turn on the main power.
  The model name, destination and the software version are displayed for a moment.

KEY CHECK MODE

* Button check
* Procedure:
  While depressing the [TUNING –] and the [MAIN MENU] buttons simultaneously, press the [I/⏻] button to turn on the main power.
  Either the message "REST 28" appears.
  Every pressing of any button other than the [I/⏻] counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed "REST 00" appears.

AUTOBETICAL MODE (AEP, UK model only)

* When this mode is used, the receiver scans the broadcasts that can be received by the tuner, and sets up the broadcasts.
  Be sure to start scanning after connecting the antenna.
* Procedure:
  Check that the antenna is connected.
  While depressing the [MEMORY] button, press the [I/⏻] button to turn on the main power.
  The message "AUTO-BETICAL SELECT" appears for a moment and the receiver starts scanning.

COMMAND MODE SELECTION MODE

* The command mode (AV1 or AV2) of the remote commander can be selected.
* Procedure:
  While depressing the [ENTER] button, press the [I/⏻] button to turn on the main power.
  Either the message "C.MODE.AV 1" or "C.MODE.AV 2" appears for a moment and select the desired mode.

SECTION 4
DIAGRAMS

4-1. IC PIN DESCRIPTIONS

• IC1501 CXD9718Q (DSP) (DIGITAL Board (2/3))

Pin No.	Pin Name	I/O	Pin Description
1	VSS	—	Ground
2	XRST	I	Reset signal input from SYSTEM CONTROL IC
3	EXTIN	I	Not used (Connect to ground)
4	LRCKI3	I	Not used (Connect to ground)
5	VDDI	I	Power supply pin (+2.6 V)
6	BCKI3	I	Not used (Connect to ground)
7	PLOCK	O	Not used (Open)
8	VSS	—	Ground
9	MCLK1	I	Clock signal input (13.5 MHz)
10	VDDI	I	Power supply pin (+2.6 V)
11	VSS	—	Ground
12	MCLK2	O	Clock signal output (13.5 MHz)
13	MS	I	Not used (Fixed at L)
14	SCKOUT	O	Internal system clock signal output for 2CH/6CH DAC IC
15	LRCKI1	I	Sampling clock signal input from ADC IC
16	VDDE	I	Power supply pin (+3.3 V)
17	BCKI1	I	Bit clock signal input from ADC IC
18	SDI1	I	Audio IF data input from ADC IC
19	LRCKO	O	Sampling clock signal output for 2CH/6CH DAC IC
20	BCKO	O	Bit clock signal output for 2CH/6CH DAC IC
21	VSS	—	Ground
22	KFSIO	I/O	Audio clock signal (384fs/256fs) input/output for DIR IC
23 to 25	SDO1 to SDO3	O	Digital audio serial data output for 6CH DAC IC
26	SDO4	O	Digital audio serial data output for 2CH DAC IC
27	SPDIF	O	Not used (Open)
28	LRCKI2	I	Sampling clock signal input from ADC IC
29	BCKI2	I	Bit clock signal input from ADC IC
30	SDI2	I	Digital audio serial data input from DIR IC
31	VSS	—	Ground
32	HACN	O	Acknowledge signal output for SYSTEM CONTROL IC
33	HDIN	I	Serial data input from SYSTEM CONTROL IC
34	HCLK	I	Clock signal input from SYSTEM CONTROL IC
35	HDOUT	O	Serial data output for SYSTEM CONTROL IC
36	HCS	I	Chip select signal input from SYSTEM CONTROL IC
37	GP12	I	GP12 signal input from SYSTEM CONTROL IC
38, 39	GP13, GP14	O	Not used (Open)
40	VDDI	I	Power supply pin (+2.6 V)
41	VSS	—	Ground
42	GP15	O	Not used (Open)
43	OE0	O	Not used (Open)
44	CS0	O	External memory chip select signal output for D/A converter IC (SRAM)
45	WE0	O	SRAM write enable signal output for D/A converter IC
46	VDDE	I	Power supply pin (+3.3 V)
47	WMD1	I	Not used (Fixed at H)
48	VSS	—	Ground
49	WMD0	I	Not used (Fixed at H)
50	PAGE2	O	Not used (Open)
51	VSS	—	Ground
52, 53	PAGE1, PAGE0	O	Not used (Open)
54	BOOT	I	Not used (Connect to ground)
55	TST1	O	Not used (Open)

Pin No.	Pin Name	I/O	Pin Description
56	BST	I	Boot stop signal input from SYSTEM CONTROL IC
57	MOD1	I	Operation mode signal input (L: 386fs, H: 256fs) (Fixed at H)
58	MOD0	I	Operation mode signal input (L: single chip mode, H: use prohibited) (Fixed at L)
59	EXLOCK	I	Error detection signal input from DIR IC
60	VDDI	I	Power supply pin (+2.6 V)
61	VSS	—	Ground
62, 63	A17, A16	O	Not used (Open)
64 to 66	A15 to A13	O	External memory address signal output for D/A converter IC (SRAM)
67	GP10	O	Not used (Open)
68	GP9	O	GP9 signal output for SYSTEM CONTROL IC
69	GP8	I	Audio signal input from DIR IC
70	VDDI	I	Power supply pin (+2.6 V)
71	VSS	—	Ground
72 to 75	D15/GP7 to D12/GP4	I/O	External memory data input/output for D/A converter IC (general port)
76	VDDE	I	Power supply pin (+3.3 V)
77 to 80	D11/GP3 to D8/GP0	I/O	External memory data input/output for D/A converter IC (general port)
81	VSS	—	Ground
82	A9	O	External memory address signal output for D/A converter IC (SRAM)
83 to 85	A12 to A10	O	External memory address signal output for D/A converter IC (SRAM)
86	TDO	O	Not used (Fixed at H)
87	TMS	I	Not used (Fixed at H)
88	XTRST	I	Not used (Fixed at H)
89	TCK	I	Not used (Fixed at H)
90	TDI	I	Not used (Fixed at H)
91	VSS	—	Ground
92 to 97	A8 to A3	O	External memory address signal output for D/A converter IC (SRAM)
98, 99	D7, D6	I/O	External memory data input/output for D/A converter IC (SRAM)
100	VDDI	I	Power supply pin (+2.6 V)
101	VSS	—	Ground
102 to 105	D5 to D2	I/O	External memory data input/output for D/A converter IC (SRAM)
106	VDDE	I	Power supply pin (+3.3 V)
107, 108	D1, D0	I/O	External memory data input/output for D/A converter IC (SRAM)
109, 110	A2, A1	O	External memory address signal output for D/A converter IC (SRAM)
111	VSS	—	Ground
112	A0	O	External memory address signal output for D/A converter IC (SRAM)
113	PM	I	PLL initialization signal input from SYSTEM CONTROL IC
114, 115	SDI3, SDI4	I	Not used (Open)
116	SYNC	I	Sync/async select signal input (L: sync, H: async) (Fixed at H)
117	TST2	I	Not used (Connect to ground)
118	GP11	I	Not used (Connect to ground)
119	TST3	I	Not used (Connect to ground)
120	VDDI	I	Power supply pin (+2.6 V)

• IC1101 MB90478PF-G-183-BND (SYSTEM CONTROL) (DIGITAL Board (3/3))

Pin No.	Pin Name	I/O	Pin Description
1	DATAO	I	Serial data line signal input from DIR IC
2	GP9	I	GP9 signal input from DSP IC
3	BST	O	Boot stop control signal output for DSP IC
4	HCS	O	Chip select signal output for DSP IC
5	HACN	I	Acknowledge signal input from DSP IC
6	XRST	O	Reset signal output for DSP IC
7	PM	O	PLL control signal output for DSP IC
8	GP12	O	GP12 signal output for DSP IC
9	AK5380_PDN	O	Power down signal output for ADC IC
10	AK4355_CSN	O	Chip select signal output for 6CH DAC IC
11	VSS	—	Ground
12	AK4355_PDN	O	Power down signal output for 6CH DAC IC
13	AK4381_PDN	O	Power down signal output for 2CH DAC IC
14	AK4381_CSN	O	Chip select signal output for 2CH DAC IC
15	AK4355_CLK	O	Clock signal output for 2CH/6CH DAC IC
16	IC_CLK (VOL_TUNER_TC9273)	O	Clock signal output for FUNCTION SELECT IC and tuner pack
17	IC_DATA (VOL_TUNER_TC9273)	O	Serial data signal output for FUNCTION SELECT IC and tuner pack
18	HDOUT	I	Serial data input from DSP IC
19	HDIN	O	Serial data output for DSP IC
20	HCLK	O	Serial data clock signal output for DSP IC
21	AK4355_CDT1	O	CDT1 signal output for 2CH/6CH DAC IC
22	VOL_LATCH	O	Latch signal output for FUNCTION SELECT IC
23	VCC5	—	Power supply pin (+3.3 V)
24	SYS_MUTE	O	System mute control signal output
25	ANA/DIG	O	Muting and error port signal output
26	FL_CLEAR	O	Not used (Open)
27	FLASH2	—	Flash programming signal output 2
28	FLASH1	—	Flash programming signal output 1
29	ENC_A	I	–/+ (cursor) encoder (+) signal input
30	ENC_B	I	–/+ (cursor) encoder (–) signal input
31, 32	F_A, F_B	—	Not used (Fixed at L)
33	SCL	O	Clock signal output for EEPROM IC
34	SDA	I/O	Serial data input/output for EEPROM IC
35	AVCC	—	Power supply pin (+3.3 V)
36	AVRH	—	Power supply pin (+3.3 V)
37	AVSS	—	Ground
38 to 40	A/D0 to A/D2	I	Key signal input (A/D port)
41	VERSION	I	Destination detection signal input (Fixed at L: US, Canadian model, H: Except for US, Canadian model)
42	VSS	—	Ground
43	RDS_SIG	I	RDS signal level input (AEP, UK model only)
44	MODEL	I	Model detection signal input
45	VOL_ENC (A)	I	Volume encoder (+) signal input
46	VOL_ENC (B)	I	Volume encoder (–) signal input
47	BLUE_LED	O	LED (MULTI CHANNEL DECODING) driver signal output
48	STOP	I	AC off detection signal input
49	MOD0	—	Selection of micon operation mode
50	MOD1	—	Not used (Connect to AVCC)
51	MOD2	—	Selection of micon operation mode
52	RDS_CLK	I	RDS data clock signal input (AEP, UK model only)

Pin No.	Pin Name	I/O	Pin Description
53	RDS_DATA	I	RDS data input (AEP, UK model only)
54	SIRCS	I	SIRCS signal input
55	HP_DETECT	I	Headphones detection signal input
56	POWER_KEY	I	Power key detection signal input
57	FL_LAT	O	Latch signal output for FL driver IC
58	POWER_RY	O	Power relay driver control signal output
59	FL_DATA	O	Serial data output for FL driver IC
60	FL_CLK	O	Clock signal output for FL driver IC
61	PROTECTOR	I	Protector detection signal input
62	HP_RY	O	Headphones relay driver control signal output
63	FUSE_DETECT	I	Fuse open detection signal input
64	A1_OUT	O	CTRL A1 II signal output (Except for AEP, UK model)
65	A1_IN	I	CTRL A1 II signal input (Except for AEP, UK model)
66	FRONT_RY	O	Front speaker A relay driver control signal output
67	SP_B_RY	O	Front speaker B relay driver control signal output
68	C/SB_RY	O	Center/Surround back speakers relay driver control signal output
69	REAR_RY	O	Surround speaker relay driver control signal output
70	SW_RY	O	Sub woofer relay driver control signal output
71	NC	—	Not used (Fixed at L)
72	BRIDGEABLE_RY	O	Bridgeable relay driver control signal output
73	D0	I	Tuner serial data input
74	SLATCH	O	Tuner latch signal output
75	TUNED	I	Tuned signal detection input
76	STEREO	I	Stereo signal detection input
77	RSTX	I	Reset signal input
78	MUTE	O	Tuner mute signal output
79	X1A	—	Not used (Open)
80	X0A	—	Not used (Connect to VSS)
81	VSS	—	Ground
82	X0	—	Clock signal input (16 MHz)
83	X1	—	Clock signal output (16 MHz)
84	VCC3	—	Power supply pin (+3.3 V)
85	GROUPING_SW	—	Not used (Open)
86 to 89	SW1 to SW4	O	Video select signal output
90	SELECT2	O	Digital input select 2 signal output
91	SELECT1	O	Digital input select 1 signal output
92	BST_SEL	O	96/24 signal output for DSP IC
93	XMODE	O	Xmode signal output for DIR IC
94	CKSEL1	O	Clock select signal output for DIR IC
95	CLK	O	Data clock signal output for DIR IC
96	CE	O	Latch signal output for DIR IC
97	DI	O	Data output for DIR IC
98	DO	I	Data input from DIR IC
99	ERROR	I	Error detection signal input from DIR IC
100	XSTATE	I	Xstate signal input from DIR IC

4-2. CIRCUIT BOARDS LOCATION

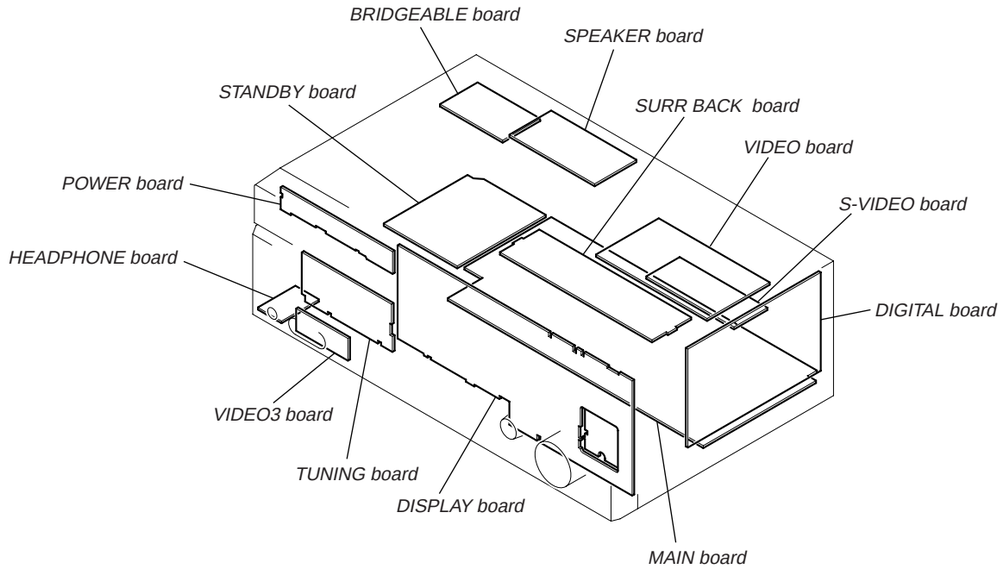

15

4-3. BLOCK DIAGRAM — TUNER/AUDIO SECTION —

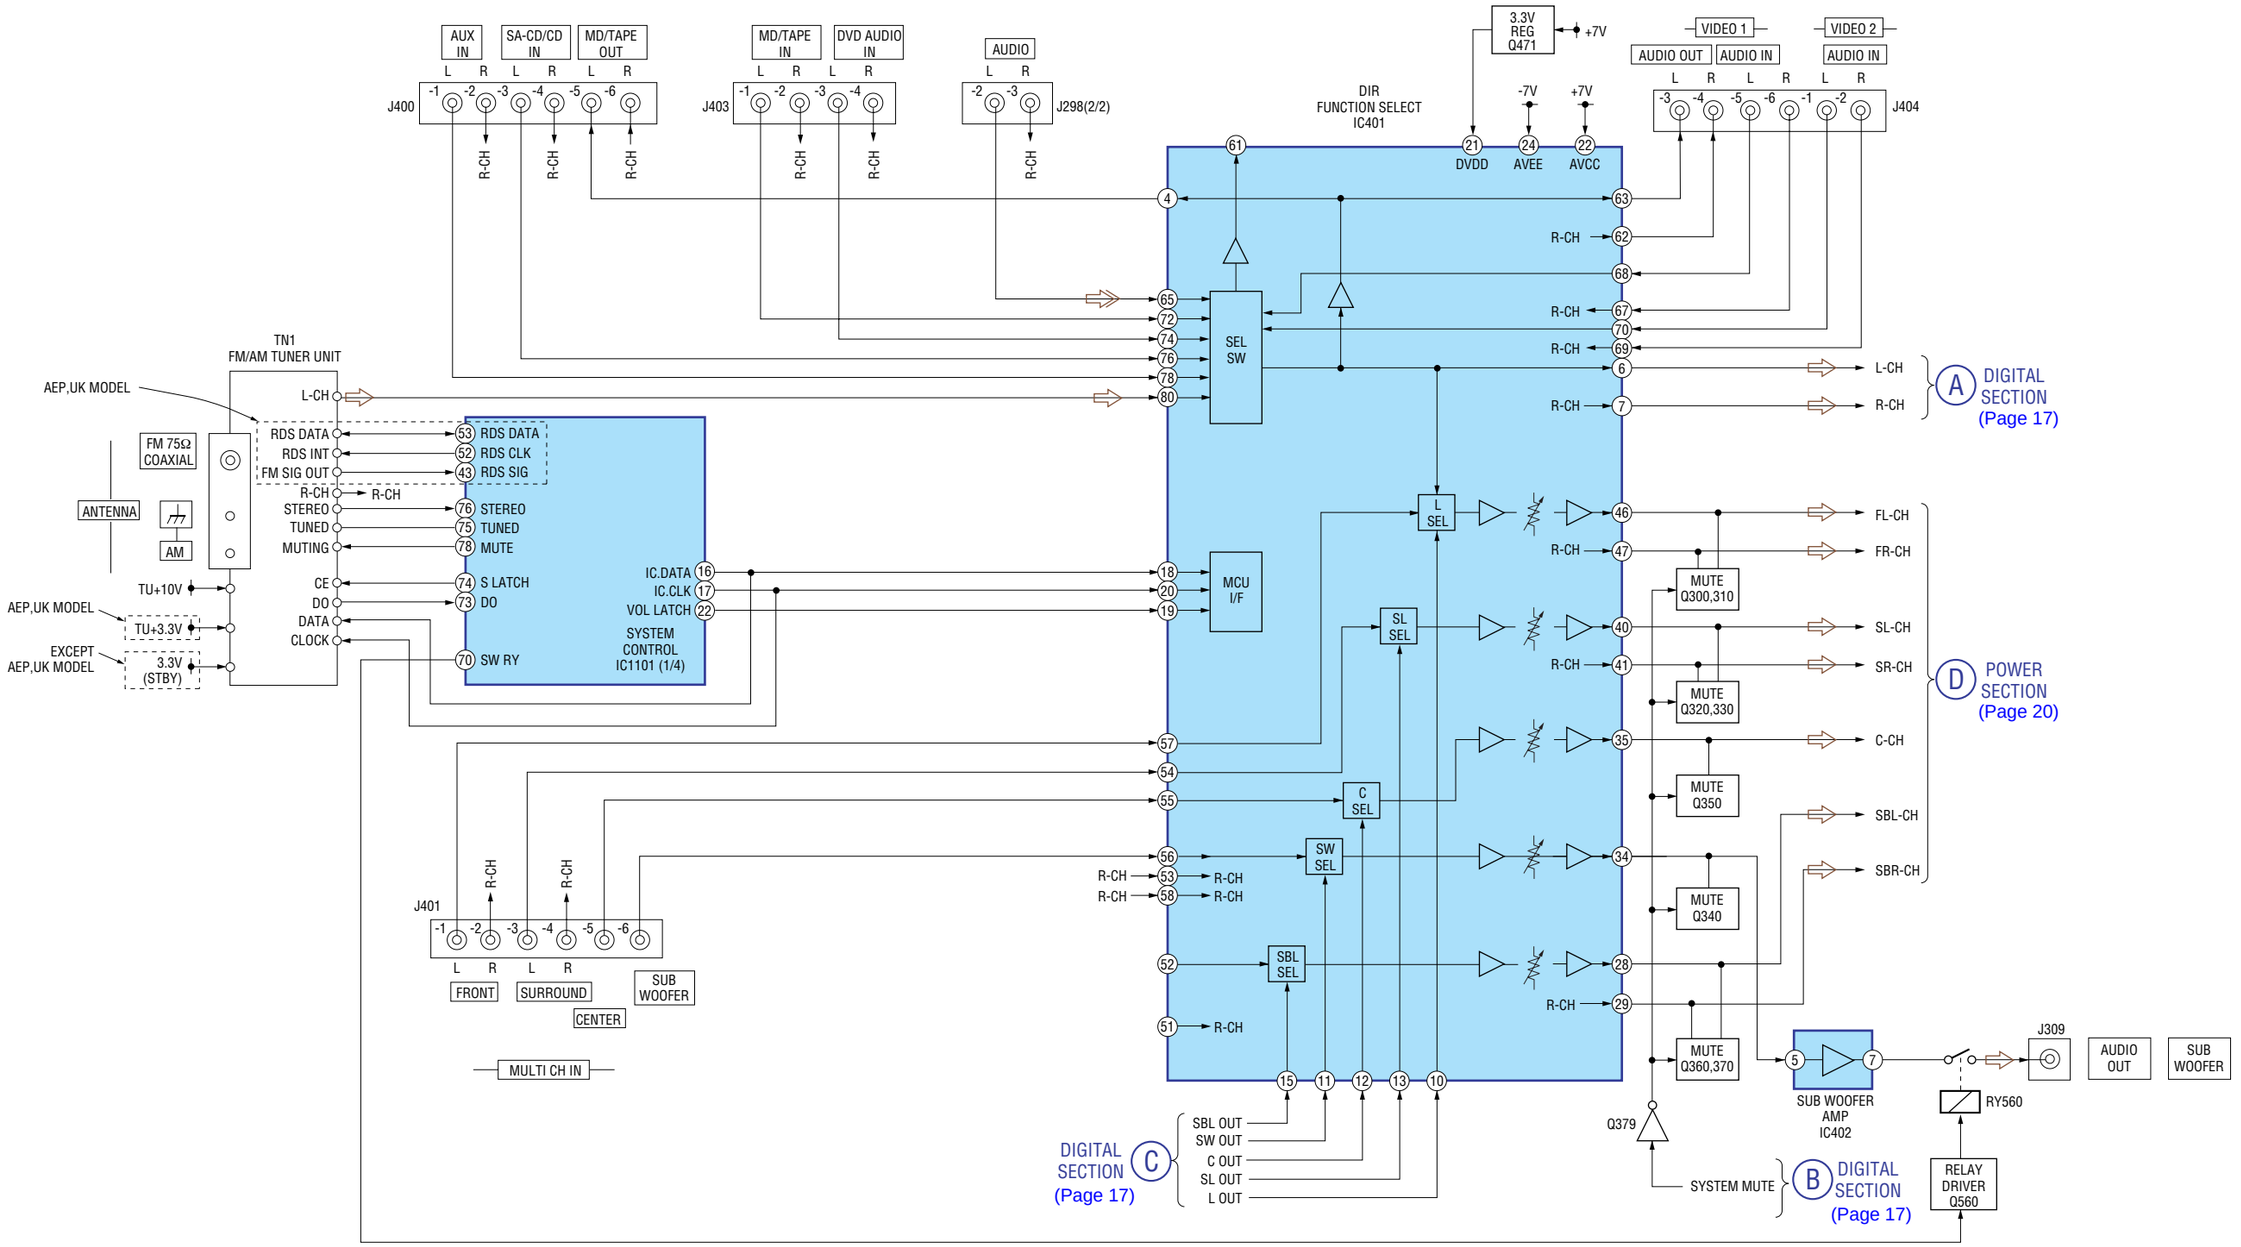

- Signal path
  - ⇨ : TUNER (FM/AM)
  - ⇨ : VIDEO (AUDIO)
- R-ch is omitted due to same as L-ch.

4-4. BLOCK DIAGRAM — DIGITAL SECTION —

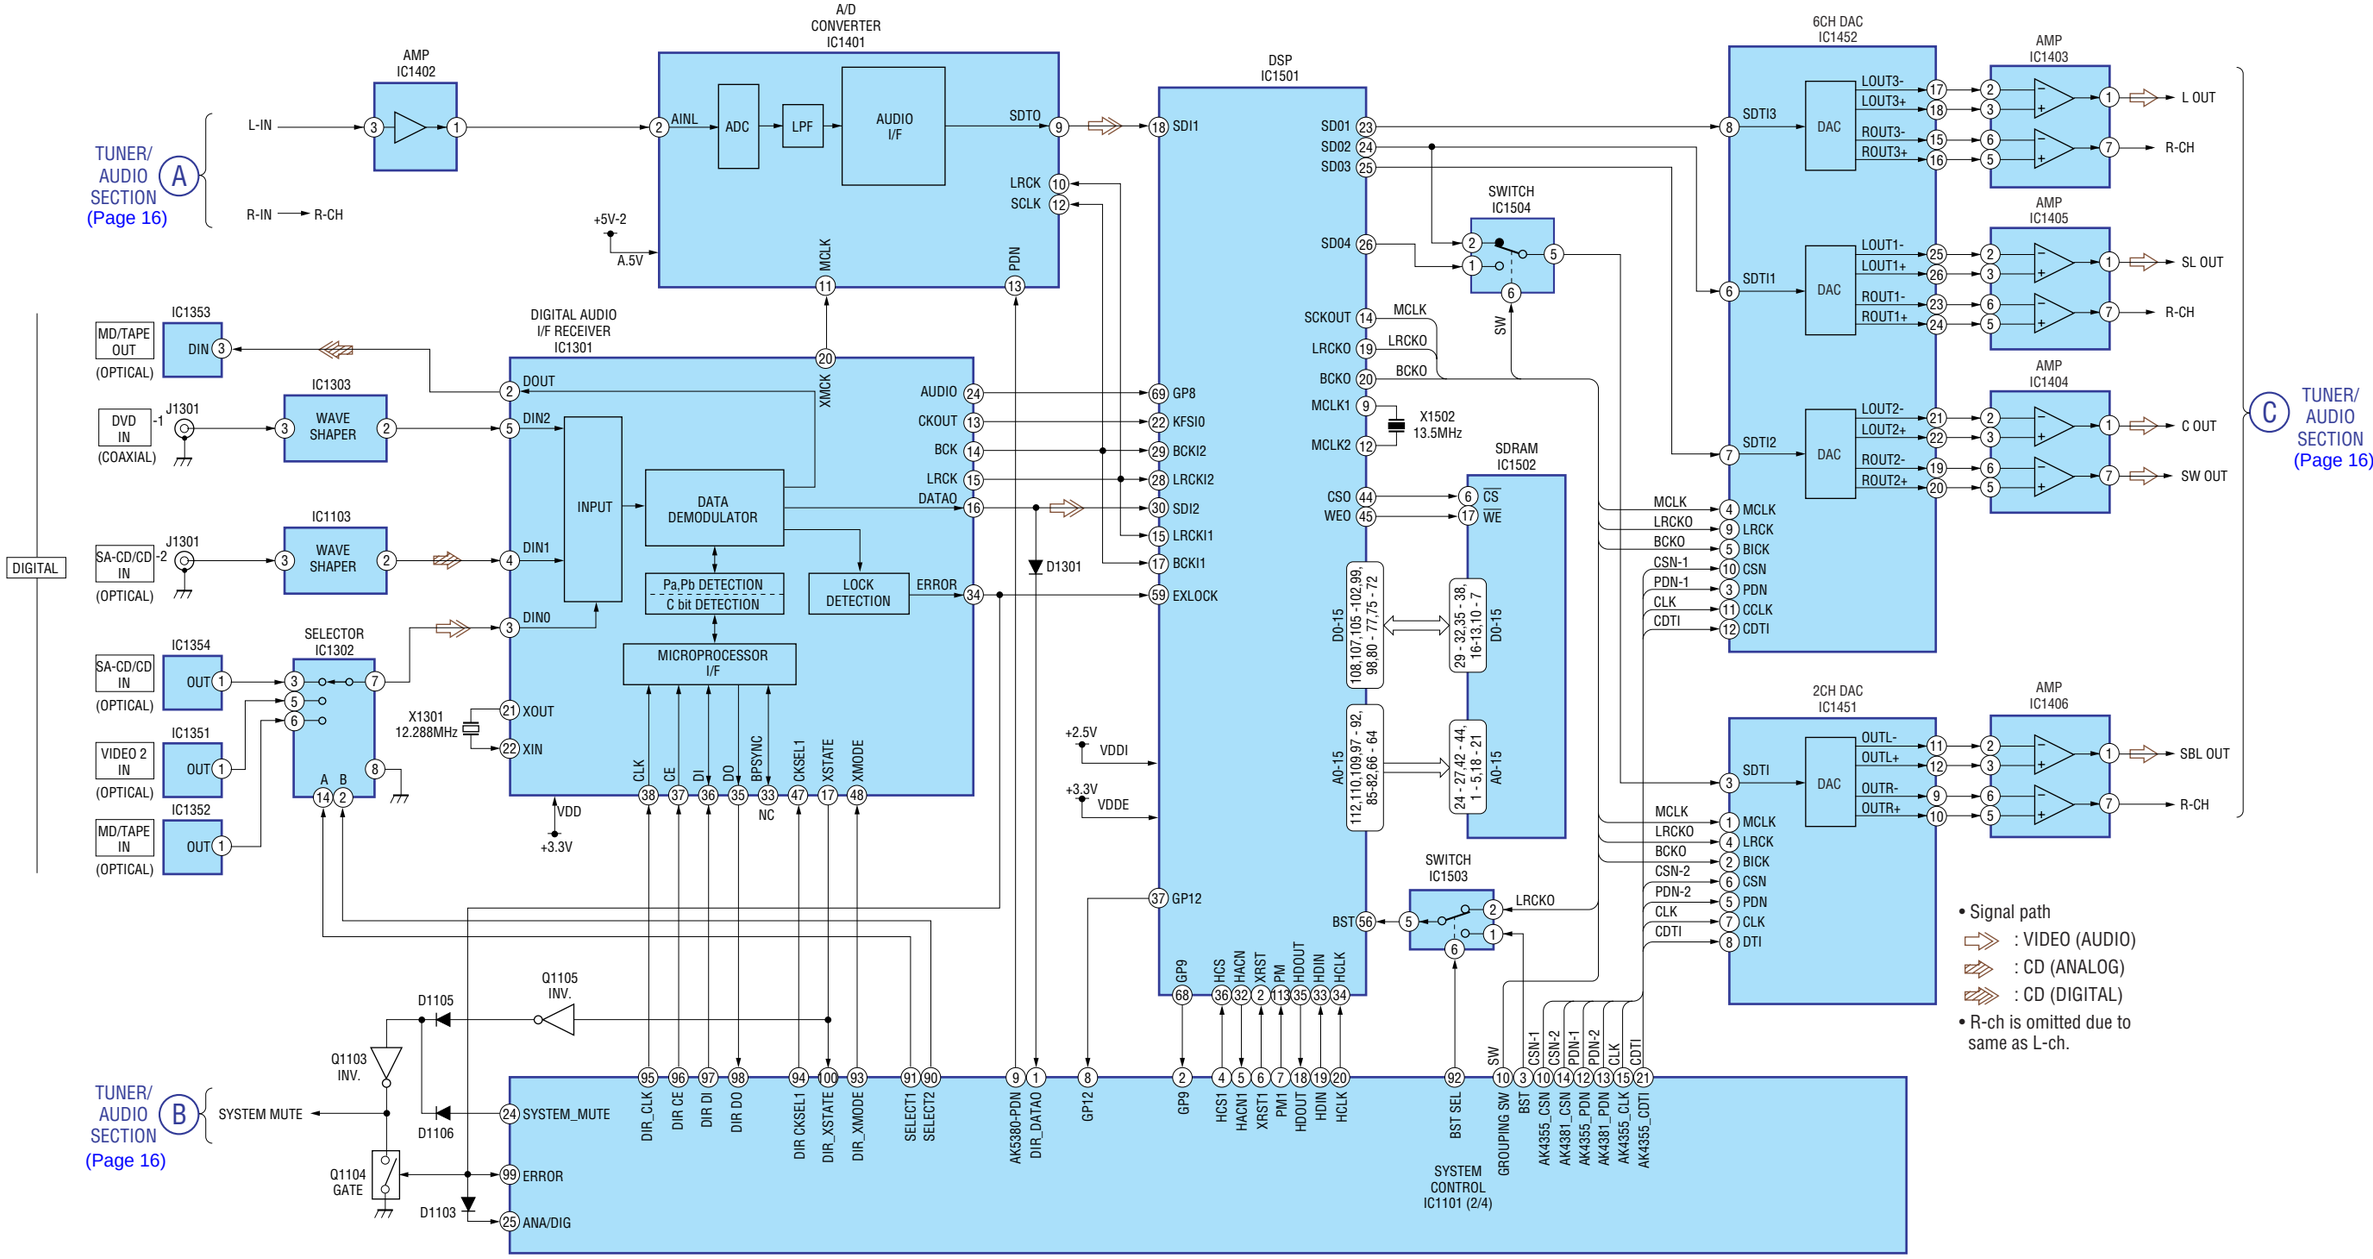

4-5. BLOCK DIAGRAM — VIDEO SECTION —

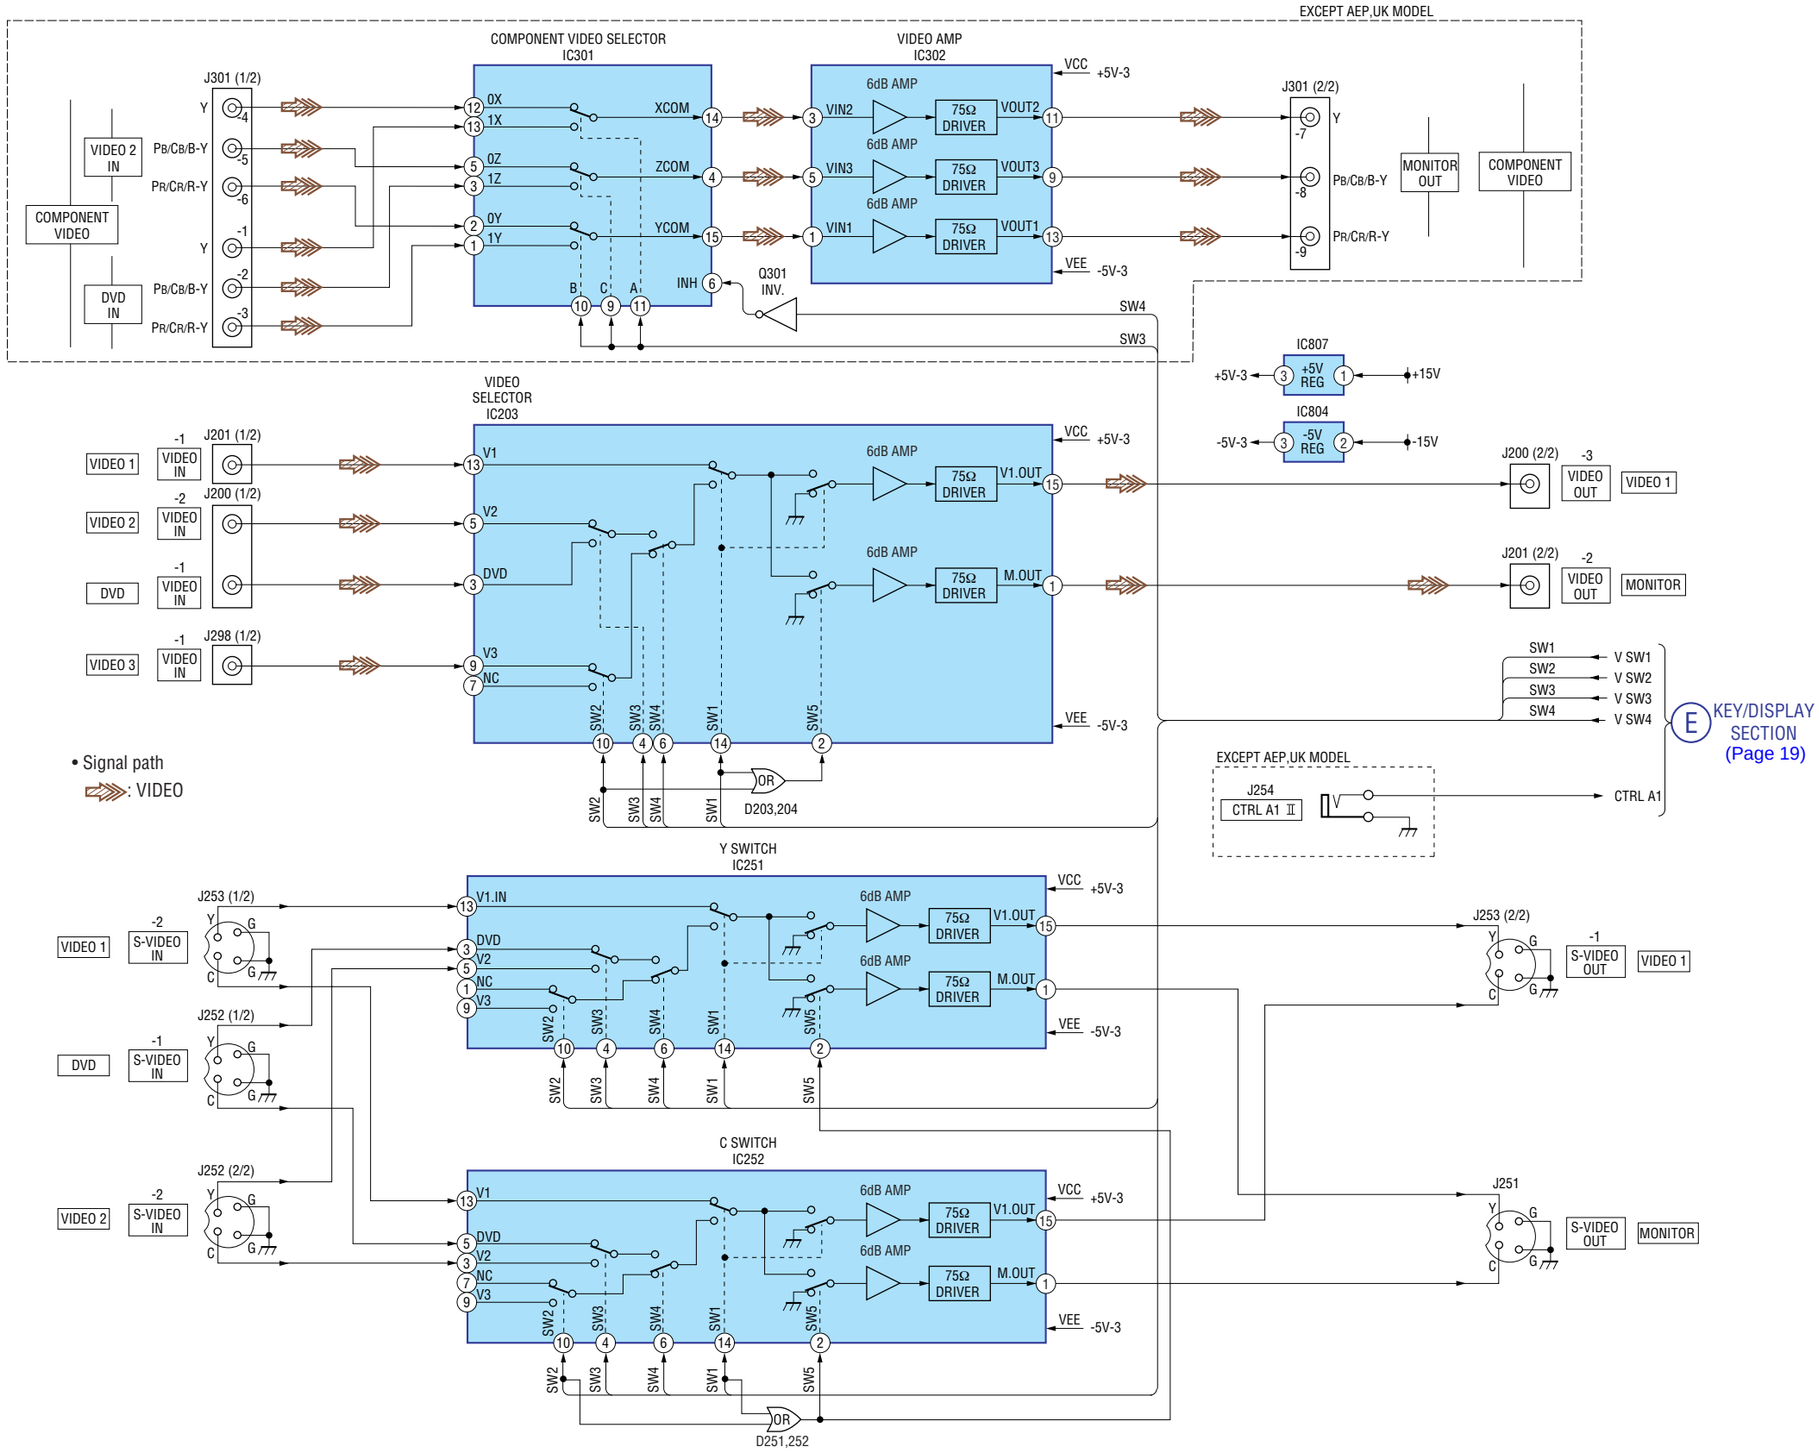

4-6. BLOCK DIAGRAM — KEY/DISPLAY SECTION —

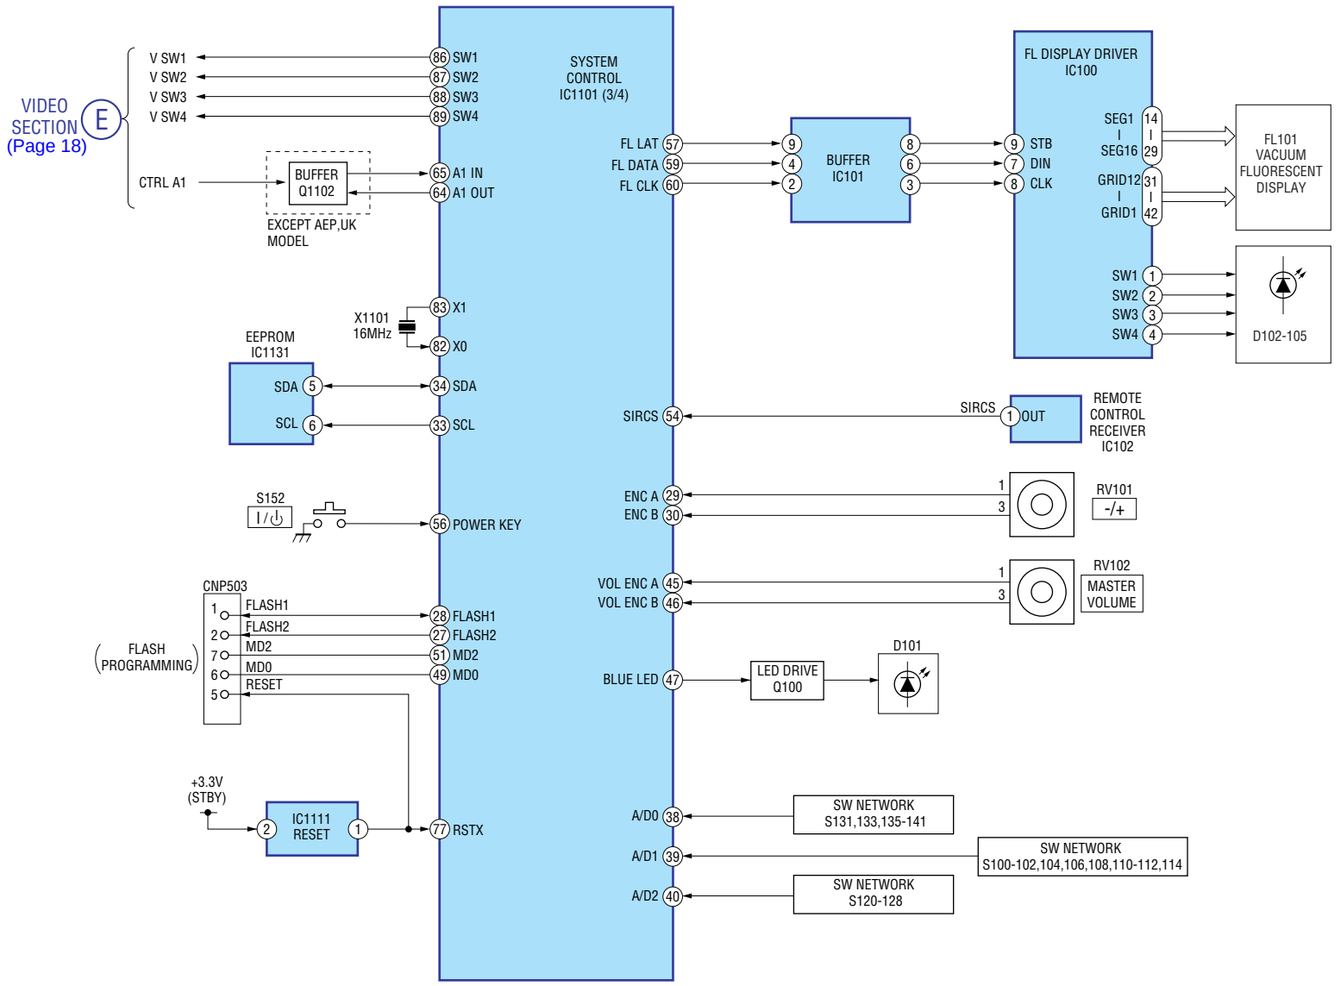

4-7. BLOCK DIAGRAM — POWER SECTION —

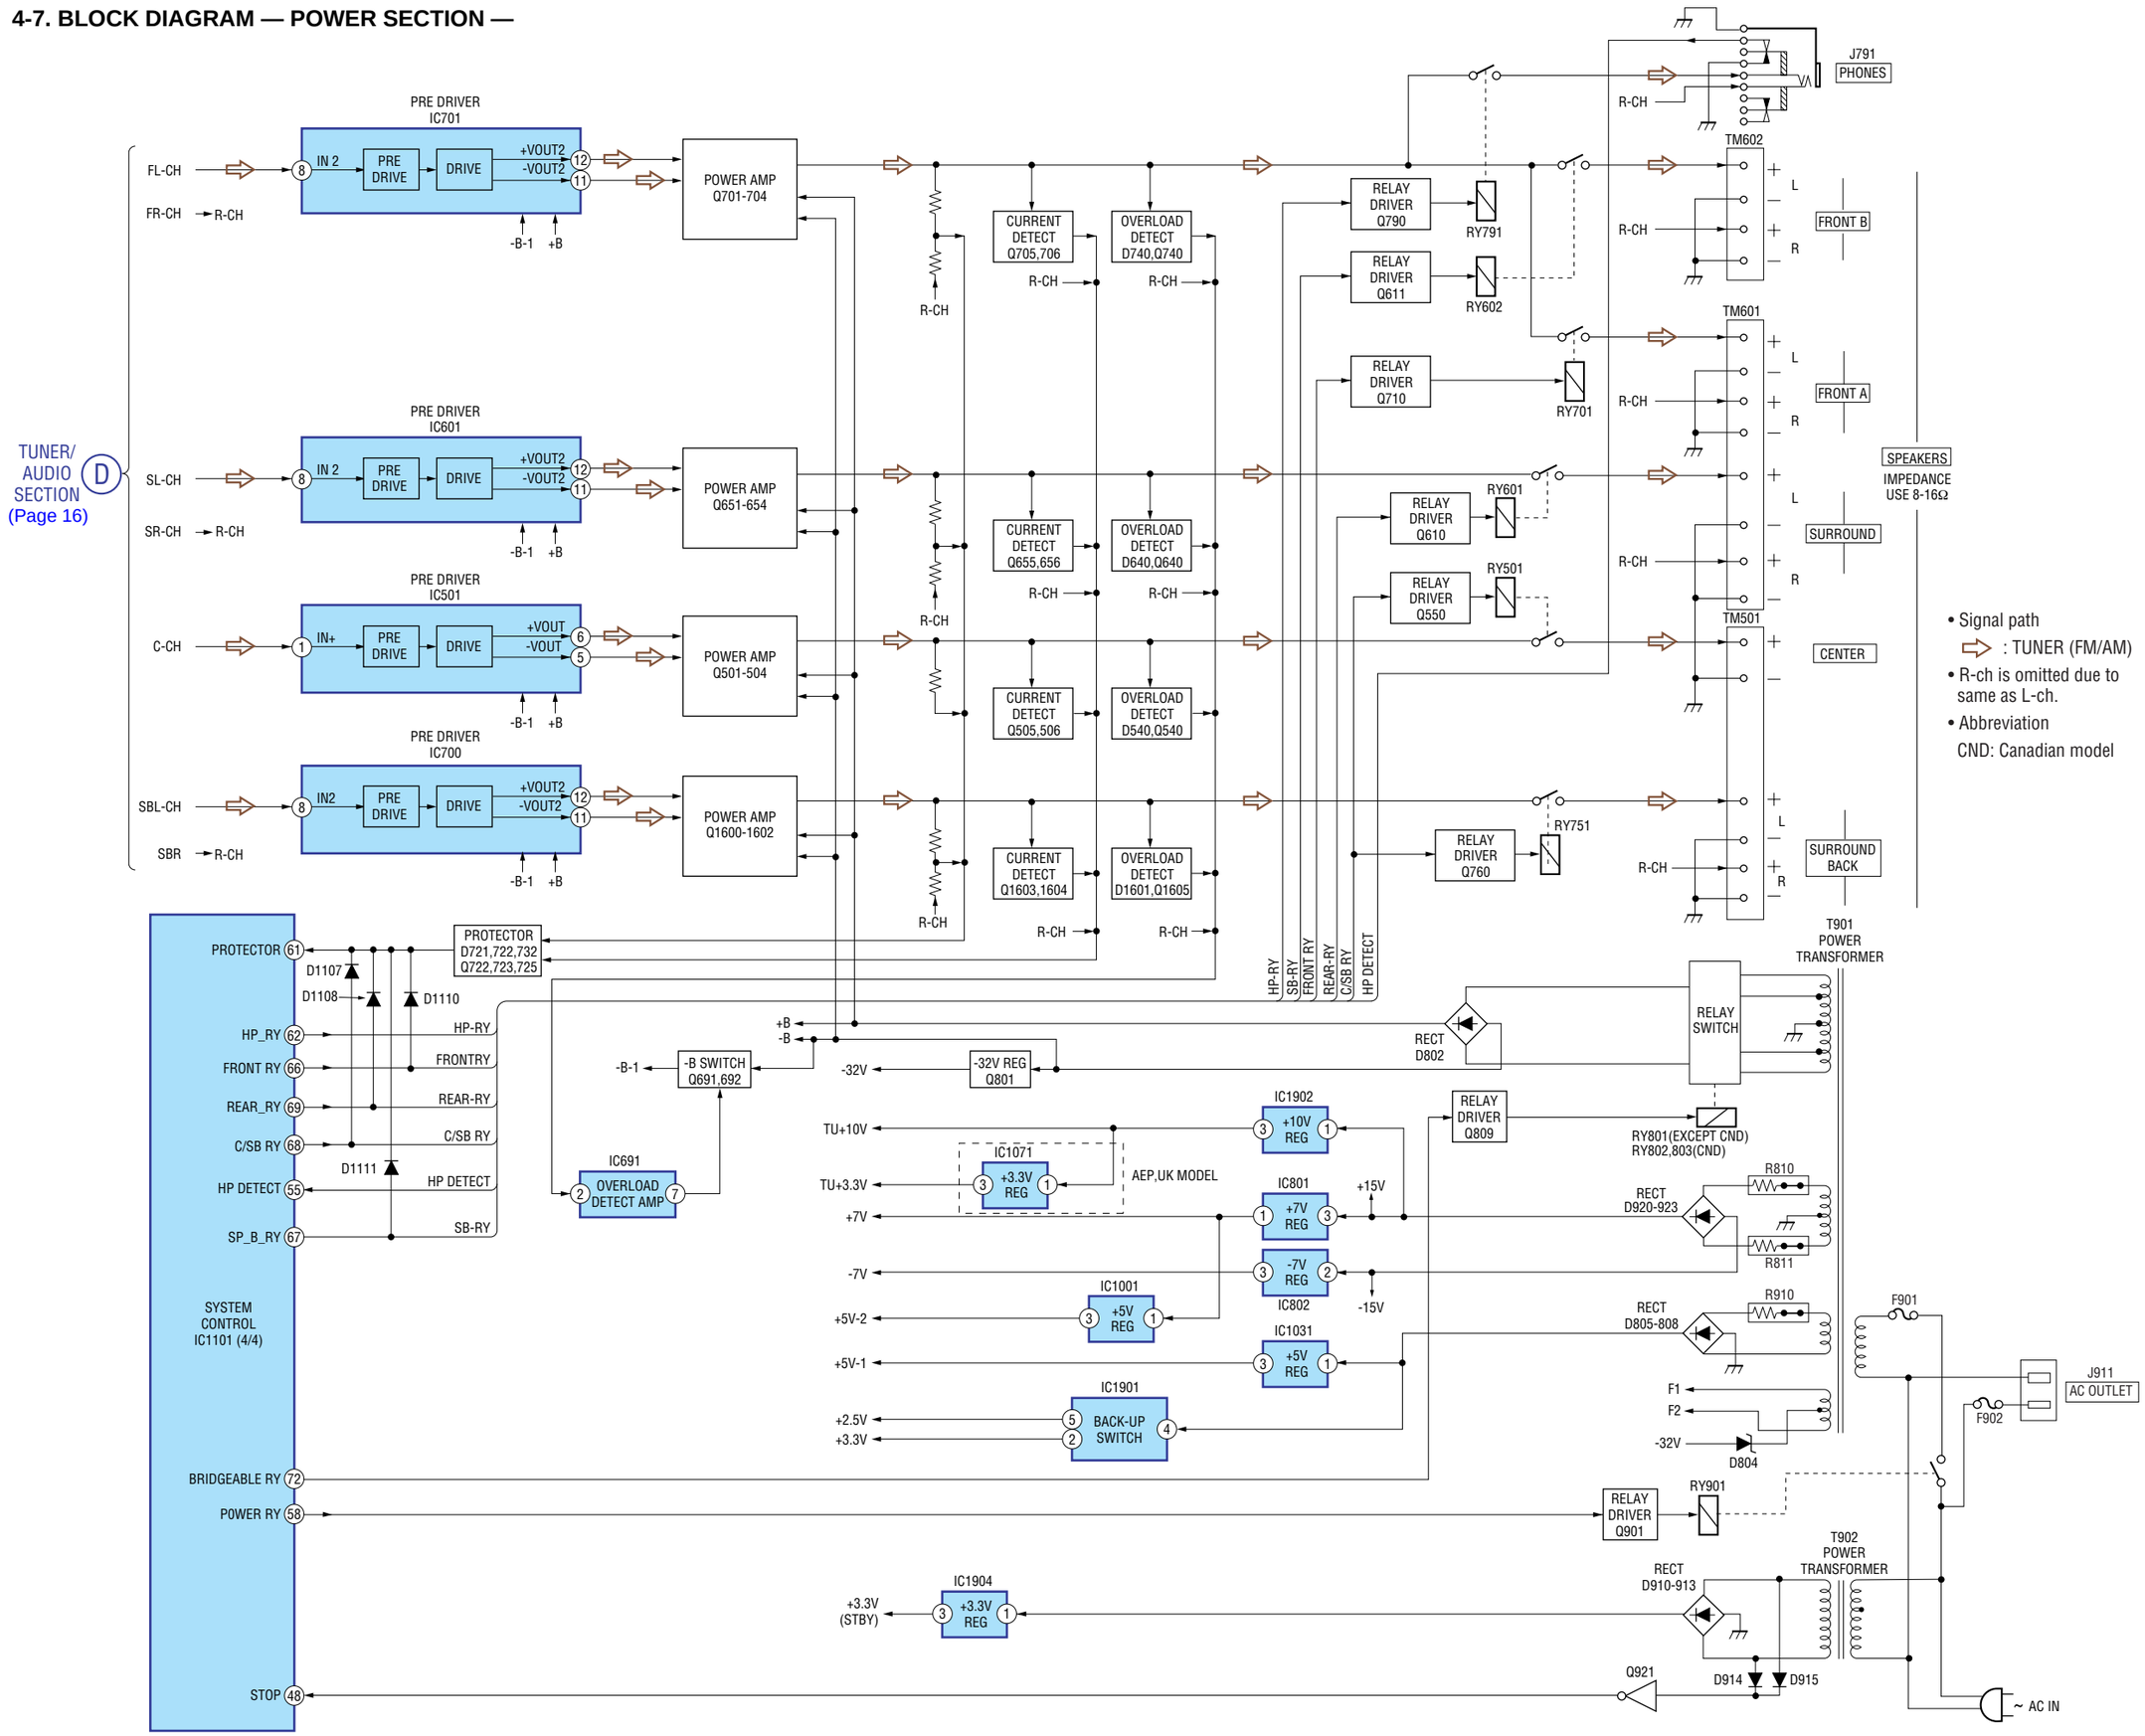

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS. (In addition to this, the necessary note is printed in each block.)

for schematic diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note:	**Note:**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B– Line.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  - : TUNER (FM/AM)
  - : VIDEO (AUDIO)
  - : VIDEO
  - : CD (ANALOG)
  - : CD (DIGITAL)
- Abbreviation
  CND : Canadian model.
  AUS : Australian model.
  SP : Singapore model.
  MY : Malaysia model.

for printed wiring boards:

- : parts extracted from the component side.
- △ : internal component.
- : Pattern from the side which enables seeing.

Caution:	
Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.

- Abbreviation
  CND : Canadian model.
  AUS : Australian model.
  SP : Singapore model.
  MY : Malaysia model.

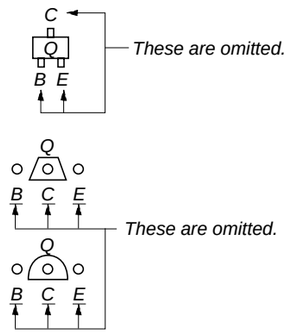

• Waveforms (DIGITAL Board)

1 1V/DIV 50nsec/DIV
3.8Vp-p
12.288MHz
IC1301 13 (CKOUT)

2 1V/DIV 0.2μsec/DIV
3.2Vp-p
3.07MHz
IC1301 14 (BCK)

3 1V/DIV 50nsec/DIV
3.5Vp-p
12.288MHz
IC1301 21 (XOUT)

4 1V/DIV 50nsec/DIV
2.2Vp-p
13.5MHz
IC1501 9 (MCLK1)

5 1V/DIV 50nsec/DIV
3.5Vp-p
13.5MHz
IC1501 12 (MCLK2)

6 1V/DIV 50nsec/DIV
3.8Vp-p
12.288MHz
IC1501 14 (SCKOUT)

7 1V/DIV 50nsec/DIV
2.1Vp-p
16MHz
IC1101 83 (X1)

4-8. PRINTED WIRING BOARDS — MAIN SECTION — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

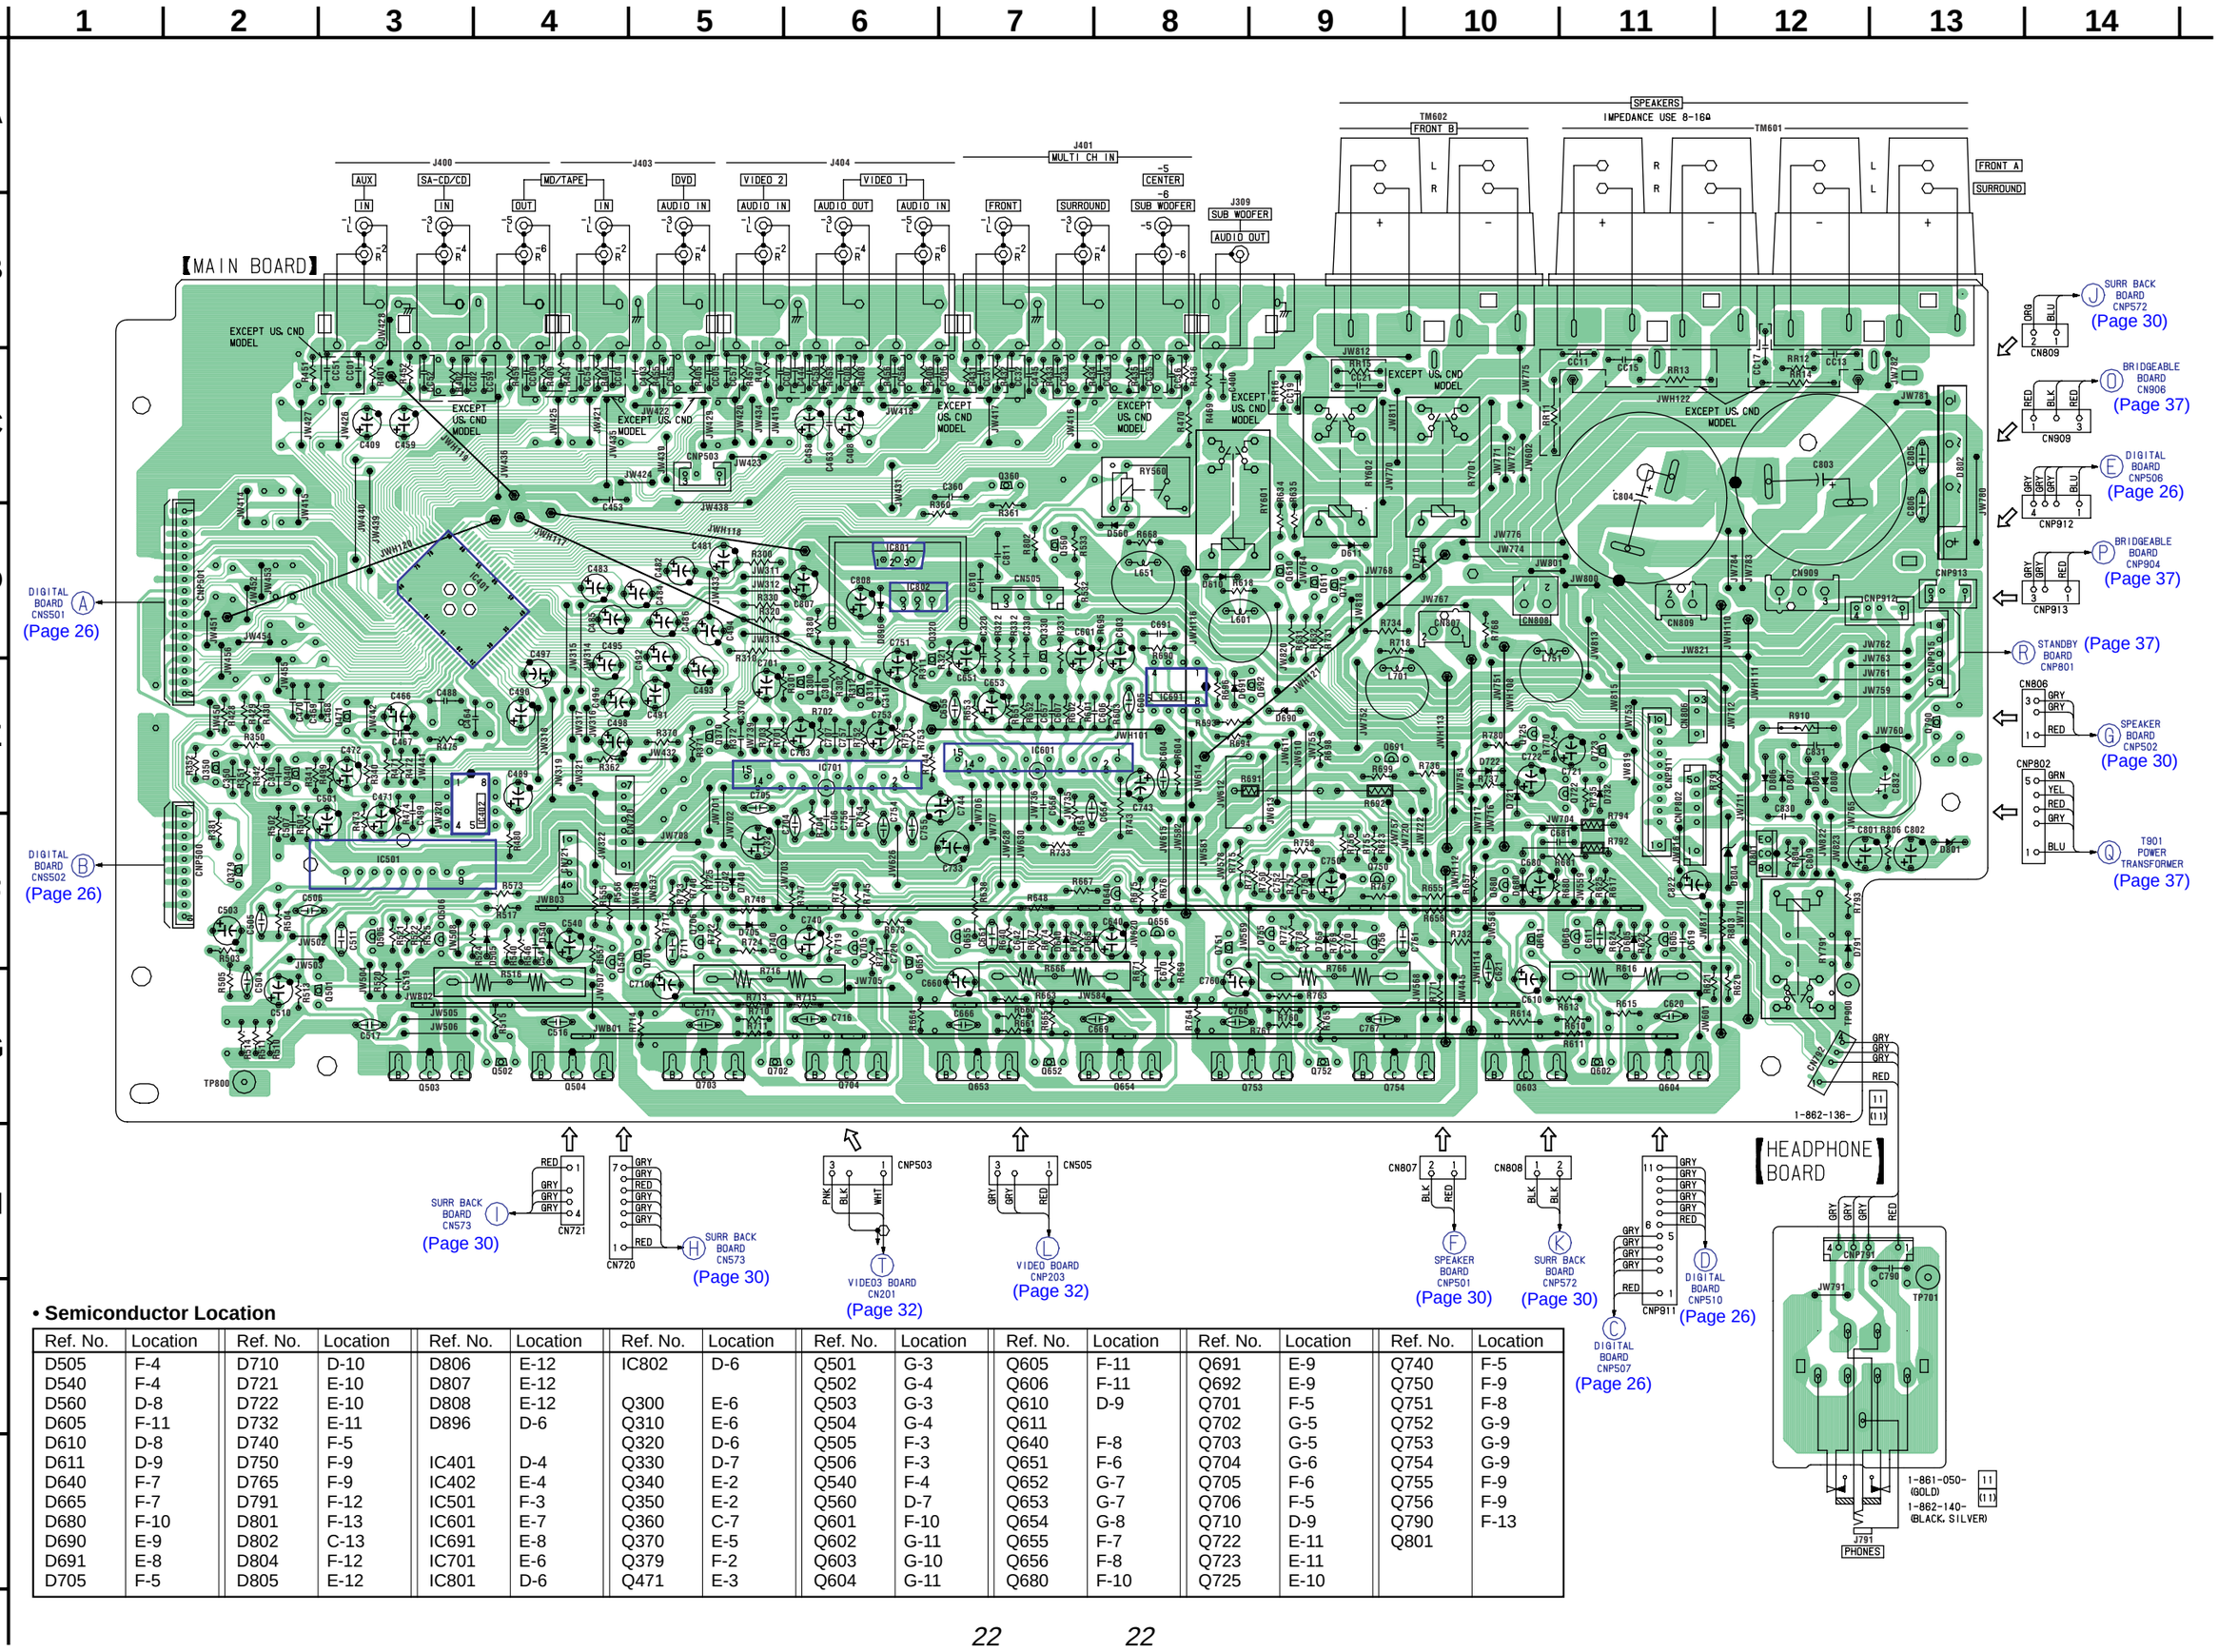
【MAIN BOARD】
SPEAKERS
IMPEDANCE USE 8-16Ω
TM602 FRONT B
TM601
FRONT A
SURROUND
J400 AUX IN
J400 SA-CD/CD IN
J403 MD/TAPE OUT
J403 IN
J404 DVD AUDIO IN
J404 VIDEO 2 AUDIO IN
J404 VIDEO 1 AUDIO OUT
J404 AUDIO IN
J401 MULTI CH IN FRONT
J401 SURROUND
J401 -5 CENTER -6 SUB WOOFER
J309 SUB WOOFER AUDIO OUT
EXCEPT US, CND MODEL
DIGITAL BOARD CNS501 (A) (Page 26)
DIGITAL BOARD CNS502 (B) (Page 26)
SURR BACK BOARD CN573 (I) (Page 30)
SURR BACK BOARD CN573 (H) (Page 30)
VIDEO3 BOARD CN201 (T) (Page 32)
VIDEO BOARD CNP203 (L) (Page 32)
SPEAKER BOARD CNP501 (F) (Page 30)
SURR BACK BOARD CN572 (K) (Page 30)
DIGITAL BOARD CNP510 (D) (Page 26)
DIGITAL BOARD CNP507 (C) (Page 26)
SURR BACK BOARD CNP572 (J) (Page 30)
BRIDGEABLE BOARD CN906 (O) (Page 37)
DIGITAL BOARD CNP506 (E) (Page 26)
BRIDGEABLE BOARD CNP904 (P) (Page 37)
STANDBY BOARD CNP801 (R) (Page 37)
SPEAKER BOARD CNP502 (G) (Page 30)
T901 POWER TRANSFORMER (Q) (Page 37)
【HEADPHONE BOARD】
1-862-136-
1-861-050- (GOLD)
1-862-140- (BLACK, SILVER)
PHONES

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D505	F-4	D710	D-10	D806	E-12	IC802	D-6	Q501	G-3	Q605	F-11	Q691	E-9	Q740	F-5
D540	F-4	D721	E-10	D807	E-12			Q502	G-4	Q606	F-11	Q692	E-9	Q750	F-9
D560	D-8	D722	E-10	D808	E-12	Q300	E-6	Q503	G-3	Q610	D-9	Q701	F-5	Q751	F-8
D605	F-11	D732	E-11	D896	D-6	Q310	E-6	Q504	G-4	Q611		Q702	G-5	Q752	G-9
D610	D-8	D740	F-5			Q320	D-6	Q505	F-3	Q640	F-8	Q703	G-5	Q753	G-9
D611	D-9	D750	F-9	IC401	D-4	Q330	D-7	Q506	F-3	Q651	F-6	Q704	G-6	Q754	G-9
D640	F-7	D765	F-9	IC402	E-4	Q340	E-2	Q540	F-4	Q652	G-7	Q705	F-6	Q755	F-9
D665	F-7	D791	F-12	IC501	F-3	Q350	E-2	Q560	D-7	Q653	G-7	Q706	F-5	Q756	F-9
D680	F-10	D801	F-13	IC601	E-7	Q360	C-7	Q601	F-10	Q654	G-8	Q710	D-9	Q790	F-13
D690	E-9	D802	C-13	IC691	E-8	Q370	E-5	Q602	G-11	Q655	F-7	Q722	E-11	Q801	
D691	E-8	D804	F-12	IC701	E-6	Q379	F-2	Q603	G-10	Q656	F-8	Q723	E-11		
D705	F-5	D805	E-12	IC801	D-6	Q471	E-3	Q604	G-11	Q680	F-10	Q725	E-10		

4-9. SCHEMATIC DIAGRAM — MAIN SECTION (1/2) — • Refer to page 21 for Common Note on Schematic Diagram.

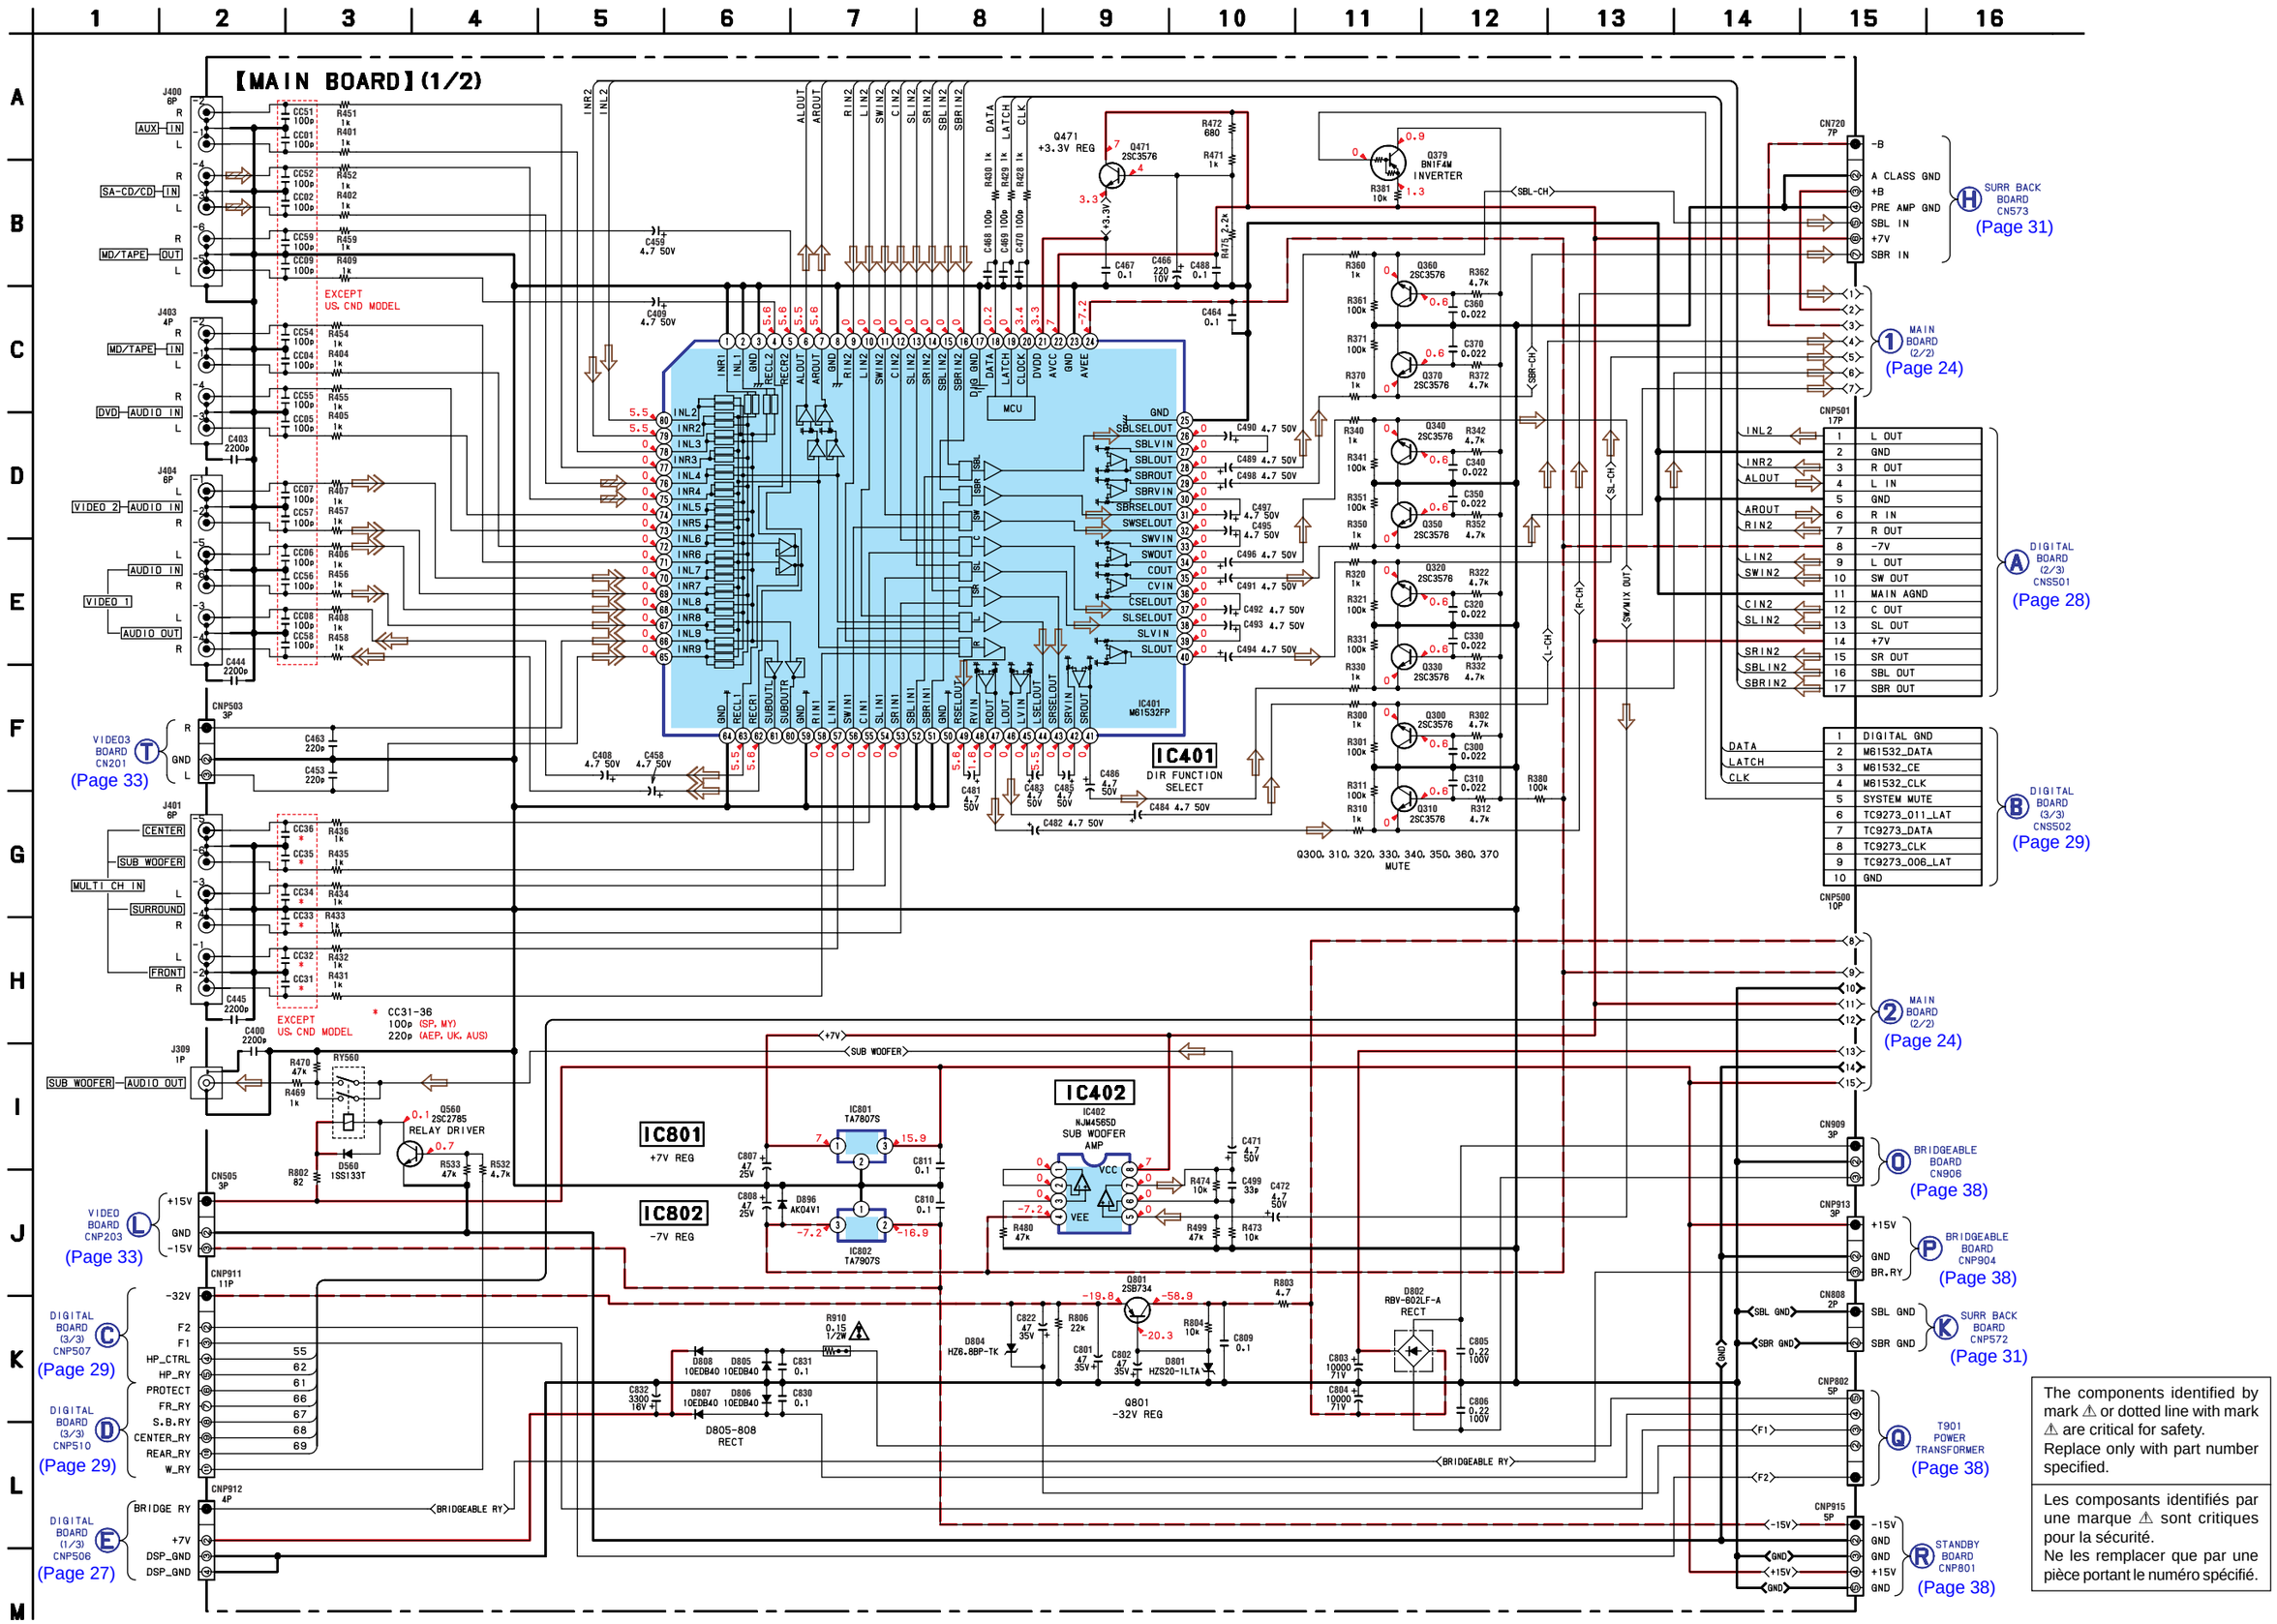

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-10. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 21 for Common Note on Schematic Diagram and page 39 for IC Block Diagrams.

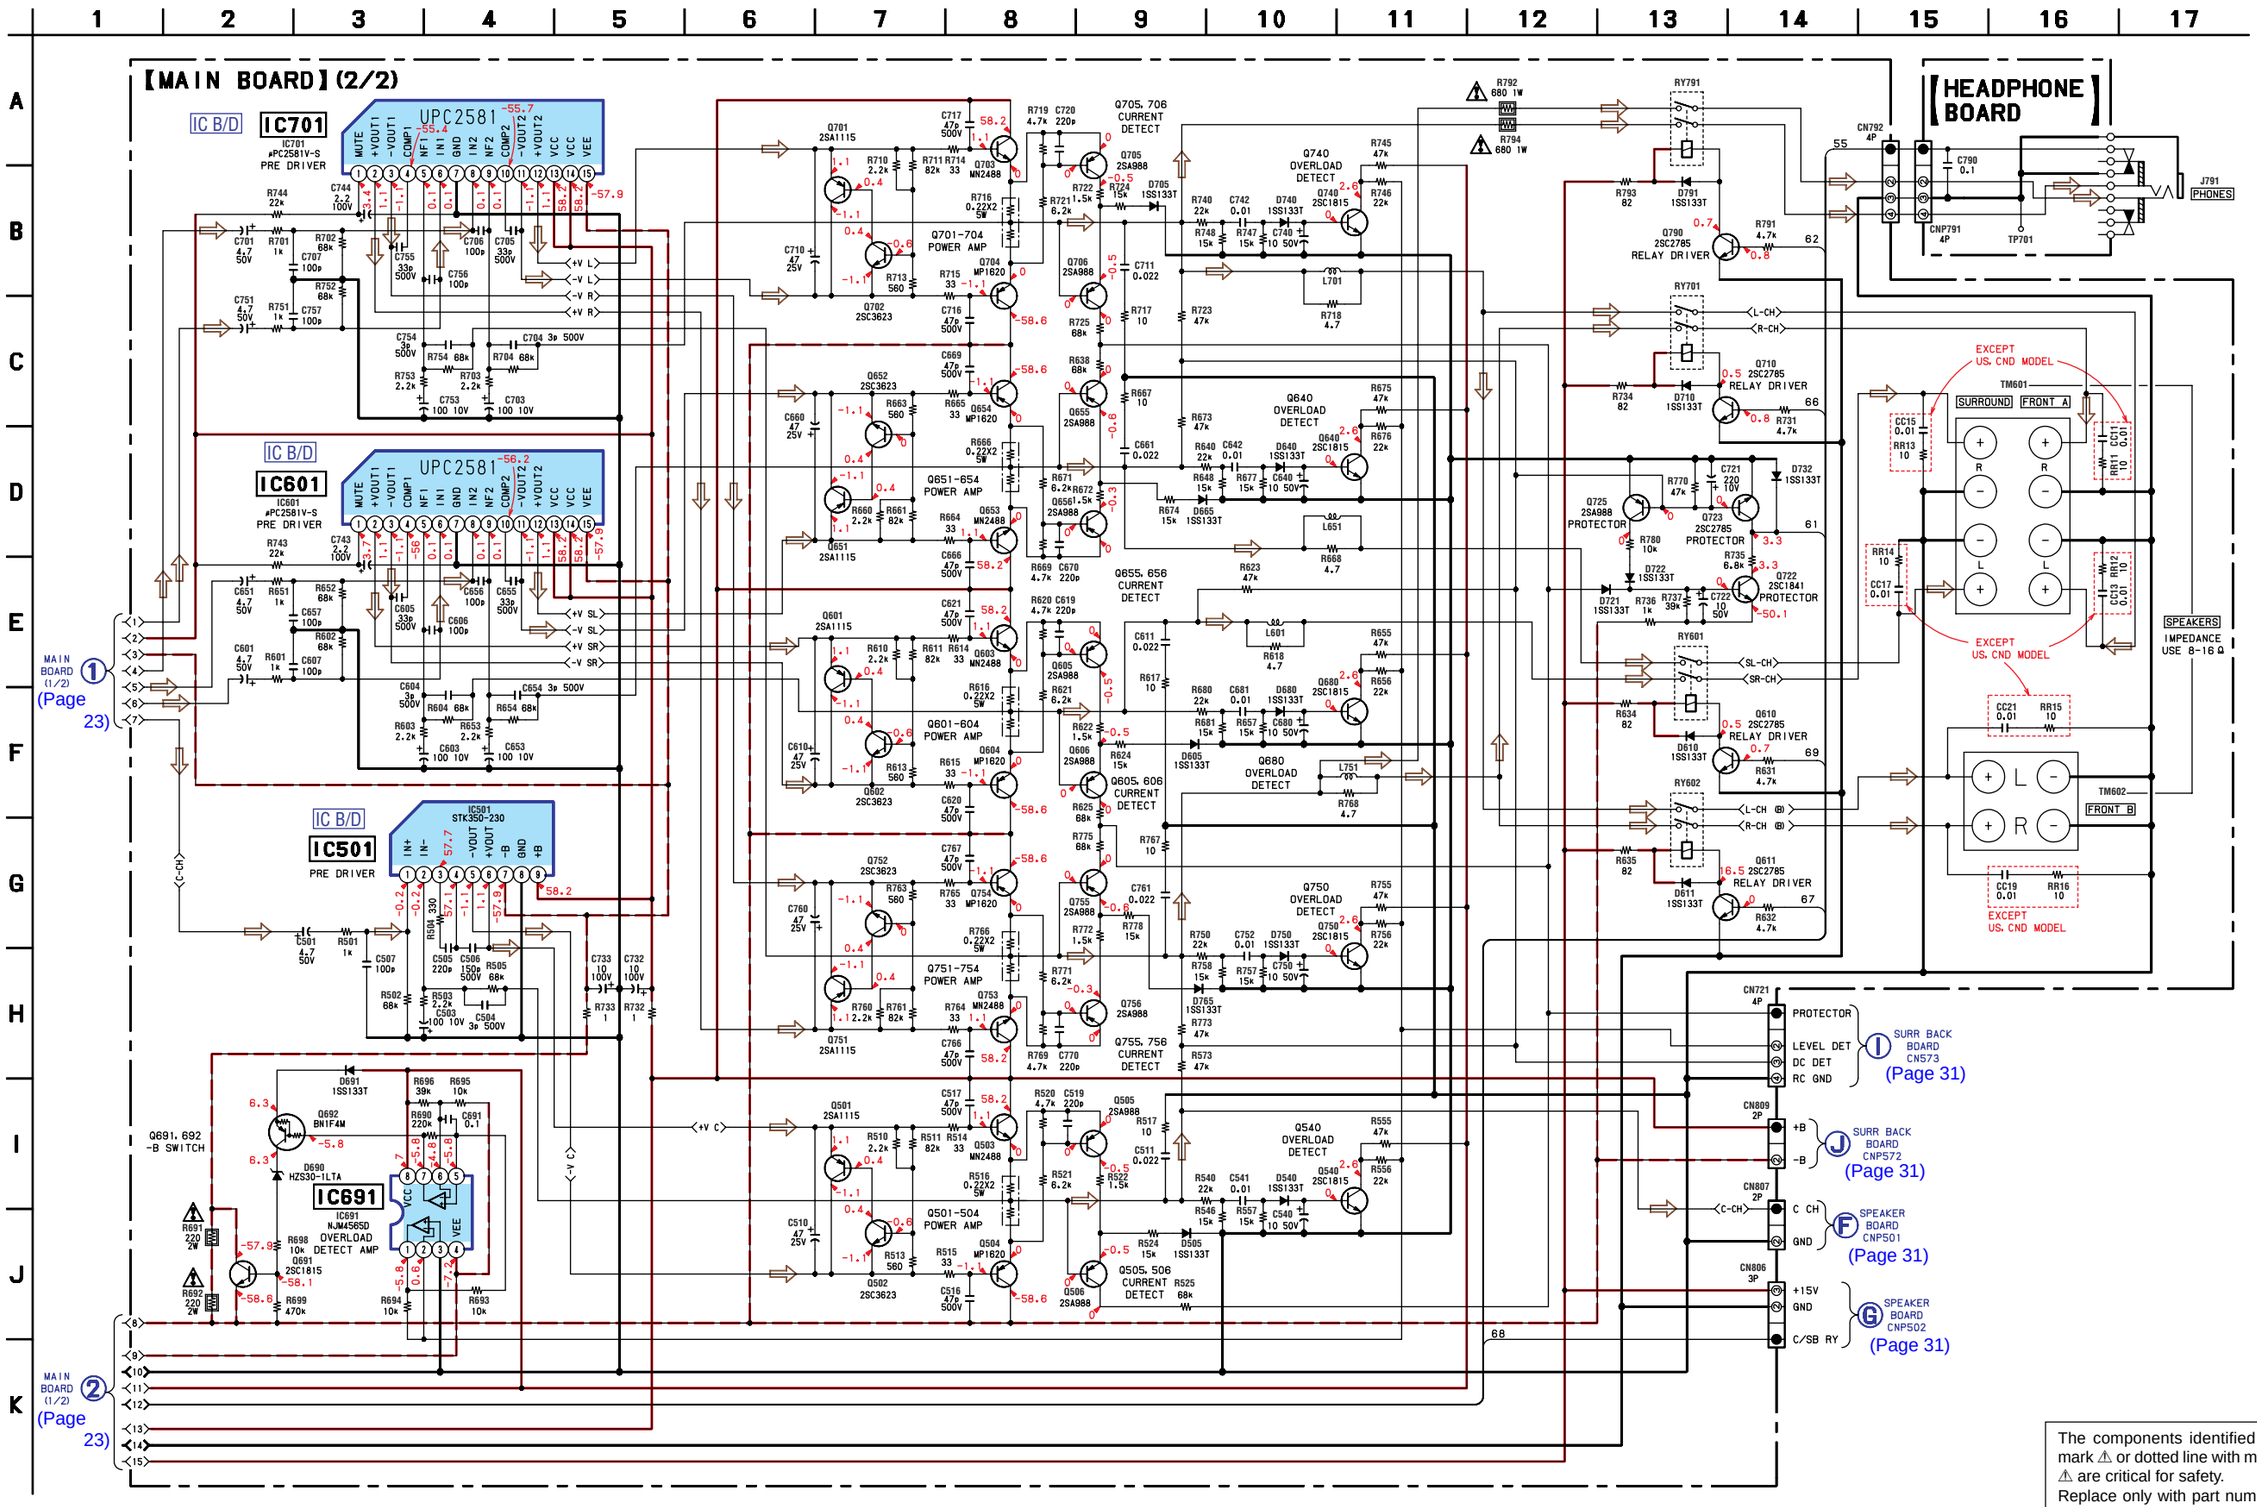

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-11. PRINTED WIRING BOARD — DIGITAL SECTION (1/2) — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

【DIGITAL BOARD】(SIDE A)

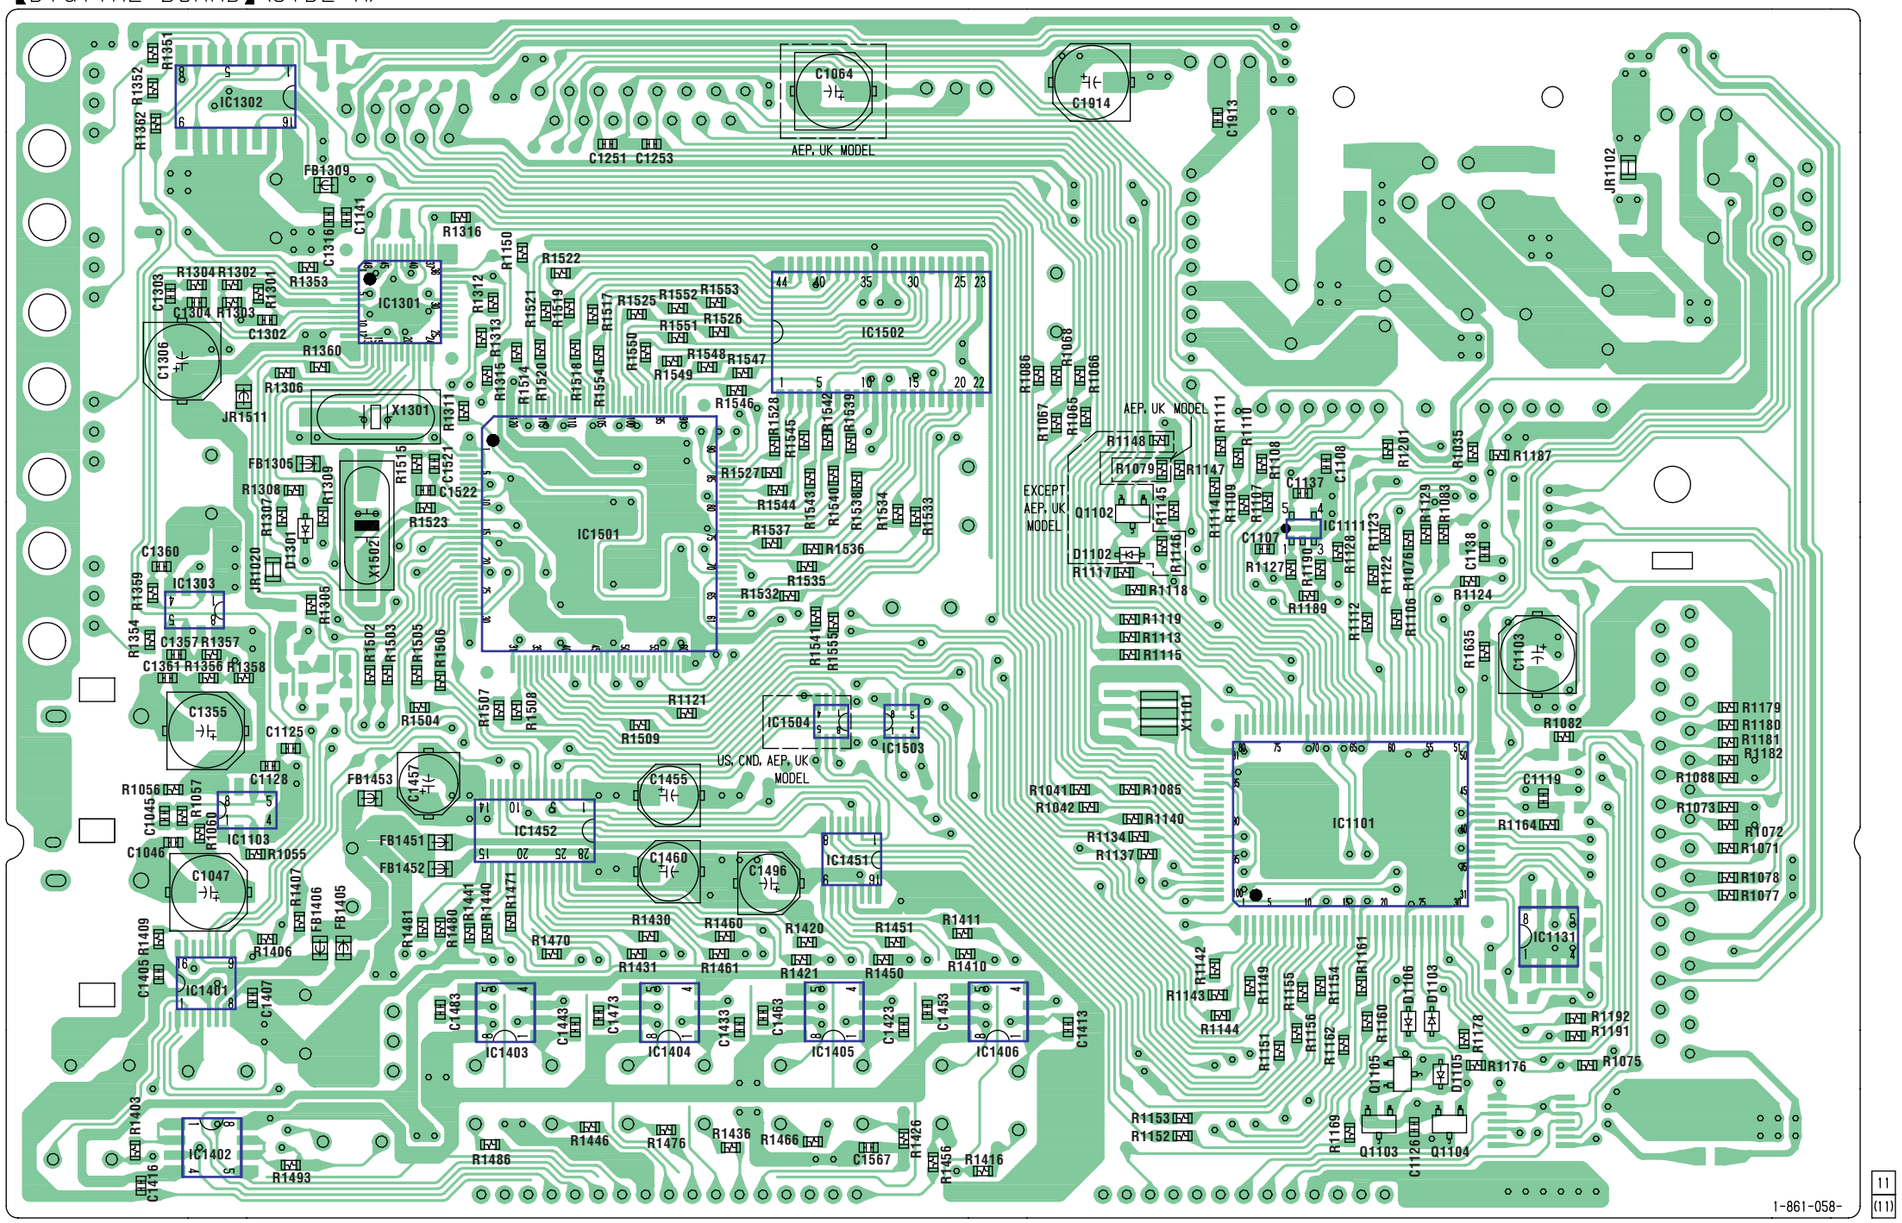

• **Semiconductor Location (Side A)**

Ref. No.	Location
(D1102)	F-6
D1103	H-4
D1105	I-4
D1106	H-4
D1301	F-11
IC1101	G-5
IC1103	F-12
IC1111	F-5
IC1131	H-4
IC1301	D-11
IC1302	C-12
IC1303	F-12
IC1401	I-12
IC1402	J-12
IC1403	I-10
IC1404	I-9
IC1405	I-8
IC1406	I-7
IC1451	H-8
IC1452	H-10
IC1501	F-9
IC1502	D-8
IC1503	G-8
<IC1504>	G-8
(Q1102)	F-6
Q1103	I-5
Q1104	I-4
Q1105	I-5

( ) : Except AEP, UK model
< > : US, Canadian, AEP, UK model only

4-12. PRINTED WIRING BOARD — DIGITAL SECTION (2/2) — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

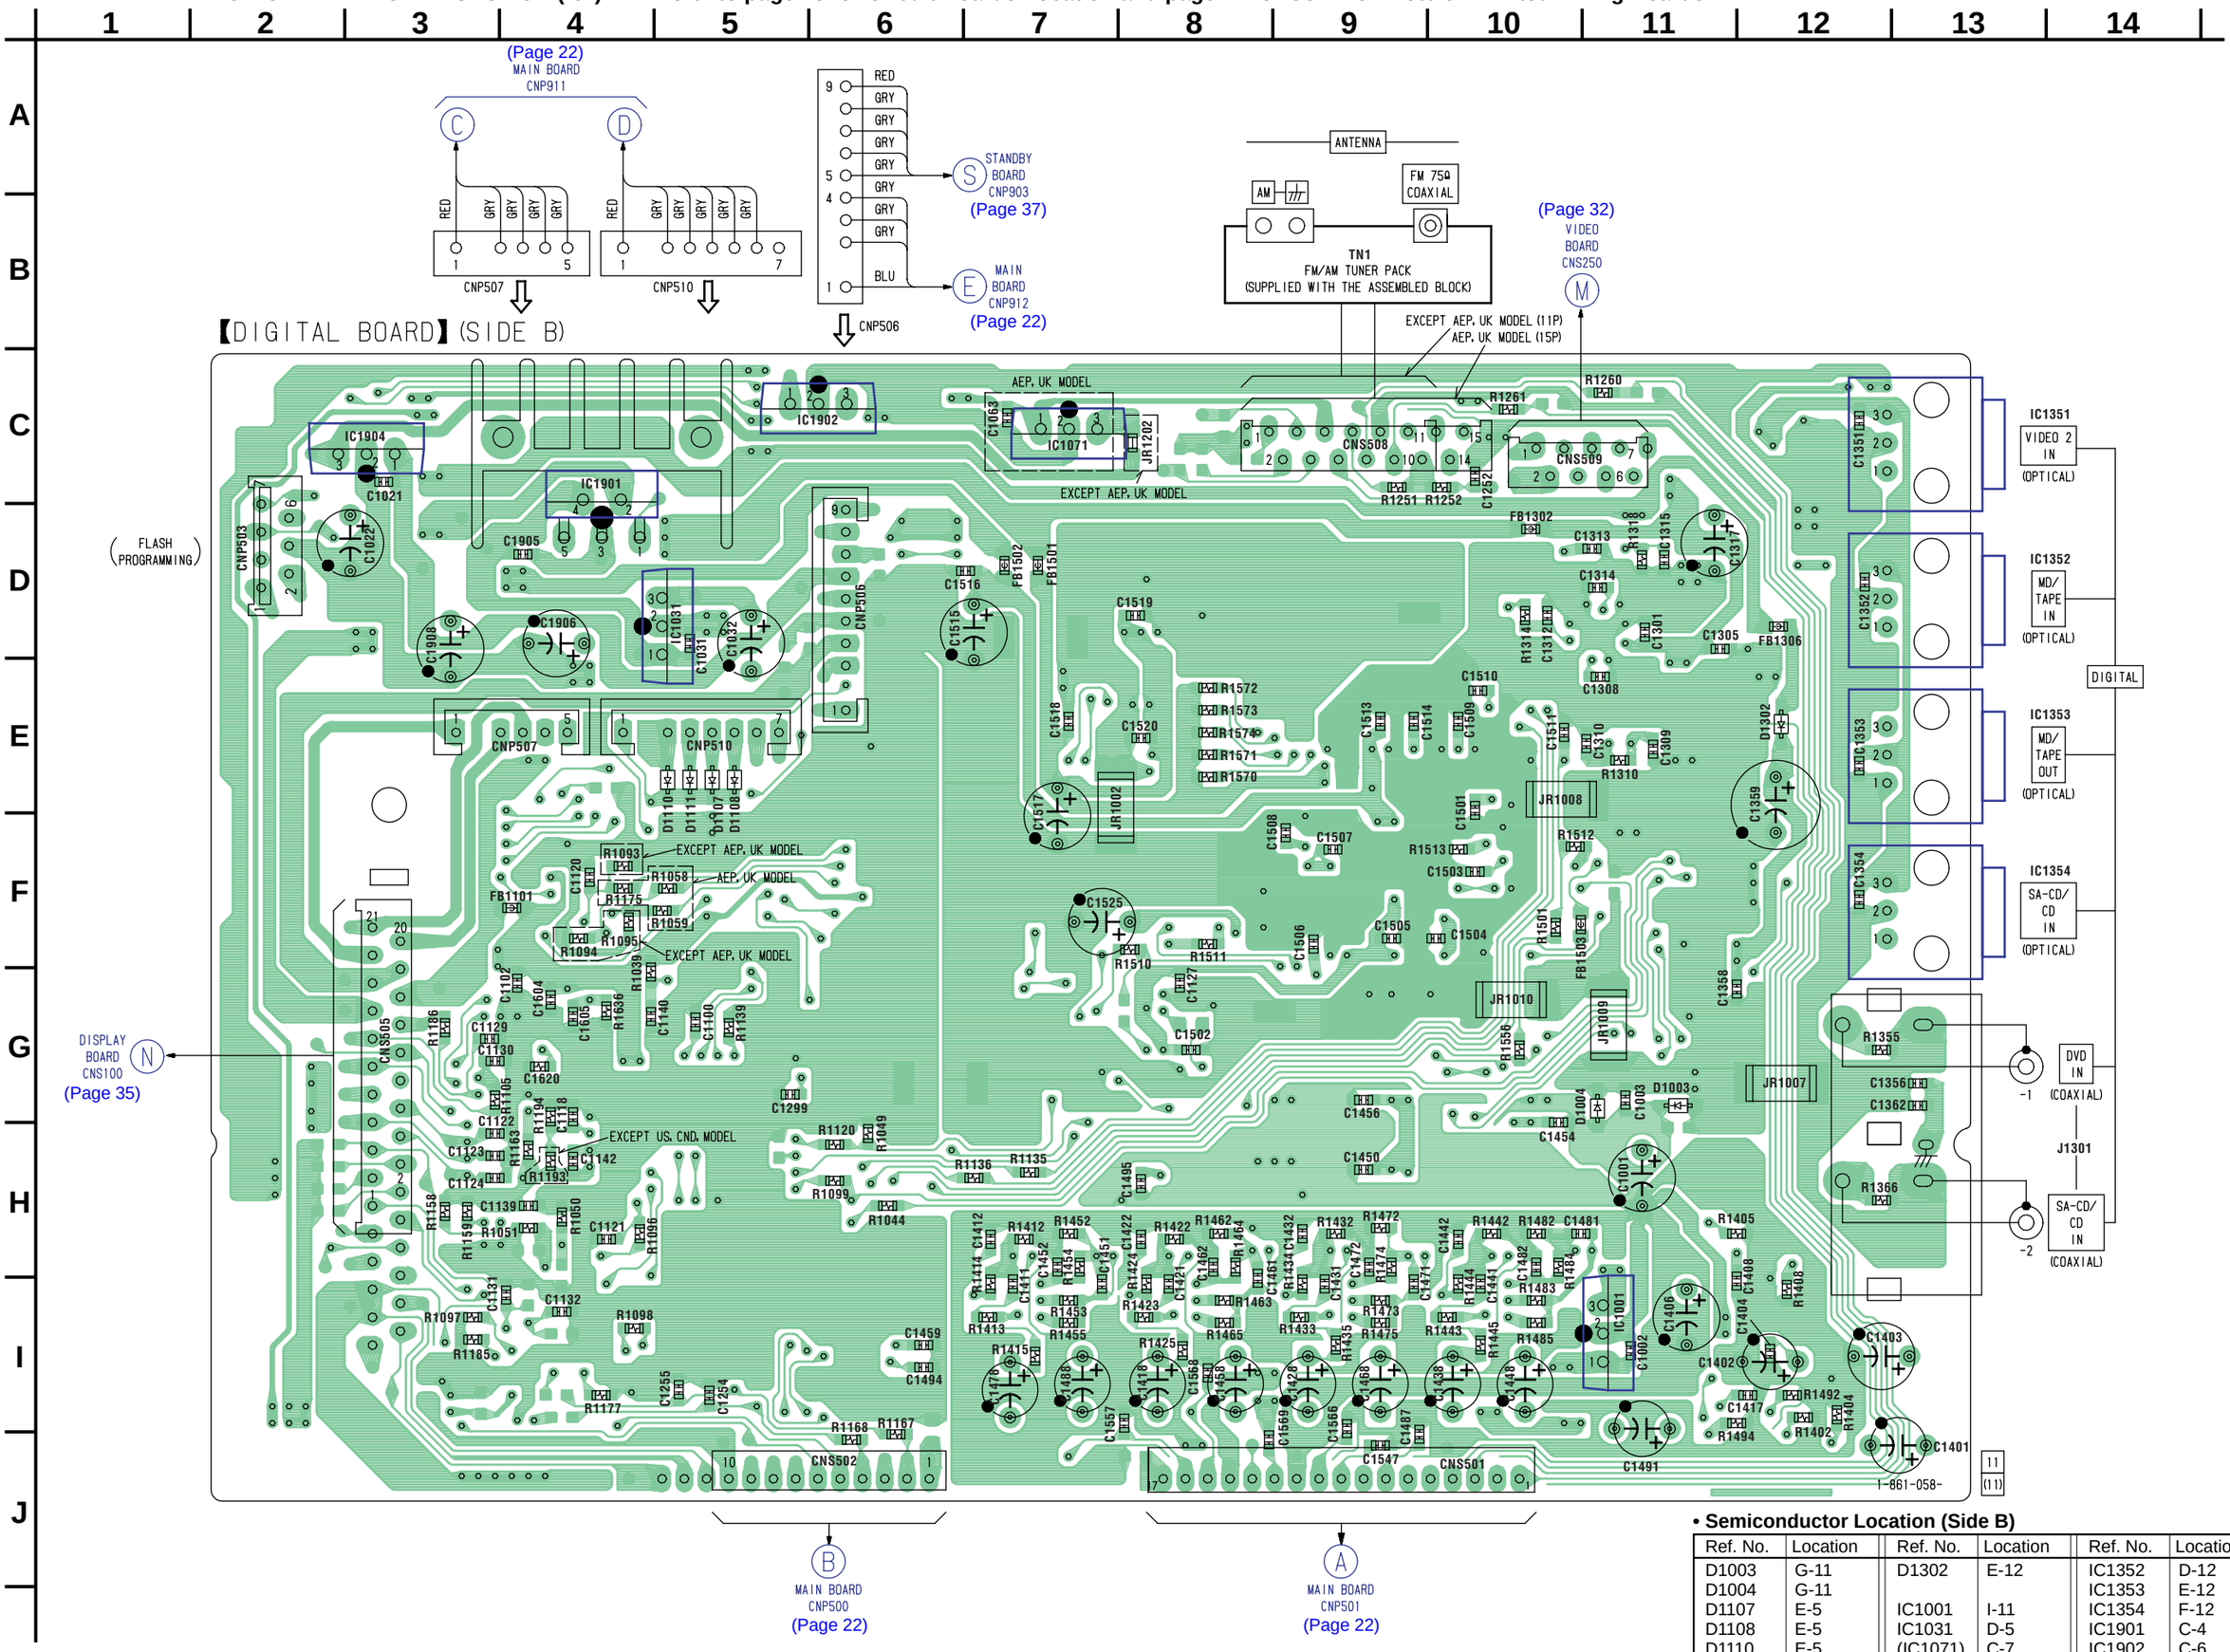

• **Semiconductor Location (Side B)**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1003	G-11	D1302	E-12	IC1352	D-12
D1004	G-11			IC1353	E-12
D1107	E-5	IC1001	I-11	IC1354	F-12
D1108	E-5	IC1031	D-5	IC1901	C-4
D1110	E-5	(IC1071)	C-7	IC1902	C-6
D1111	E-5	IC1351	C-12	IC1904	C-3

( ): AEP, UK model only

4-13. SCHEMATIC DIAGRAM — DIGITAL SECTION (1/3) — • Refer to page 21 for Common Note on Schematic Diagram and Waveforms and page 39 for IC Block Diagrams.

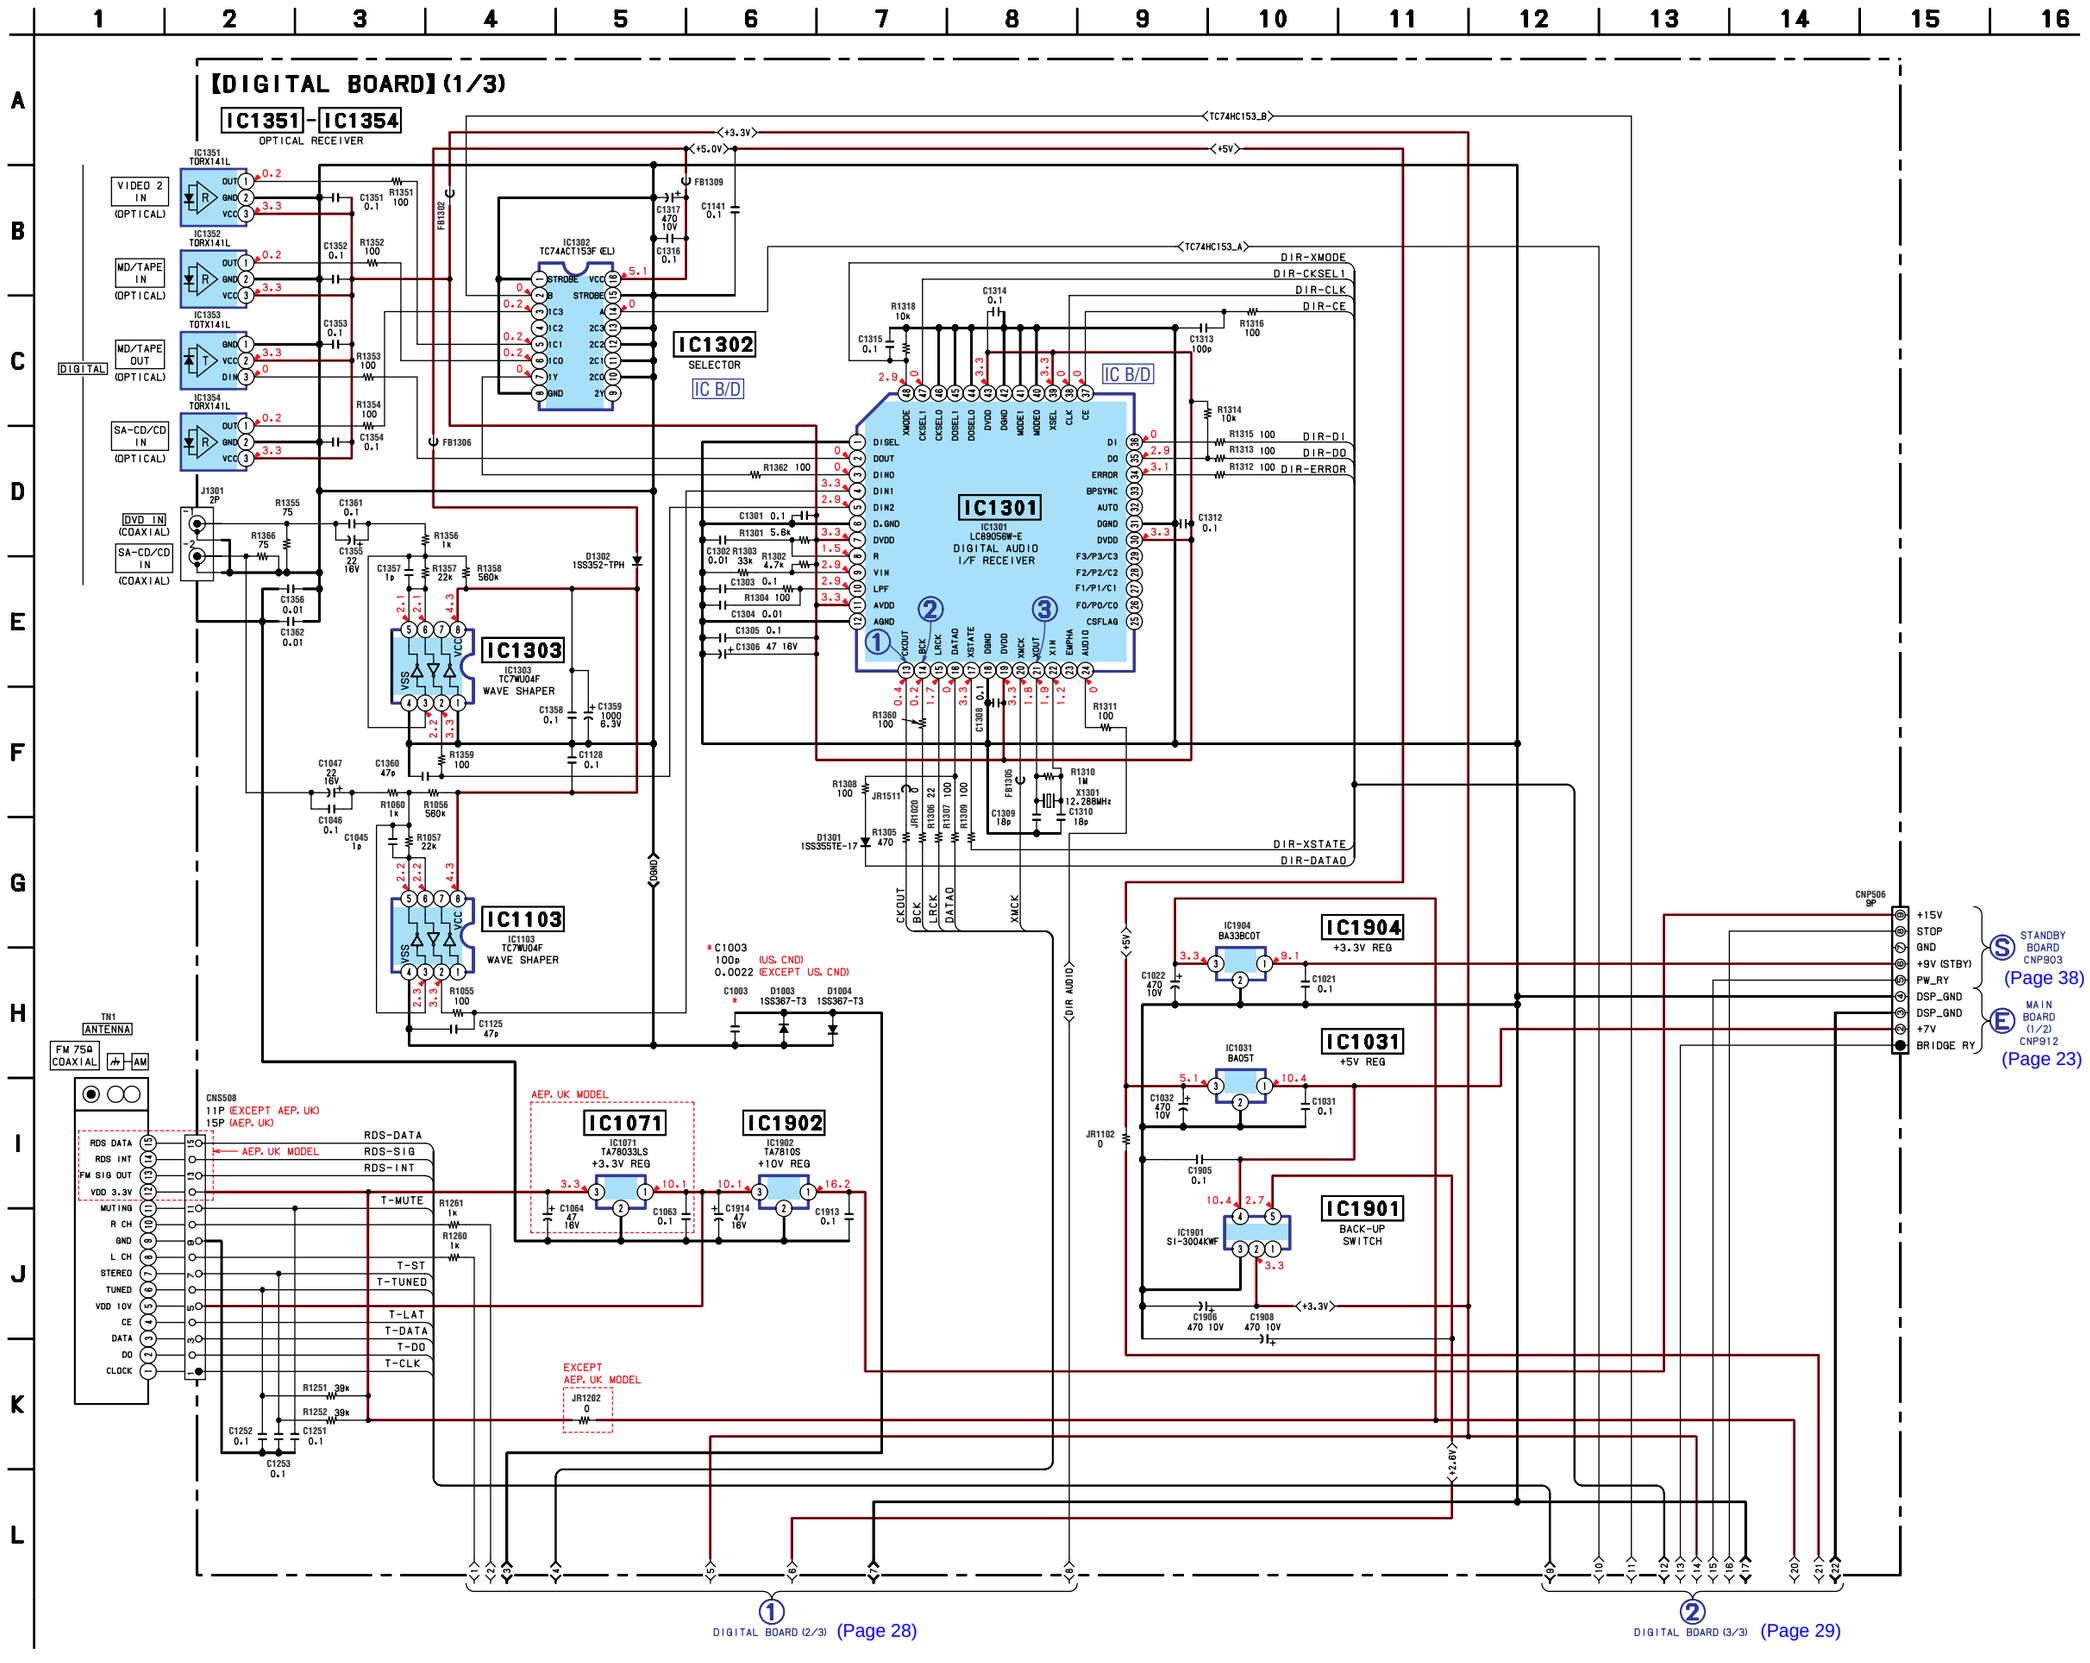

4-14. SCHEMATIC DIAGRAM — DIGITAL SECTION (2/3) — • Refer to page 21 for Common Note on Schematic Diagram and Waveforms and page 40 for IC Block Diagrams.

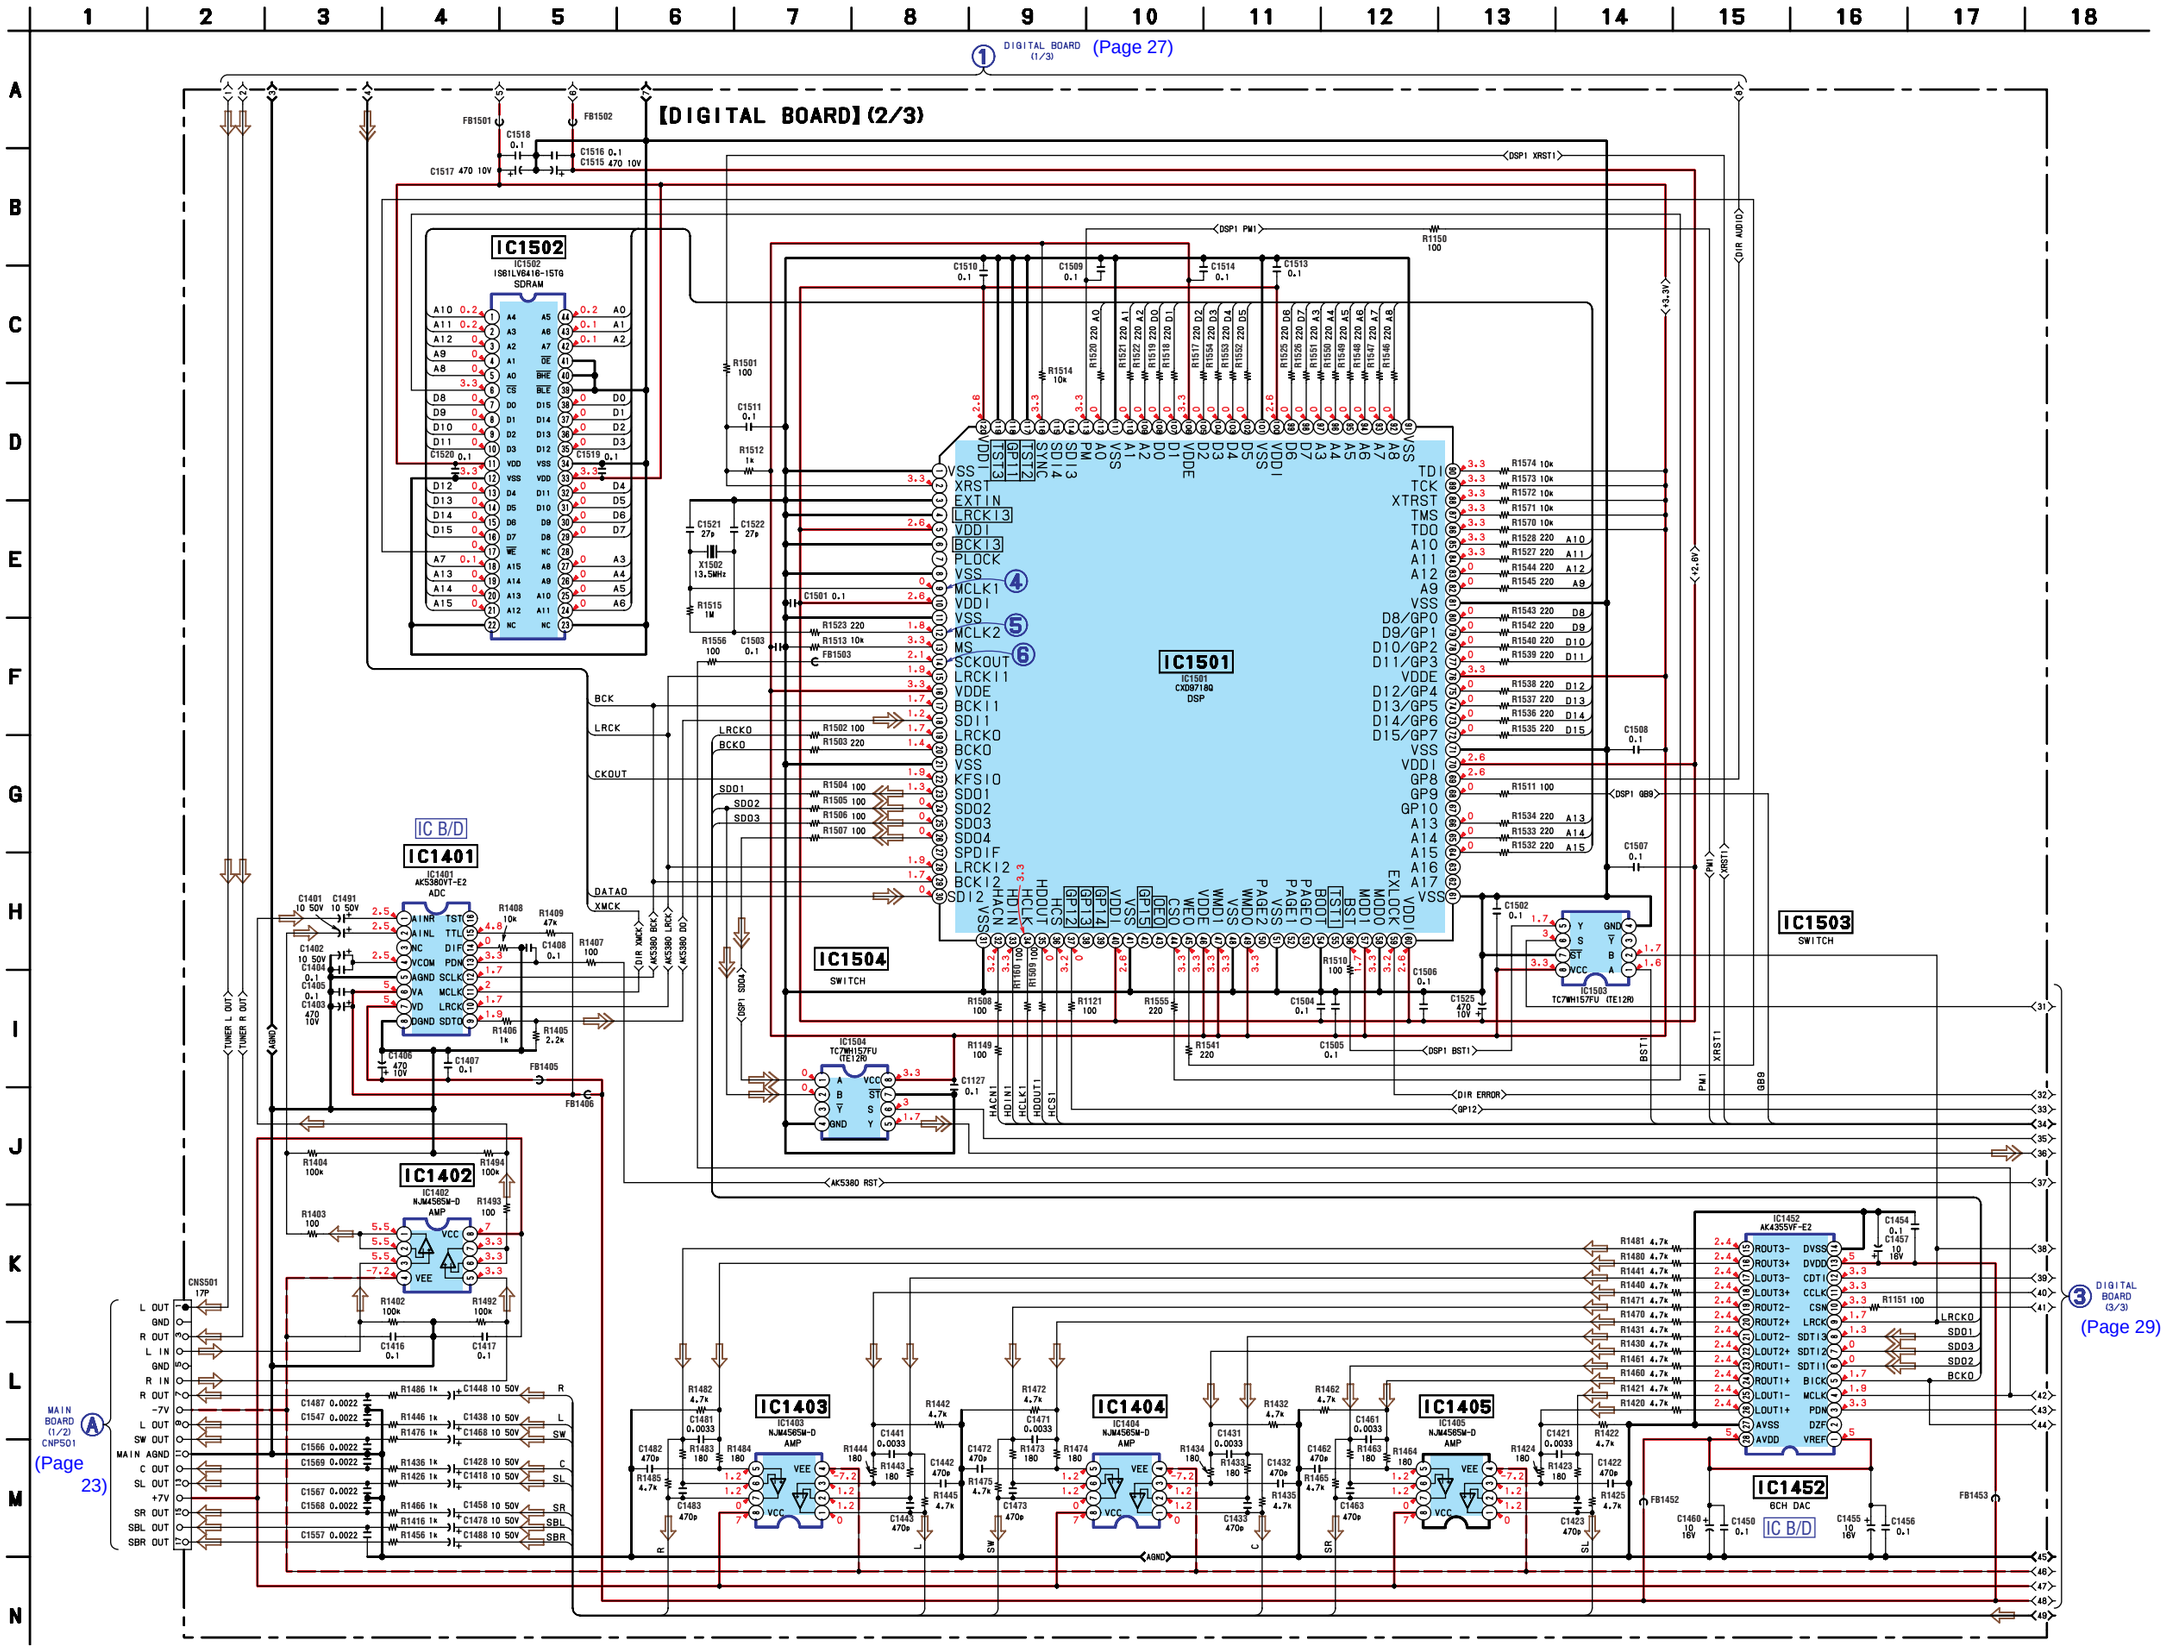

4-15. SCHEMATIC DIAGRAM — DIGITAL SECTION (3/3) — • Refer to page 21 for Common Note on Schematic Diagram and Waveforms and page 40 for IC Block Diagrams.

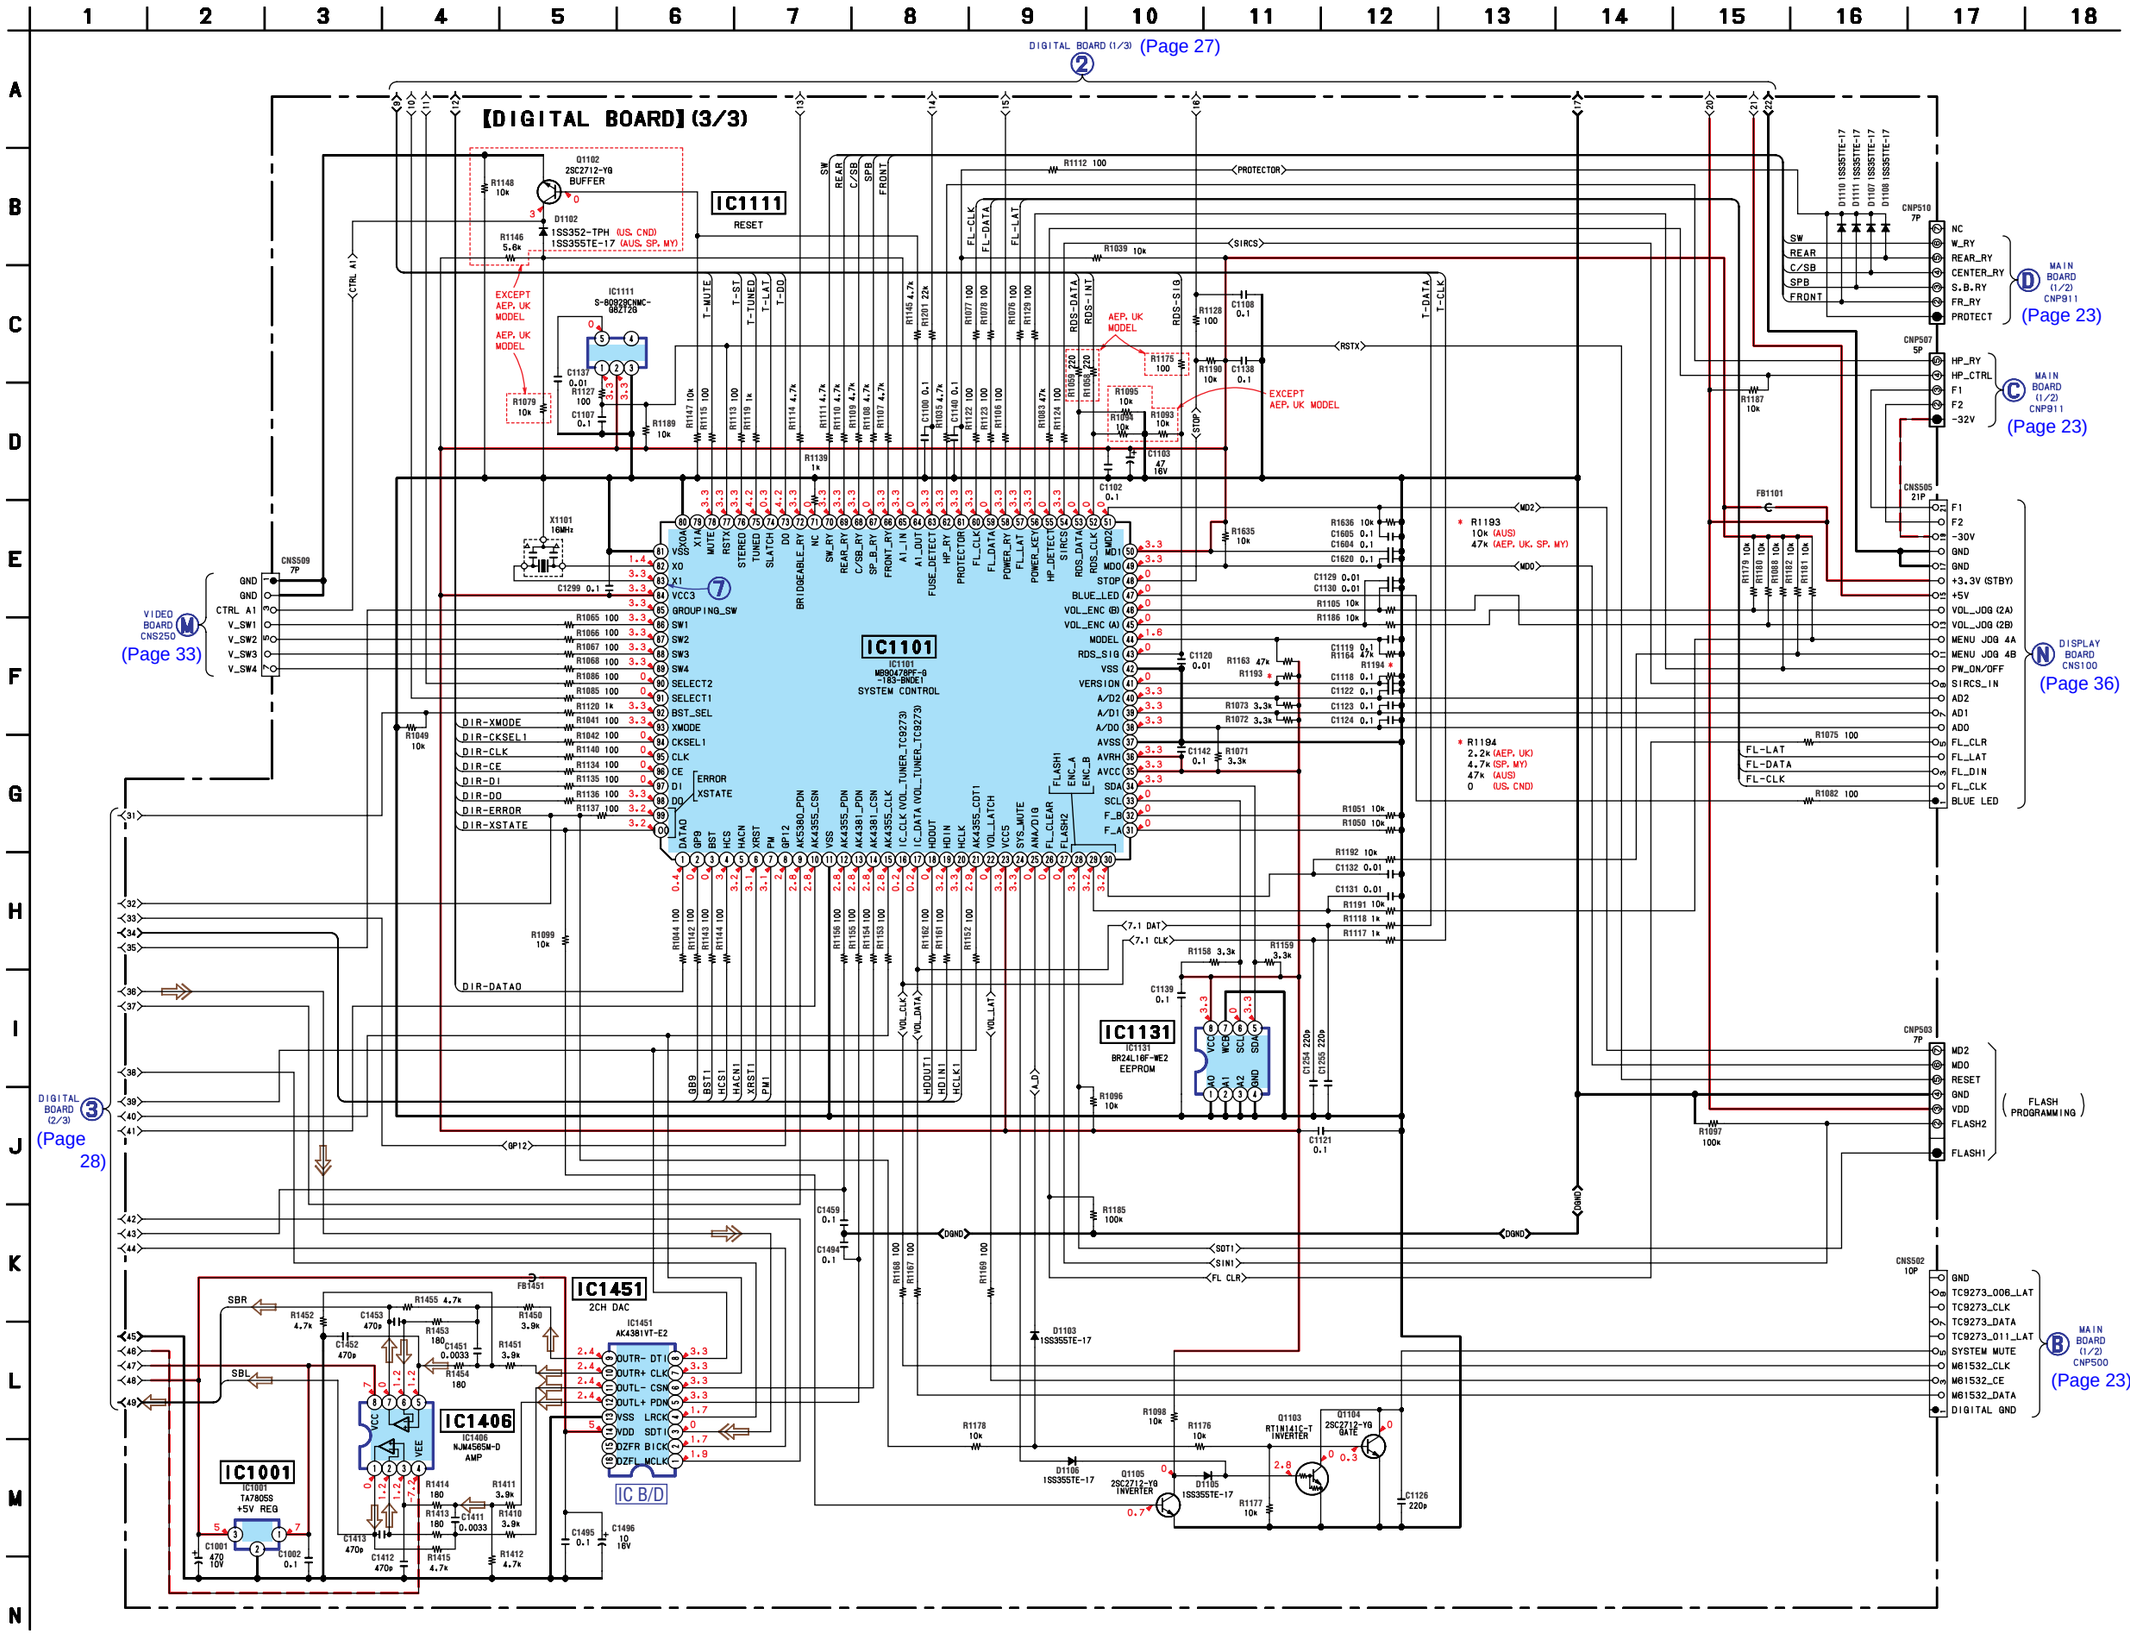

4-16. PRINTED WIRING BOARDS — CENTER/SURROUND BACK SPEAKER SECTION — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

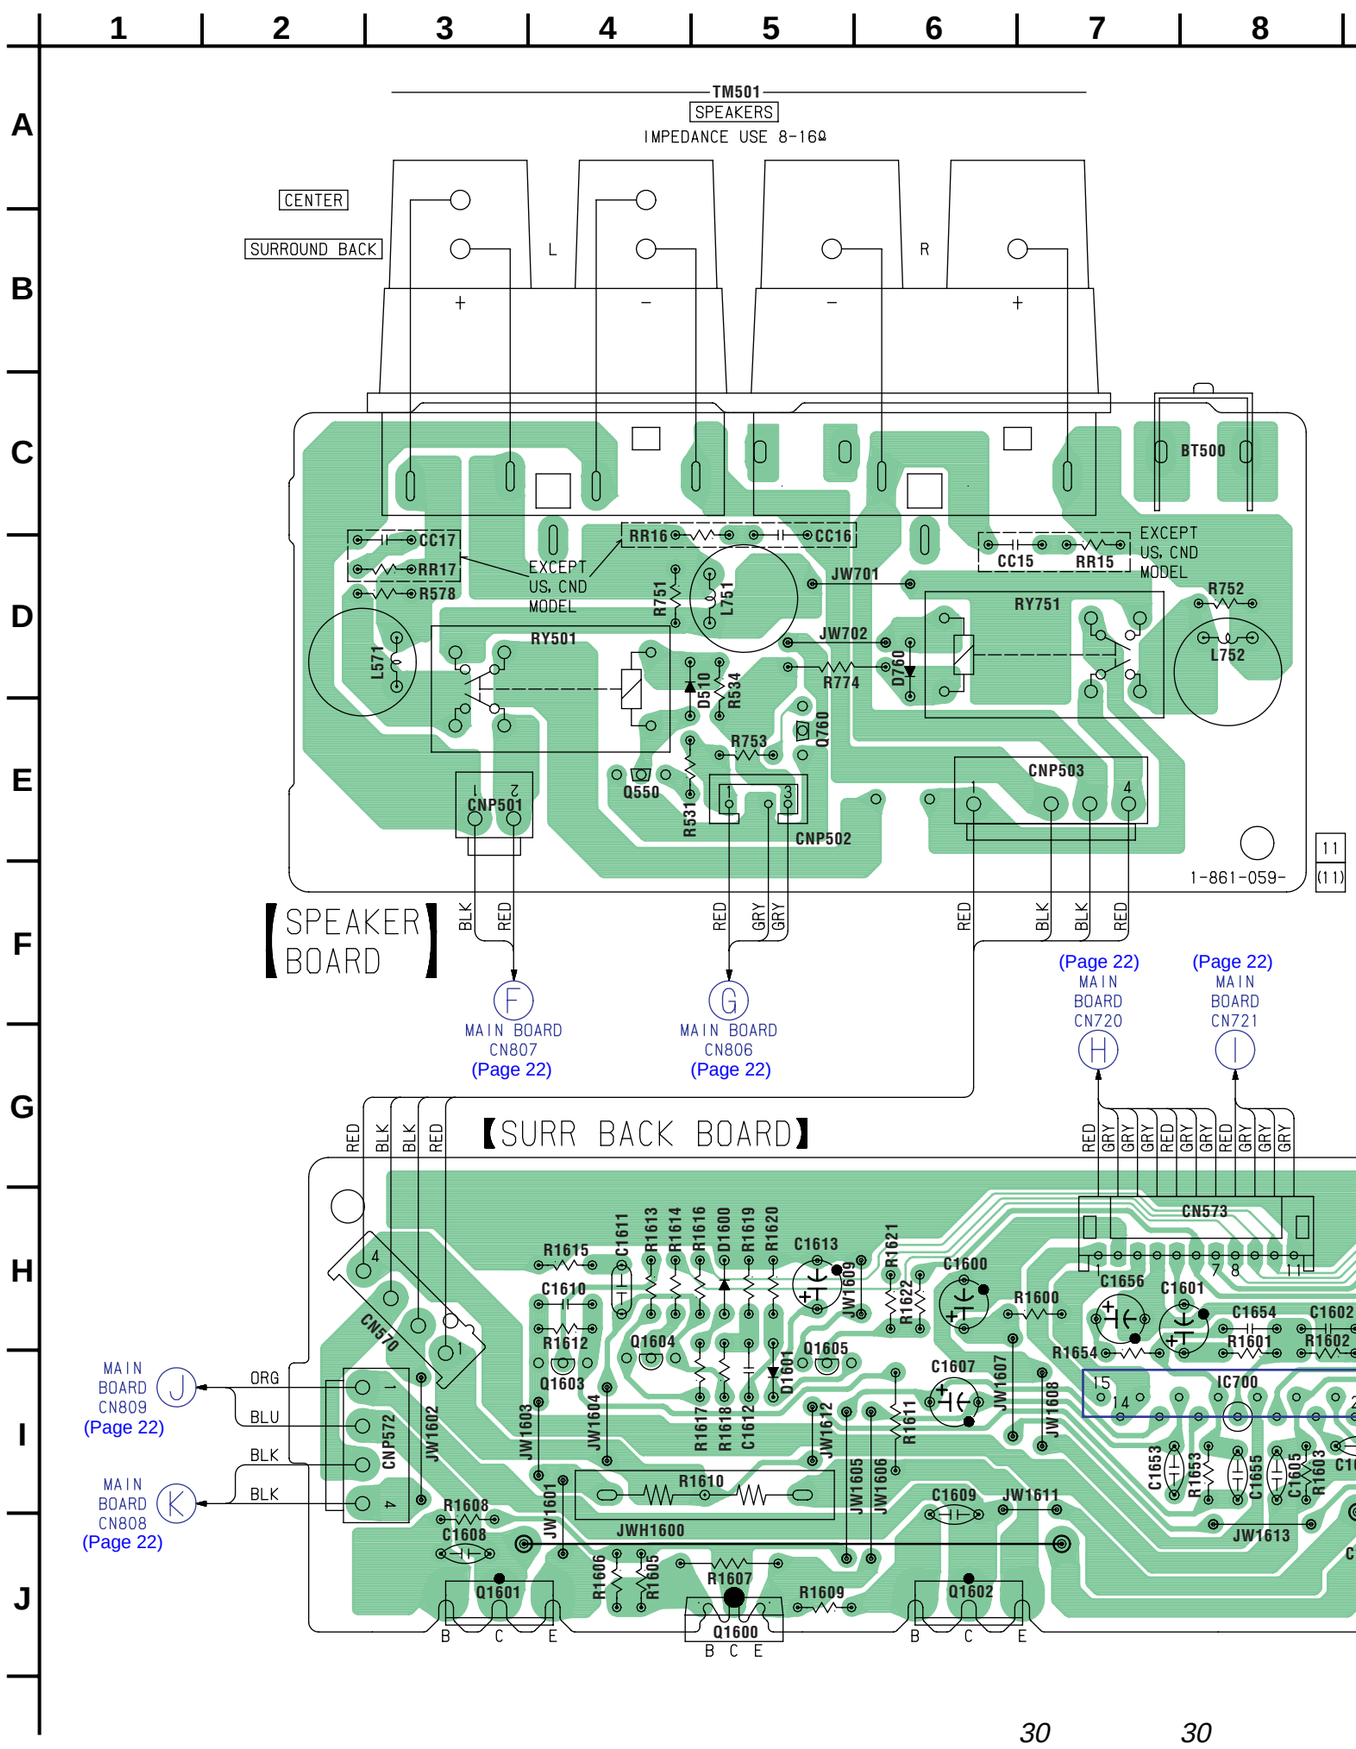

• **Semiconductor Location**

Ref. No.	Location
D510	D-5
D760	D-6
D1600	H-5
D1601	I-5
D1650	H-12
D1651	I-12
IC700	I-8
Q550	E-4
Q760	E-5
Q1600	J-5
Q1601	J-3
Q1602	J-6
Q1603	I-3
Q1604	H-4
Q1605	H-5
Q1650	J-11
Q1651	J-9
Q1652	J-12
Q1653	H-10
Q1654	I-11
Q1655	I-12

4-17. SCHEMATIC DIAGRAM — CENTER/SURROUND BACK SPEAKER SECTION — • Refer to page 21 for Common Note on Schematic Diagram and page 39 for IC Block Diagrams.

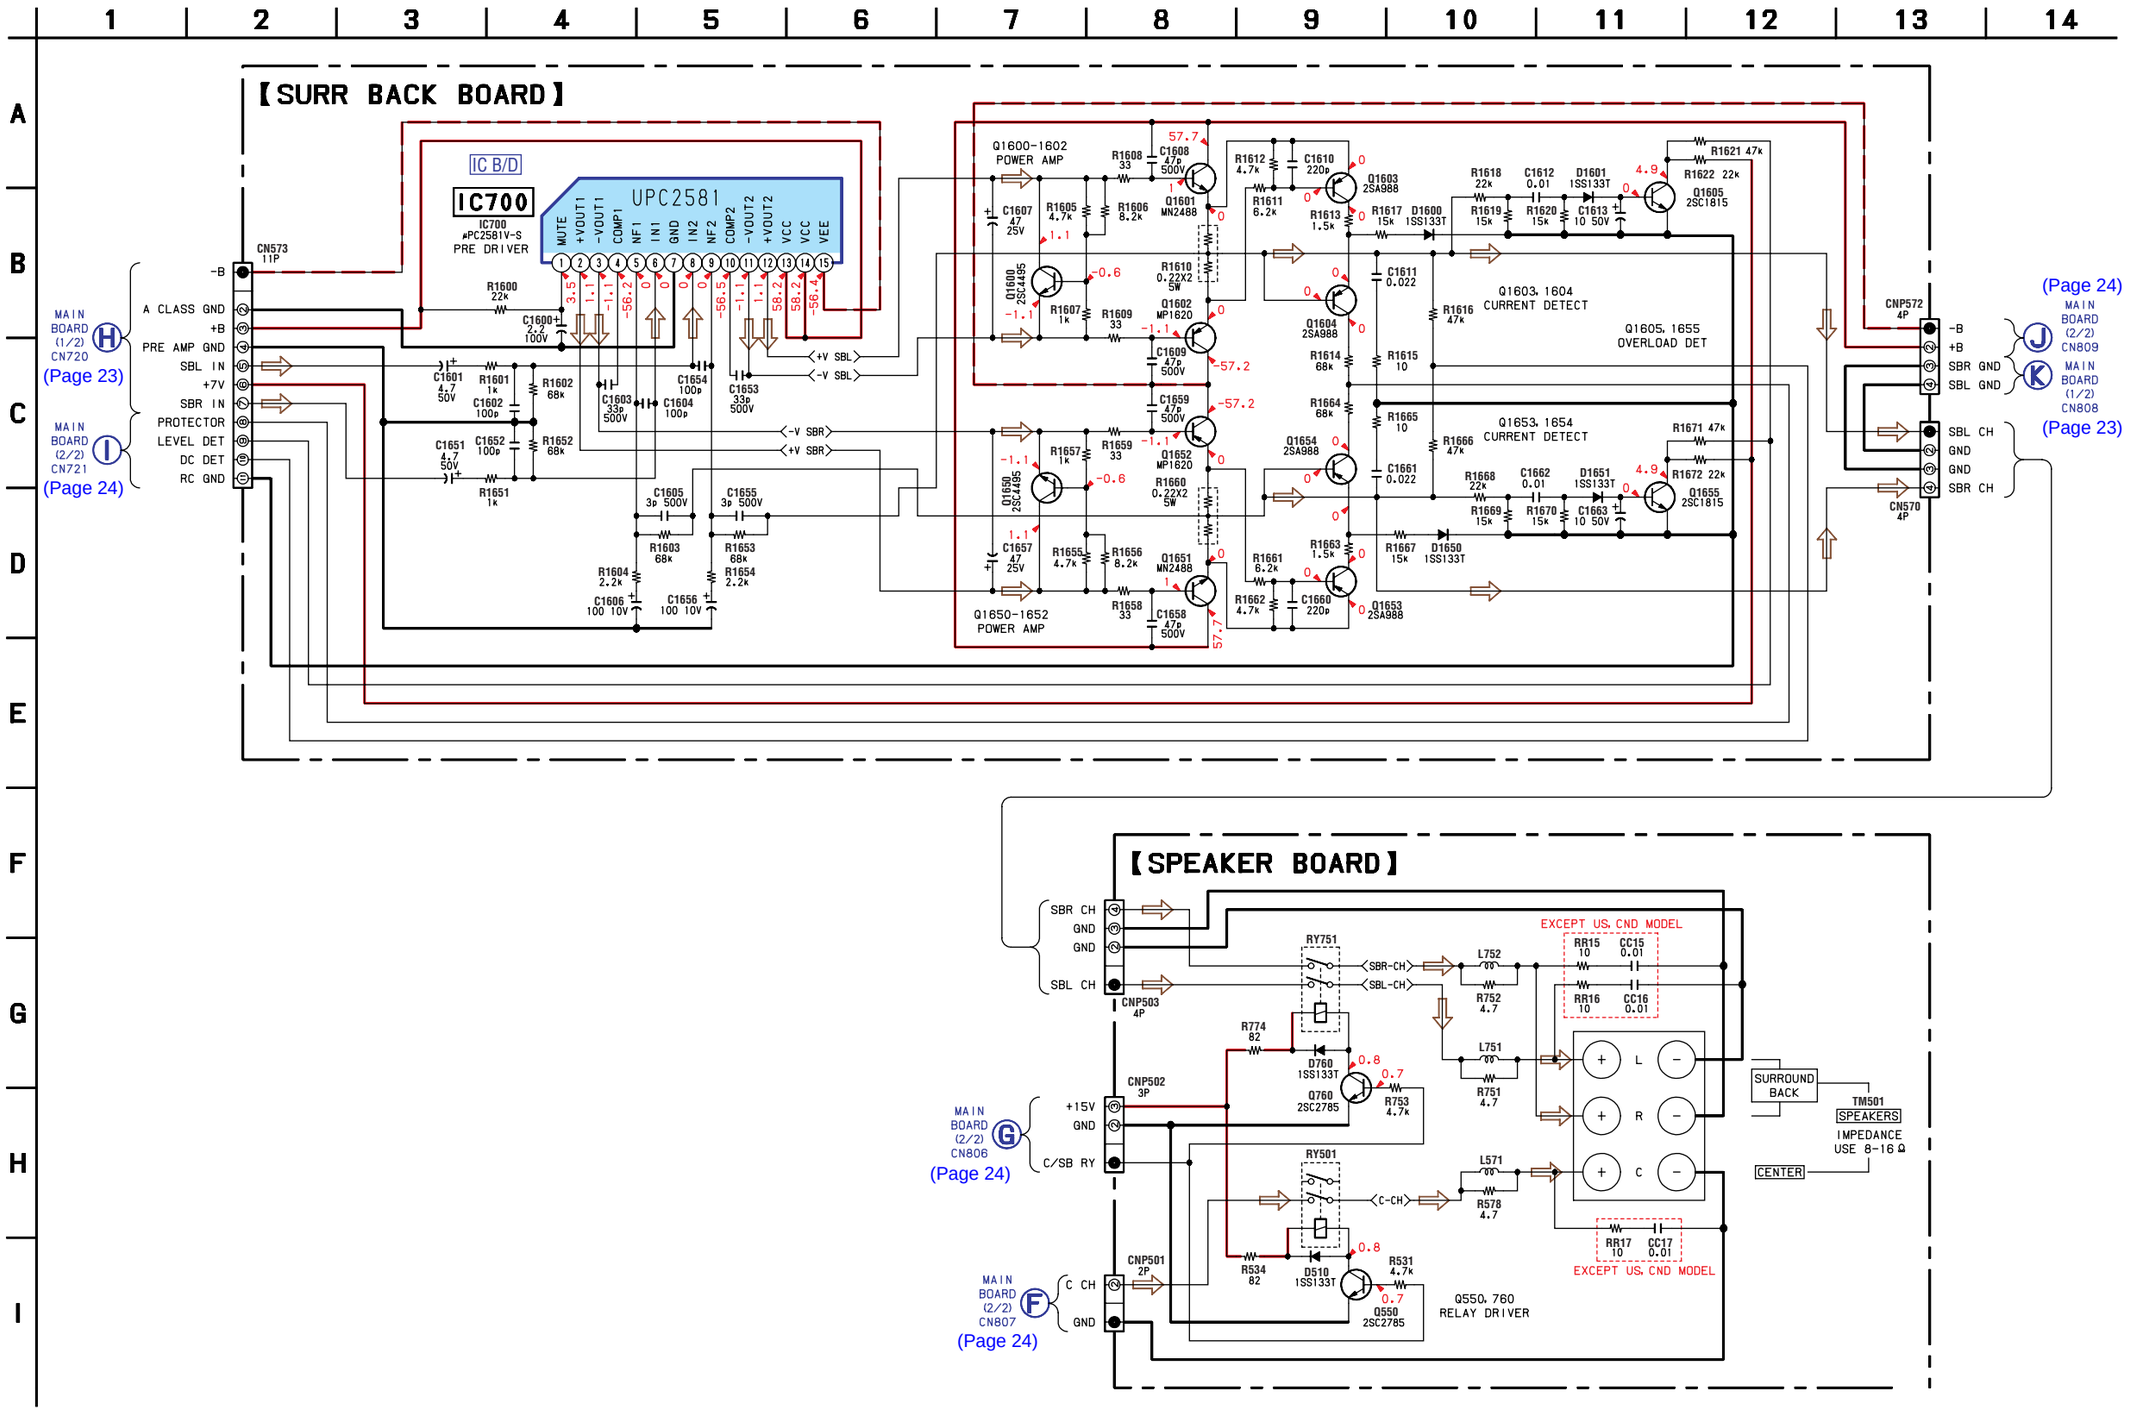

4-18. PRINTED WIRING BOARD — VIDEO SECTION — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

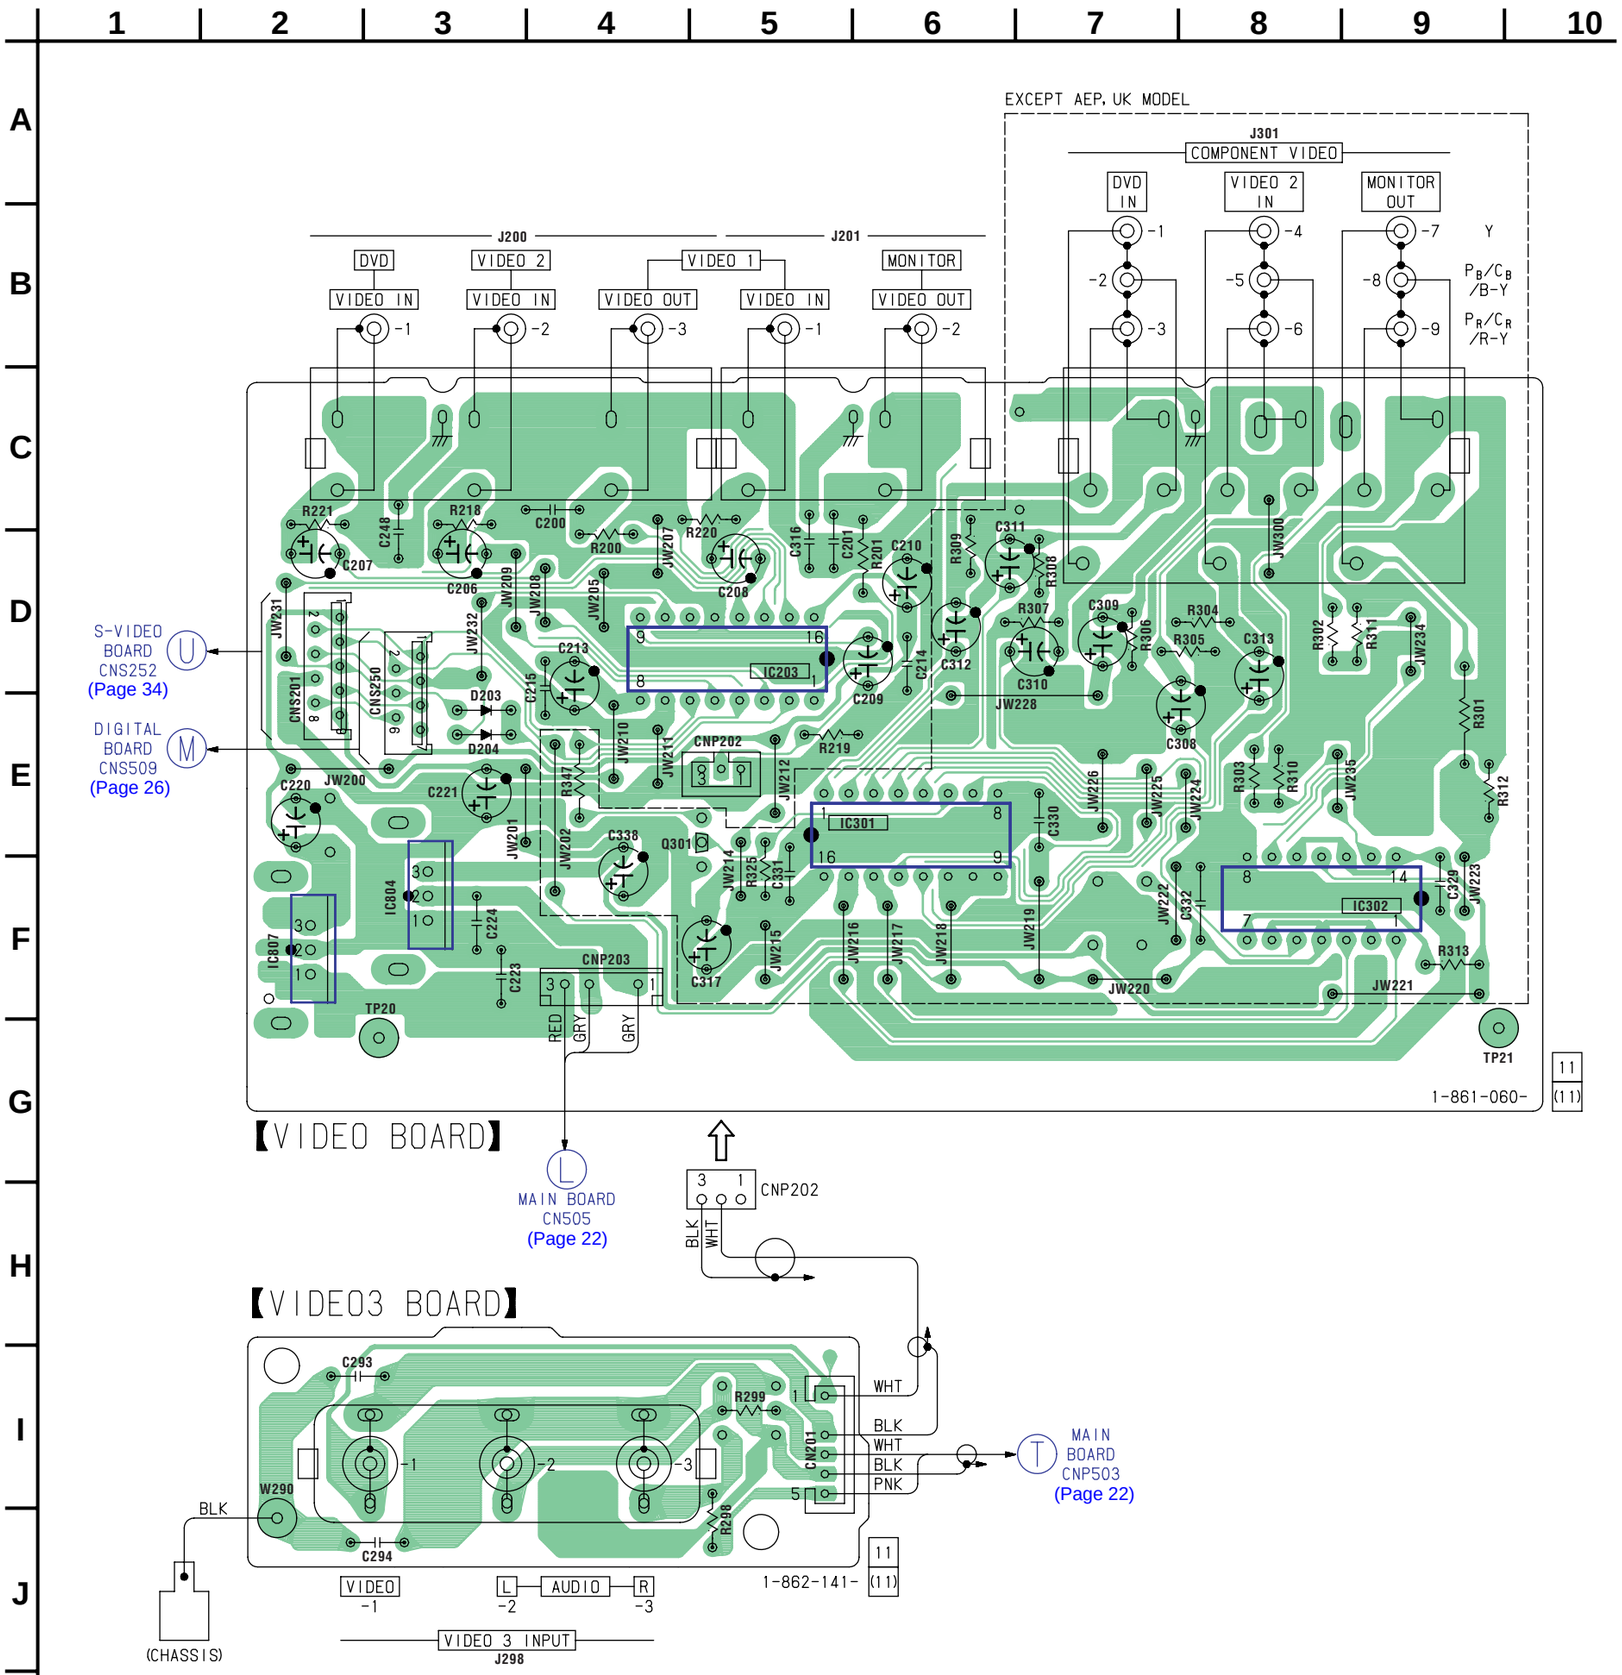

- **Semiconductor Location**

Ref. No.	Location
D203	D-3
D204	E-3
IC203	D-5
(IC301)	E-6
(IC302)	F-9
IC804	F-3
IC807	F-2
(Q301)	E-4

( ): Except AEP, UK model

4-19. SCHEMATIC DIAGRAM — VIDEO SECTION — • Refer to page 21 for Common Note on Schematic Diagram and page 41 for IC Block Diagrams.

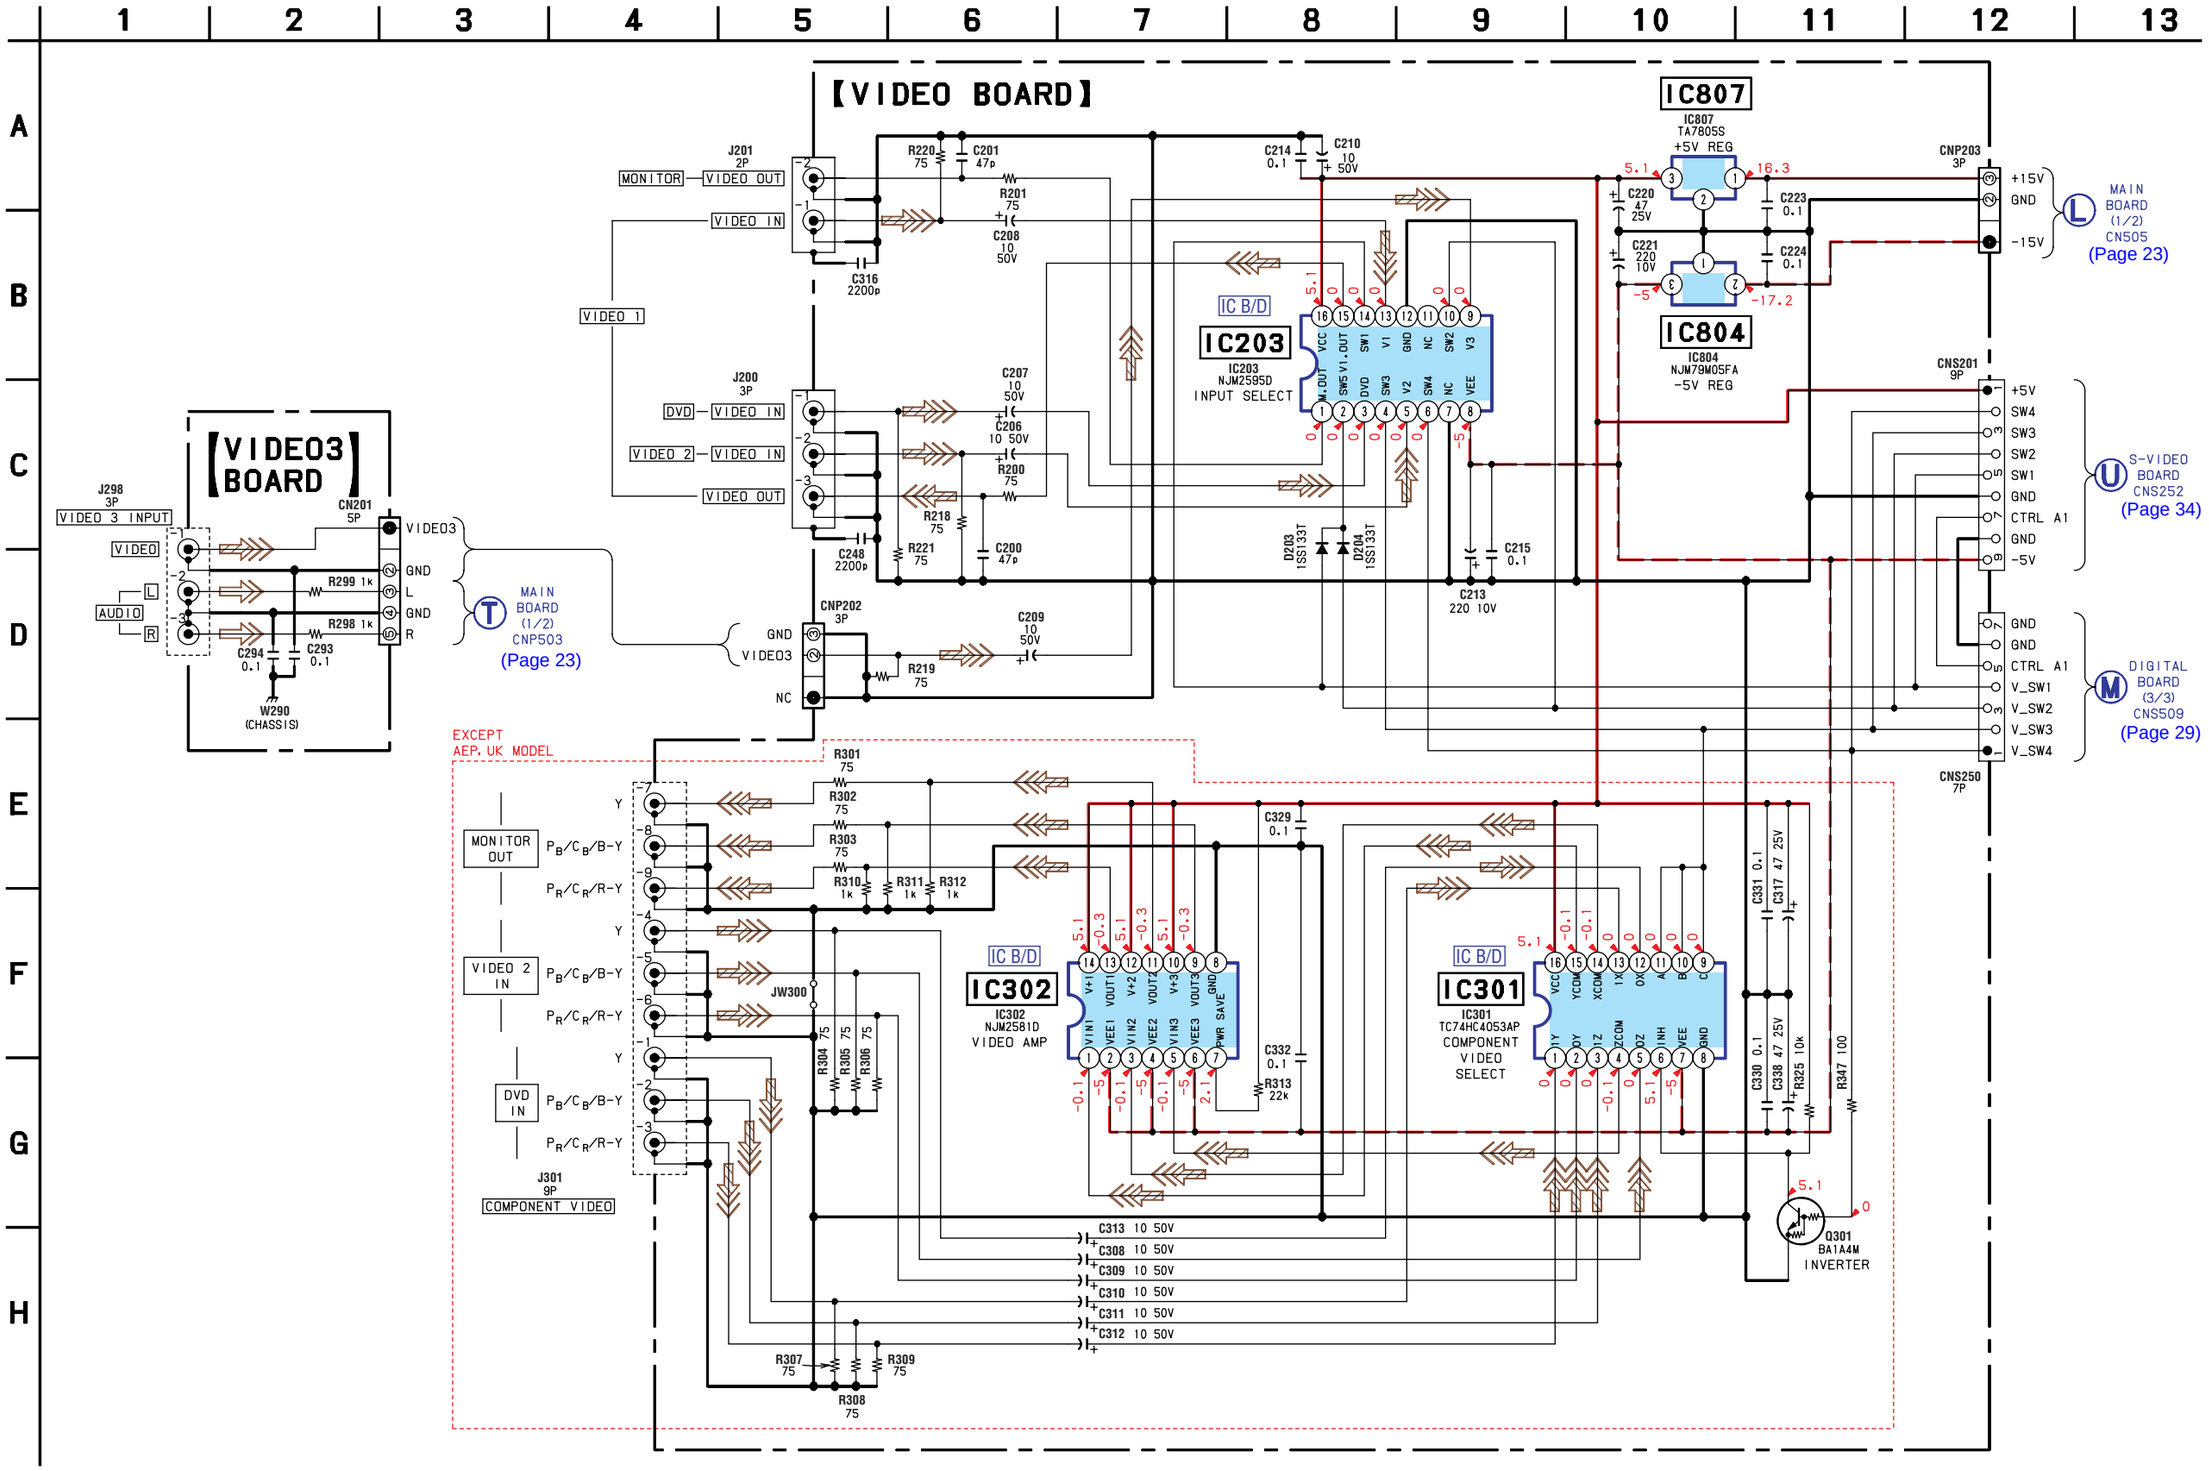

4-20. PRINTED WIRING BOARD — S-VIDEO SECTION — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

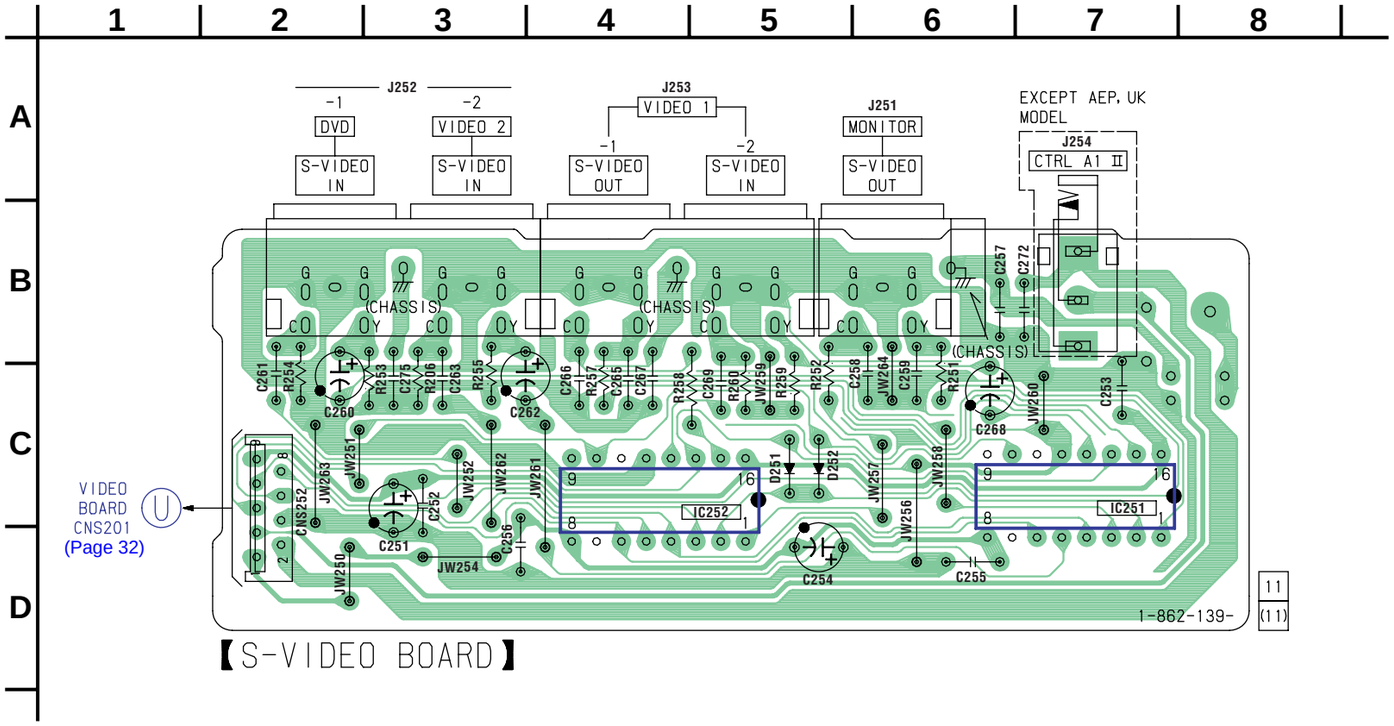

4-21. SCHEMATIC DIAGRAM — S-VIDEO SECTION — • Refer to page 21 for Common Note on Schematic Diagram and page 41 for IC Block Diagrams.

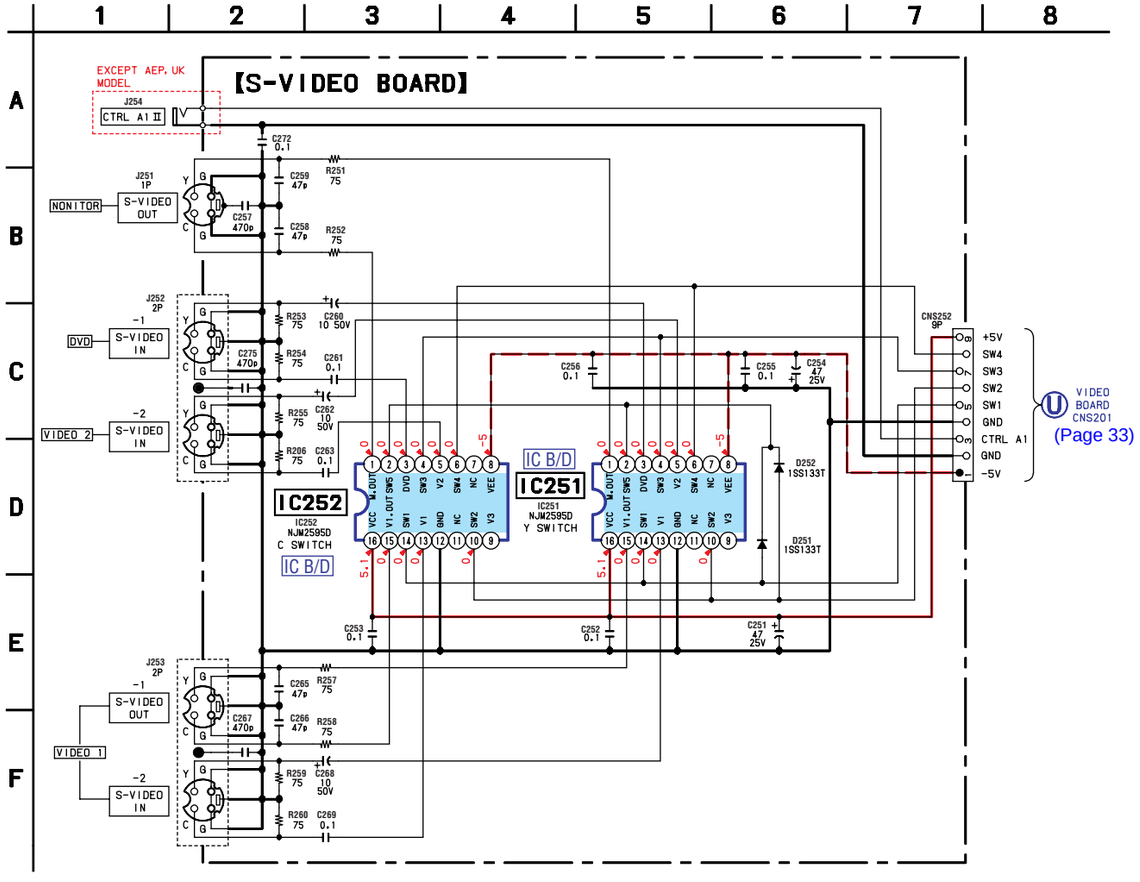

4-22. PRINTED WIRING BOARDS — DISPLAY SECTION — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

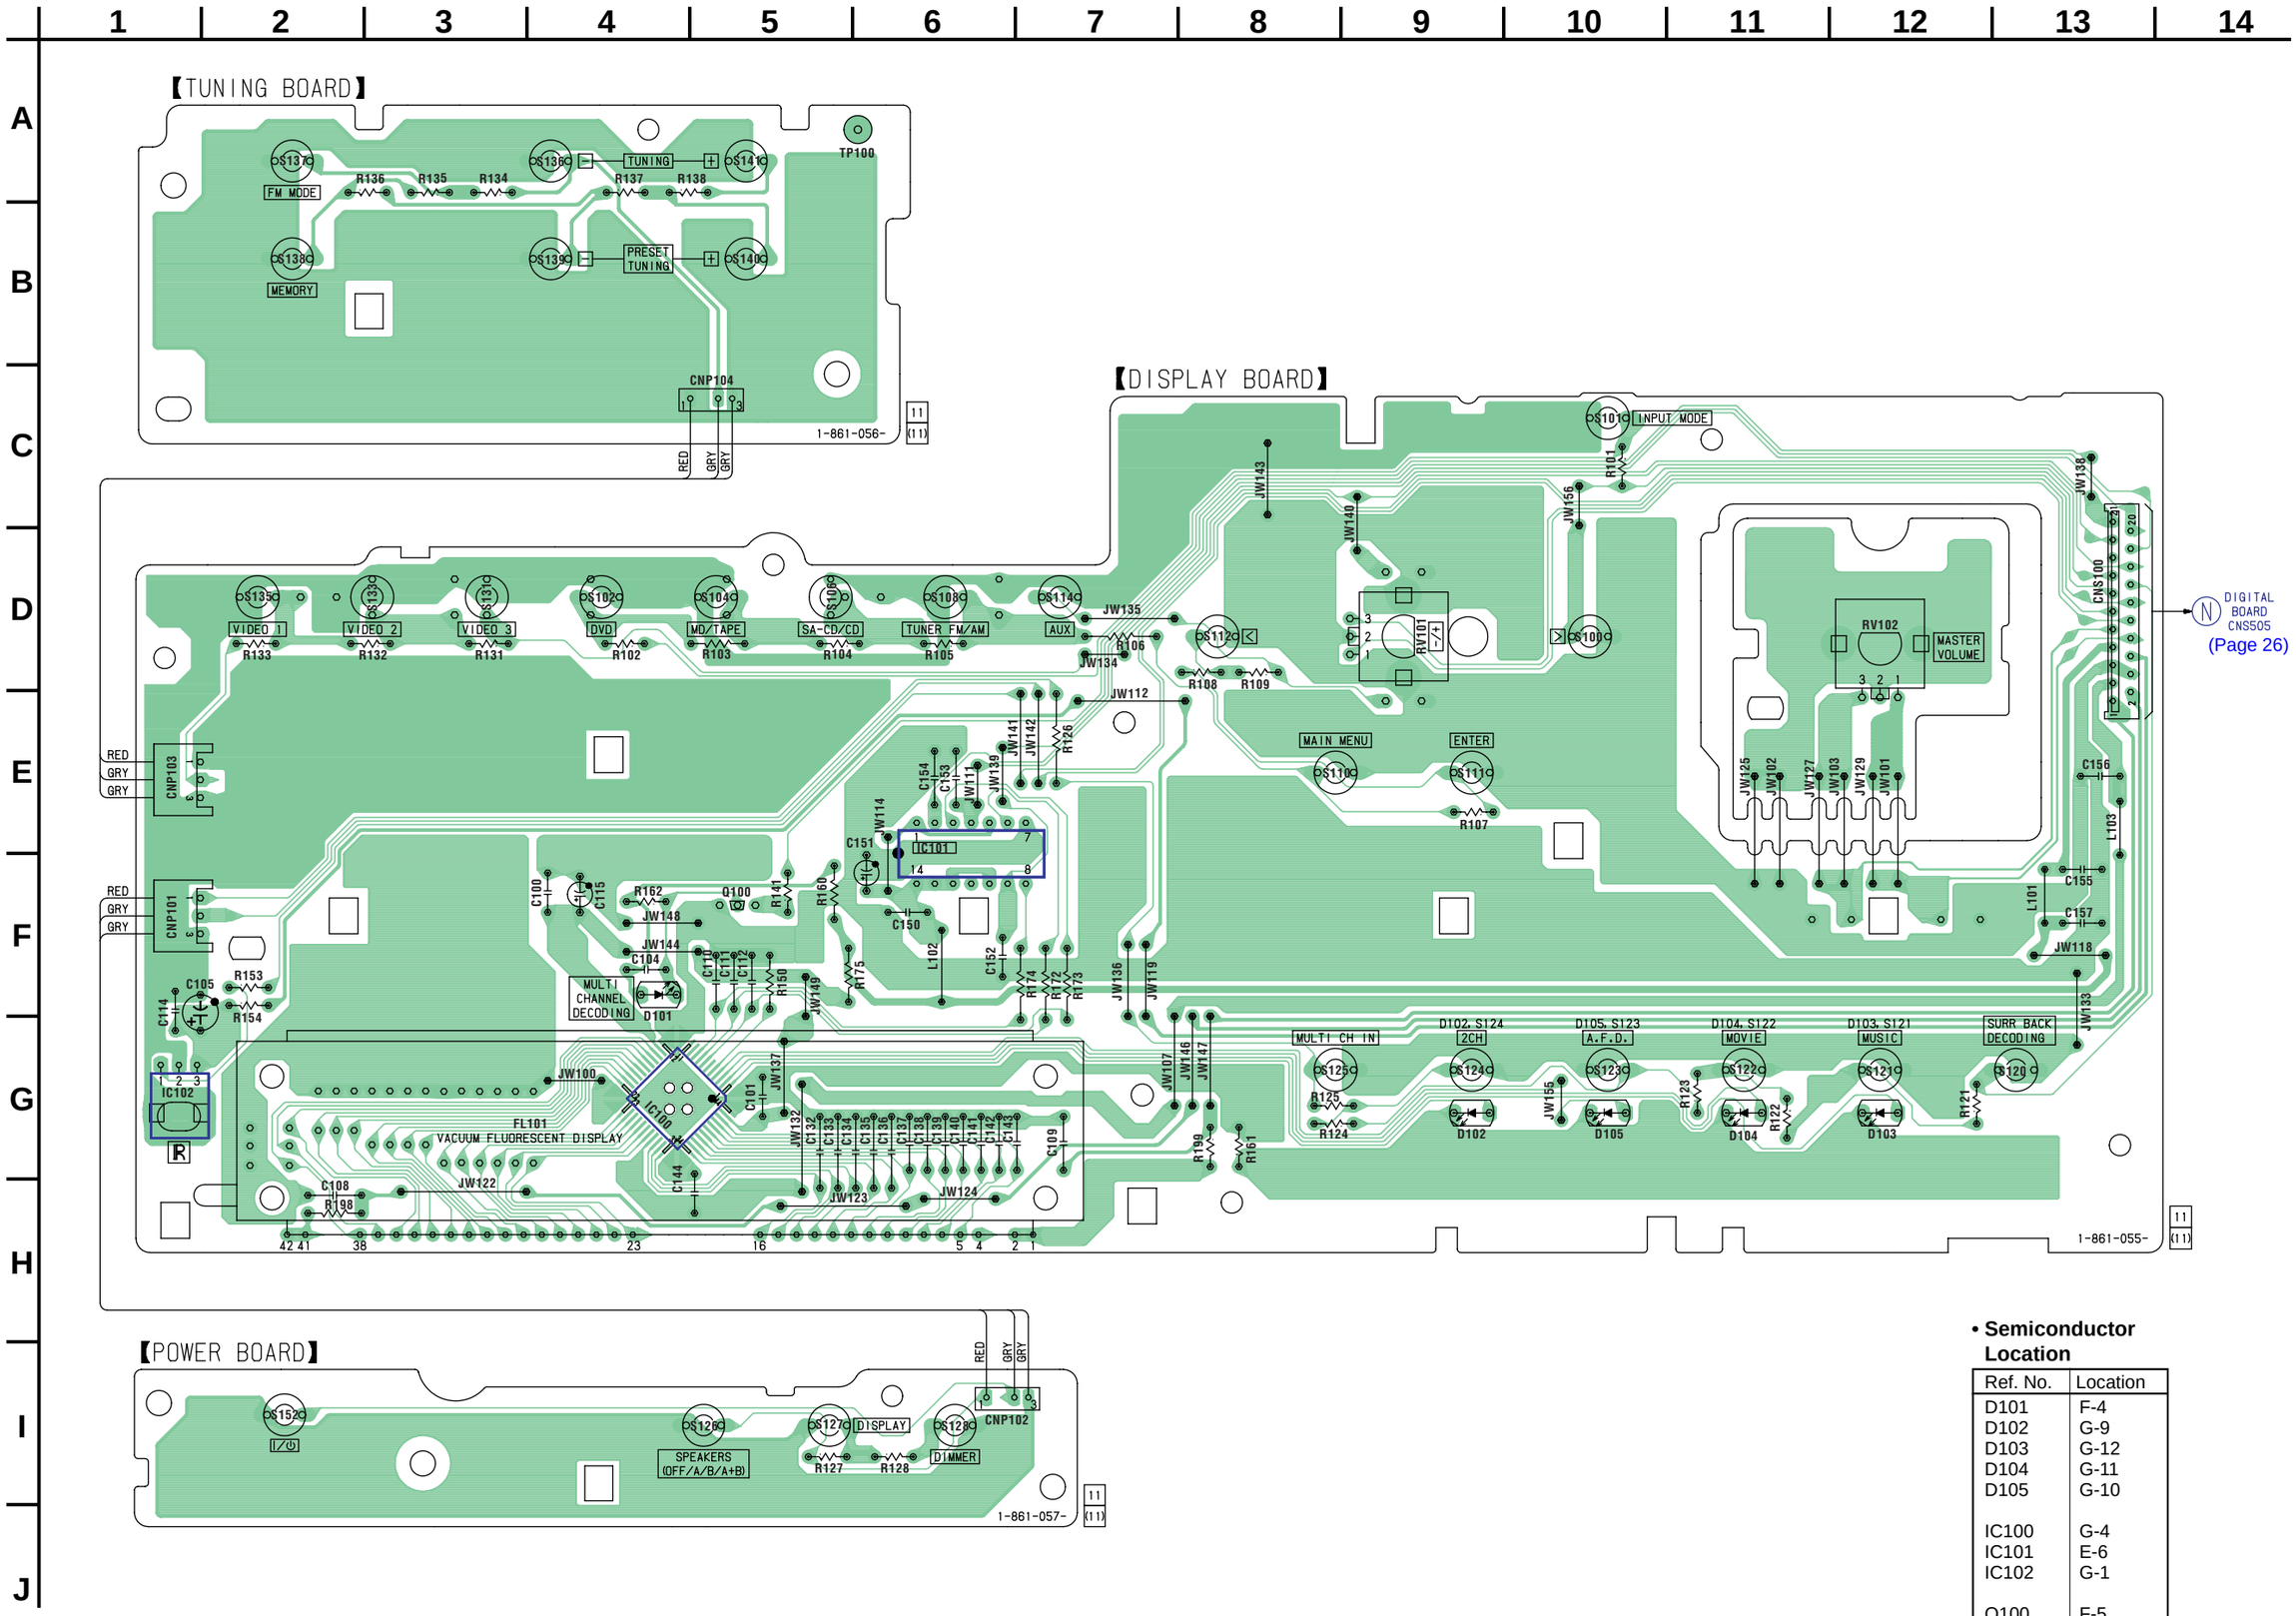

- **Semiconductor Location**

Ref. No.	Location
D101	F-4
D102	G-9
D103	G-12
D104	G-11
D105	G-10
IC100	G-4
IC101	E-6
IC102	G-1
Q100	F-5

4-23. SCHEMATIC DIAGRAM — DISPLAY SECTION — • Refer to page 21 for Common Note on Schematic Diagram.

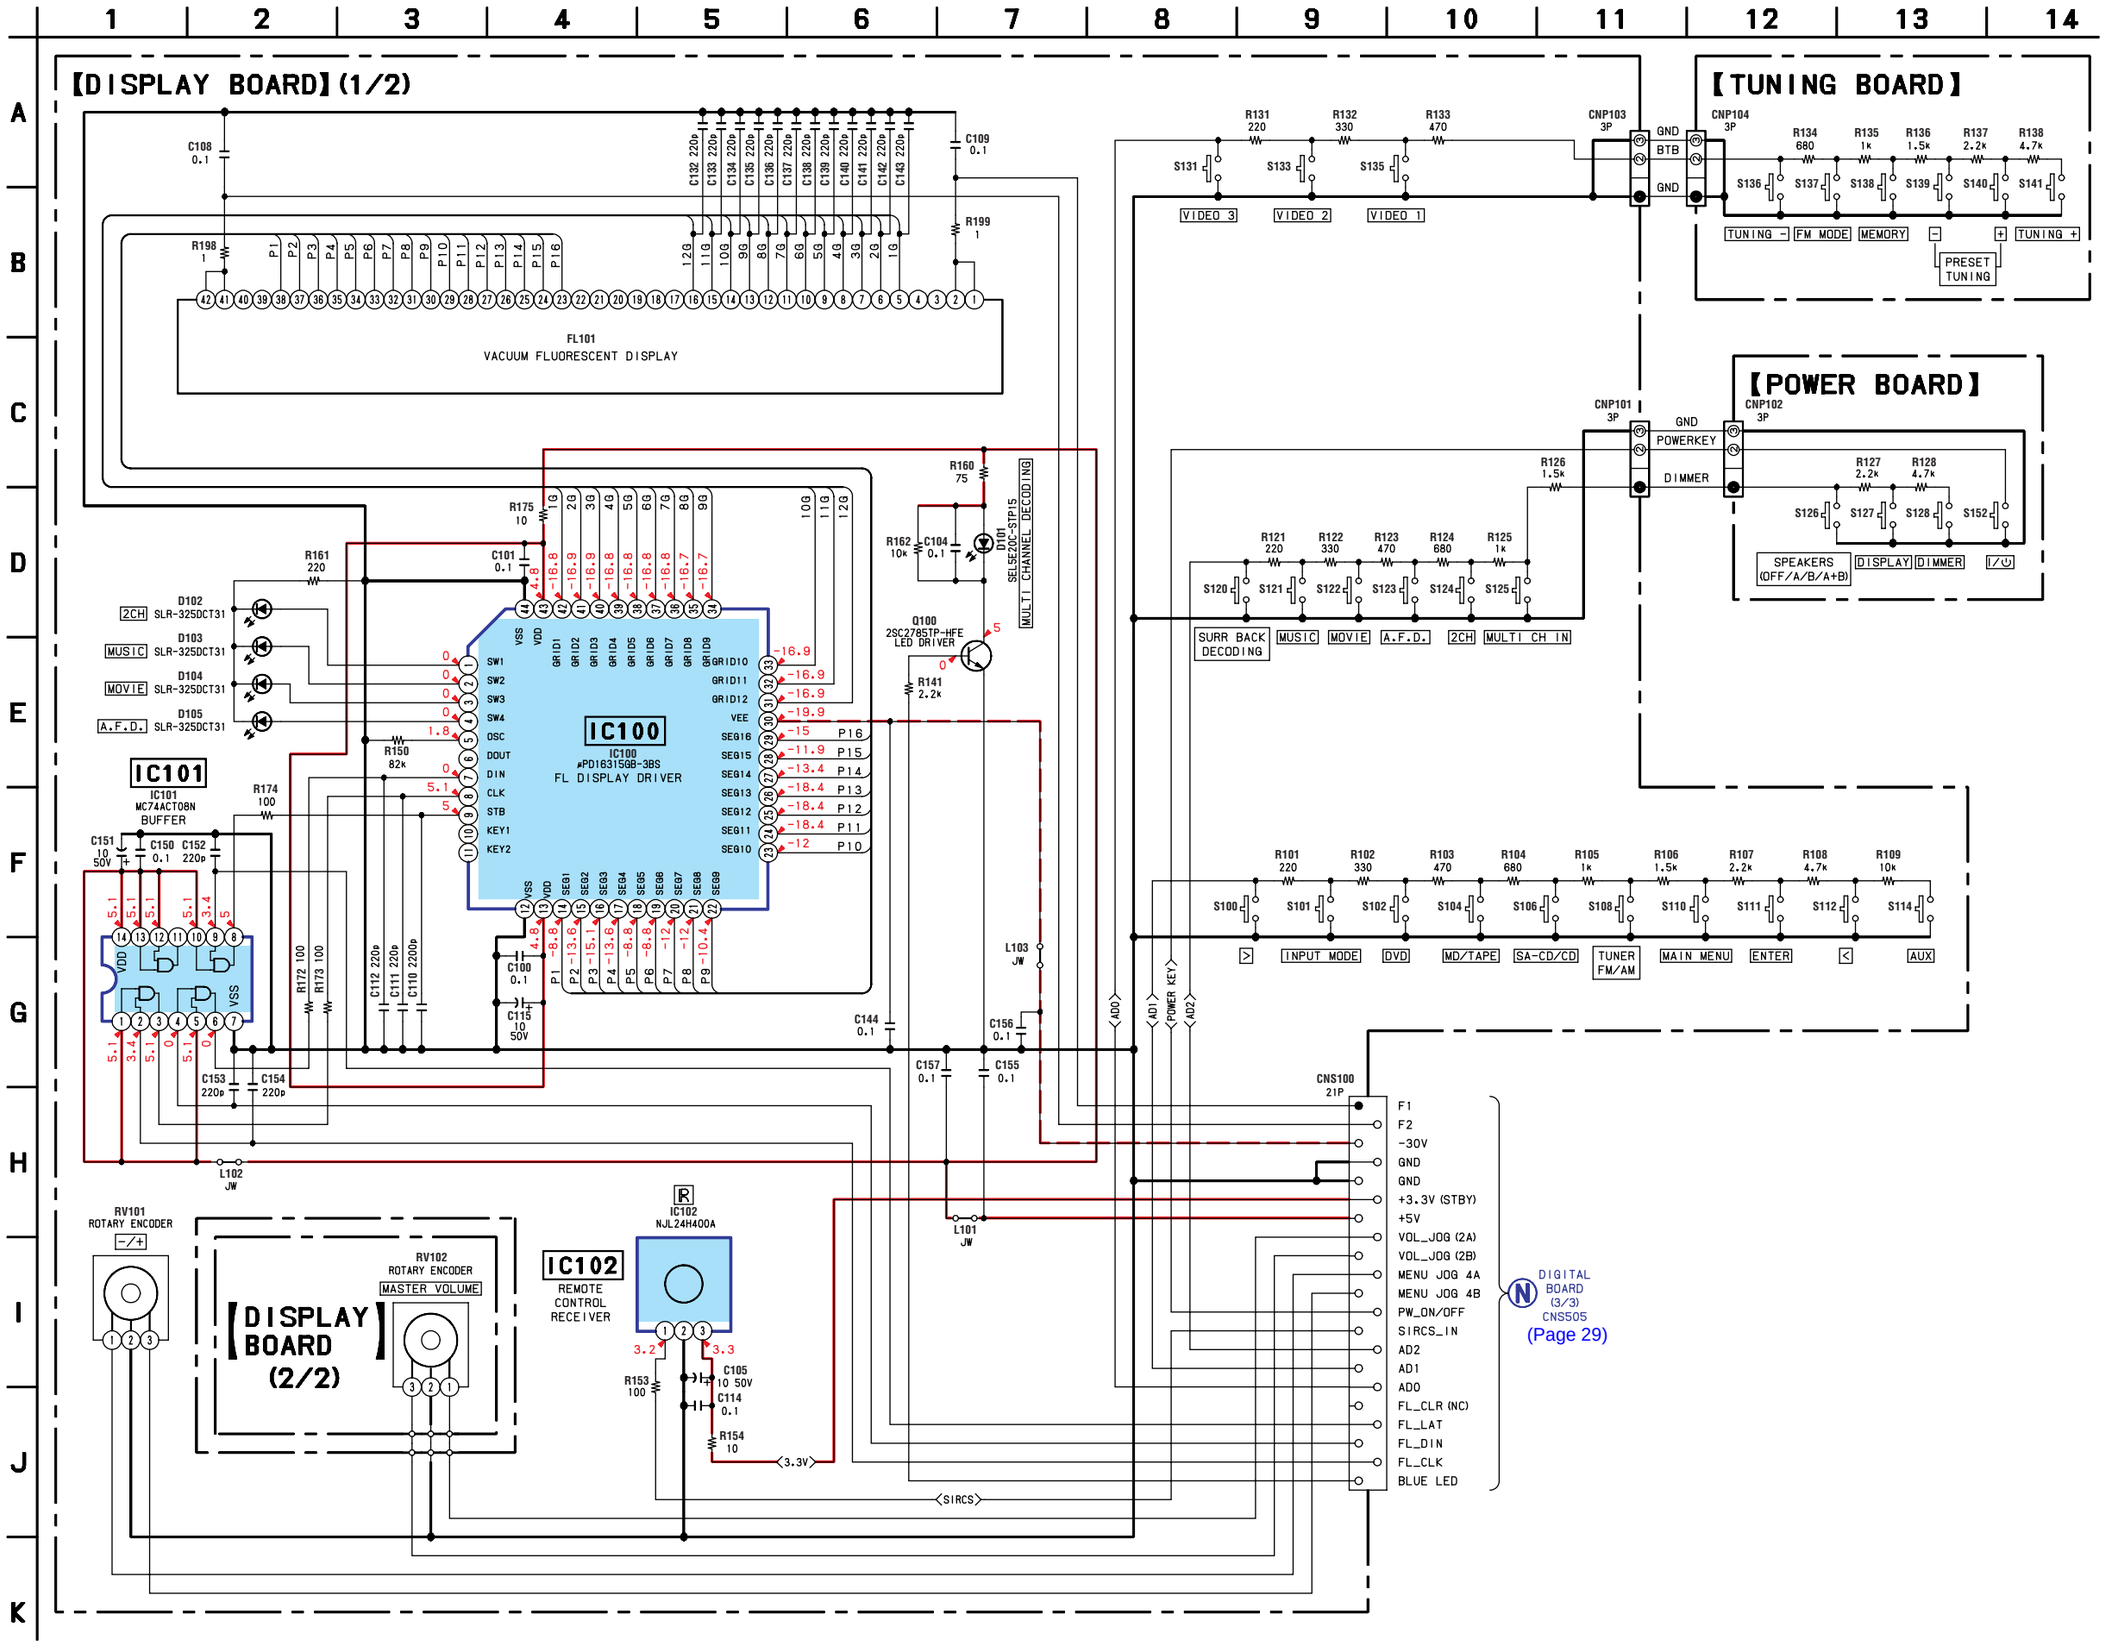

4-24. PRINTED WIRING BOARDS — POWER SECTION — • Refer to page 15 for Circuit Boards Location and page 21 for Common Note on Printed Wiring Boards.

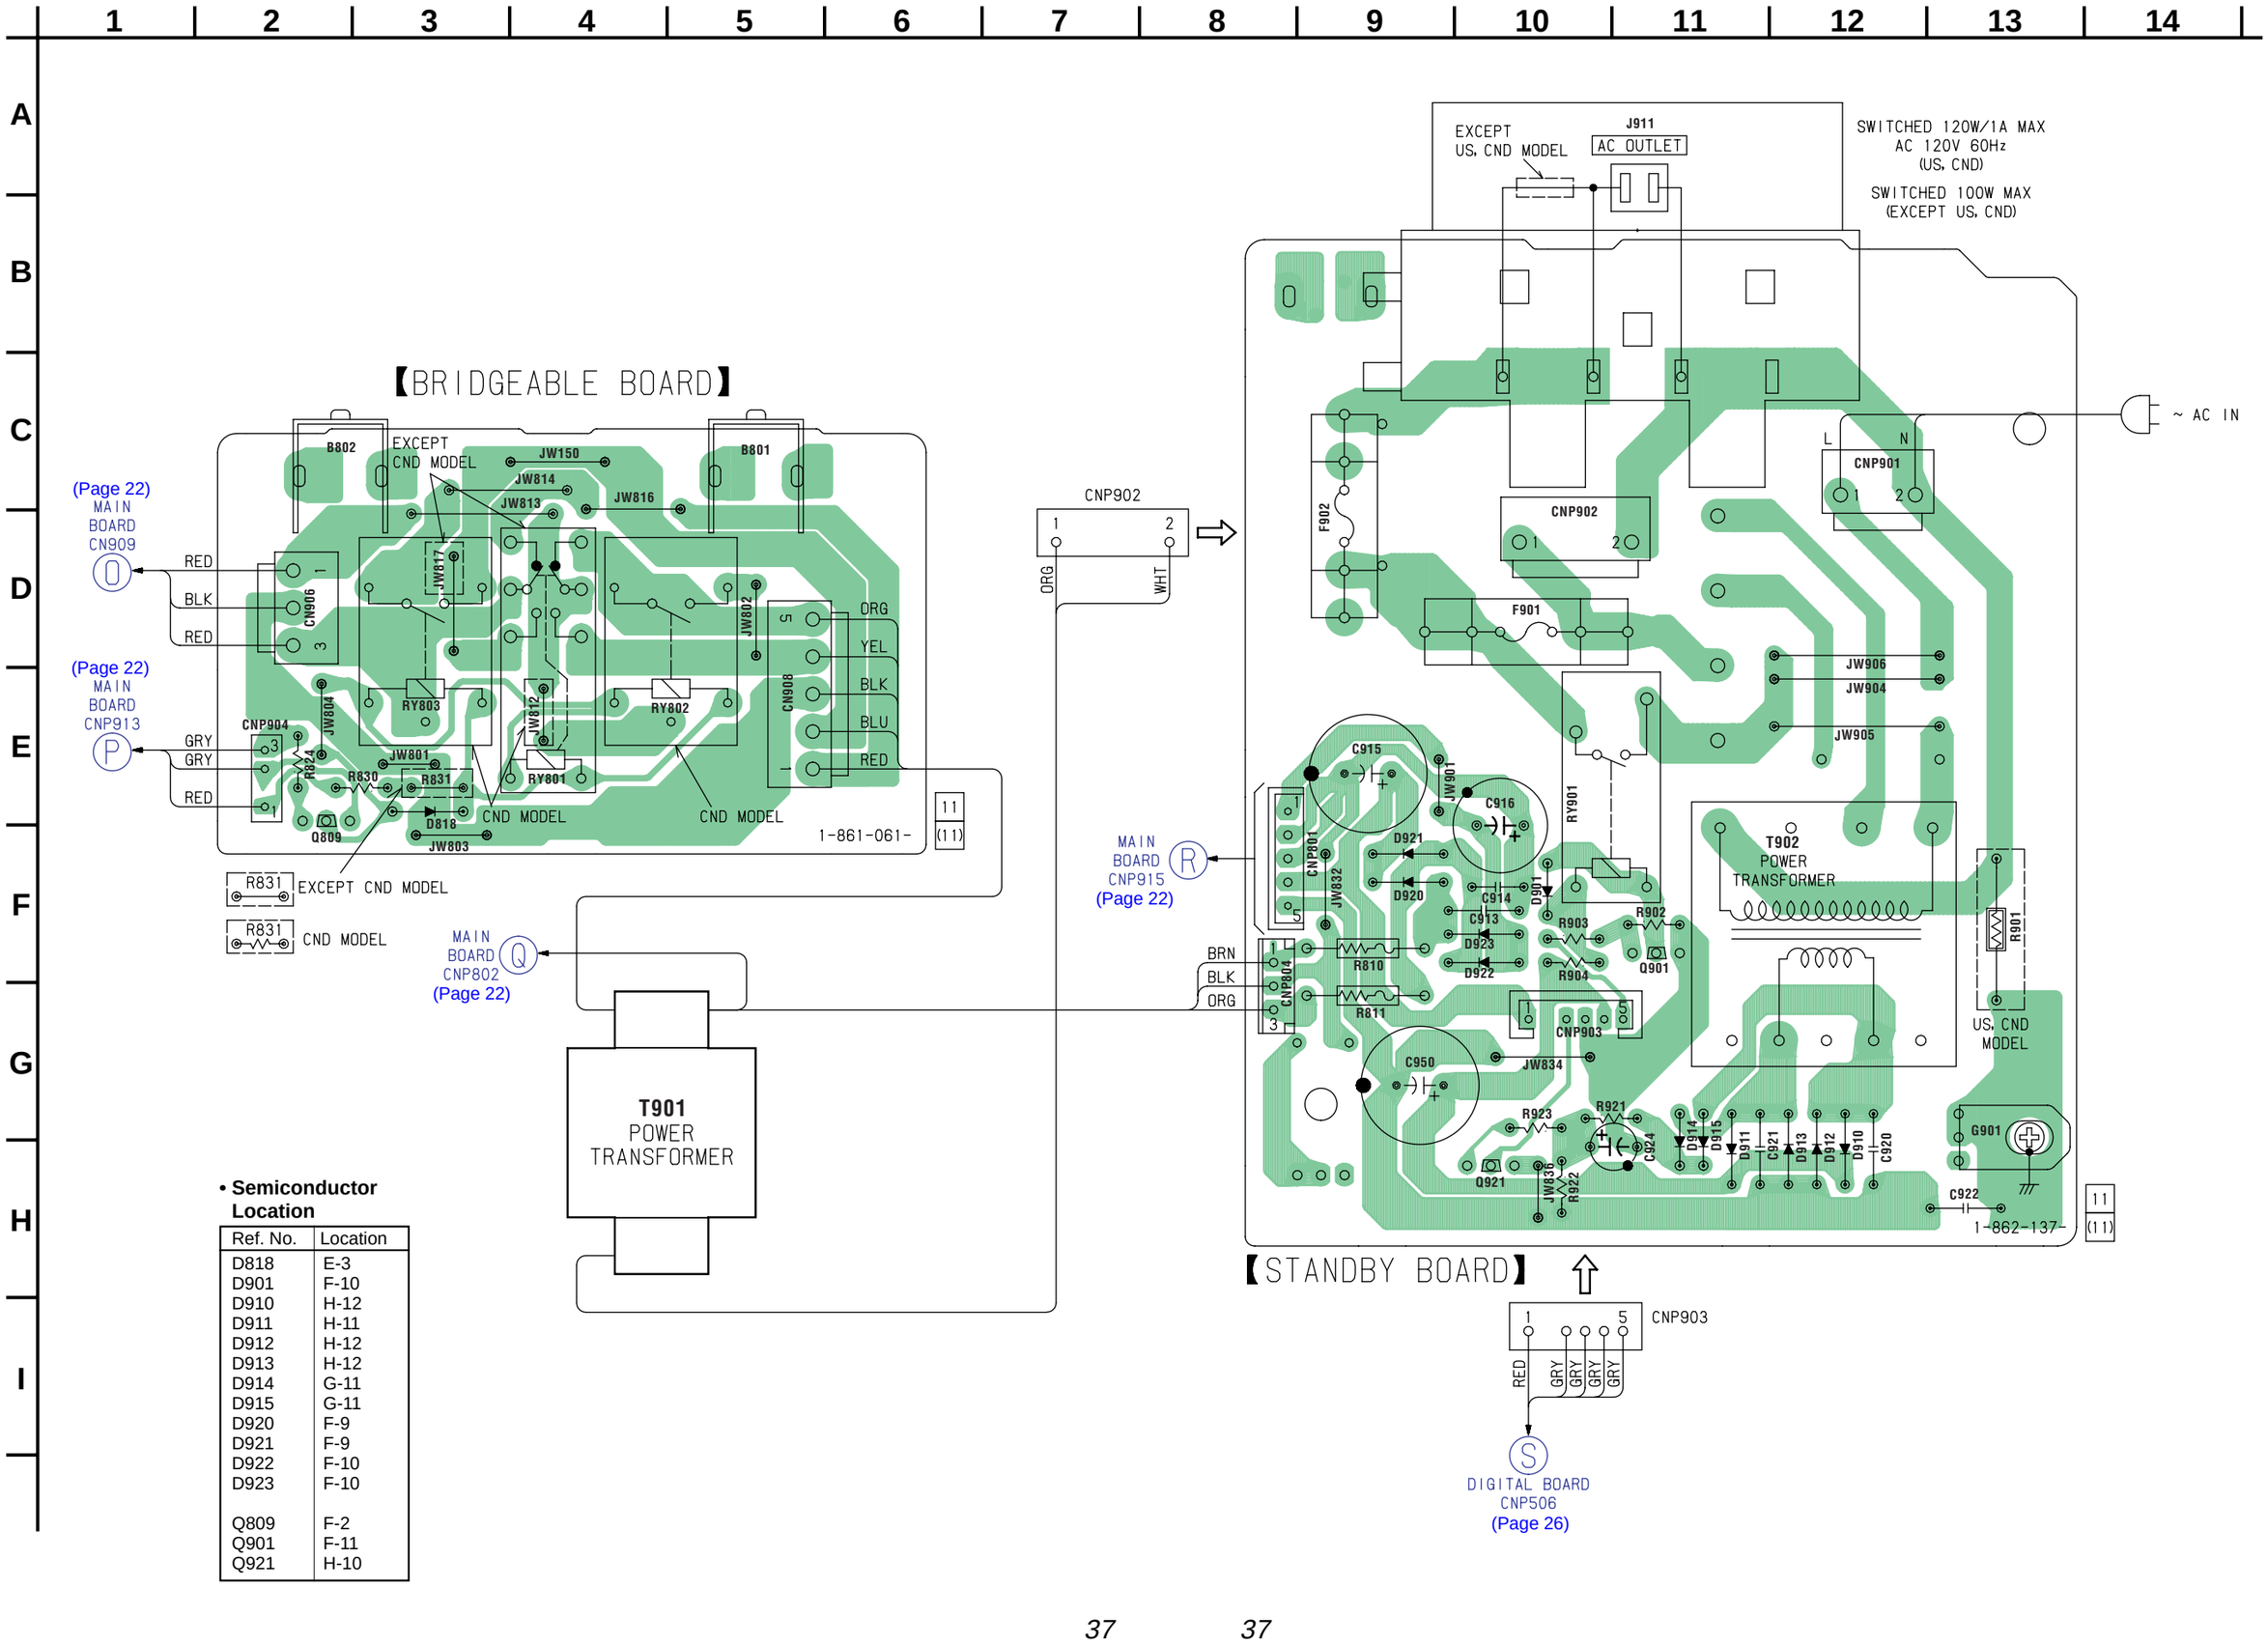

- **Semiconductor Location**

Ref. No.	Location
D818	E-3
D901	F-10
D910	H-12
D911	H-11
D912	H-12
D913	H-12
D914	G-11
D915	G-11
D920	F-9
D921	F-9
D922	F-10
D923	F-10
Q809	F-2
Q901	F-11
Q921	H-10

4-25. SCHEMATIC DIAGRAM — POWER SECTION — • Refer to page 21 for Common Note on Schematic Diagram.

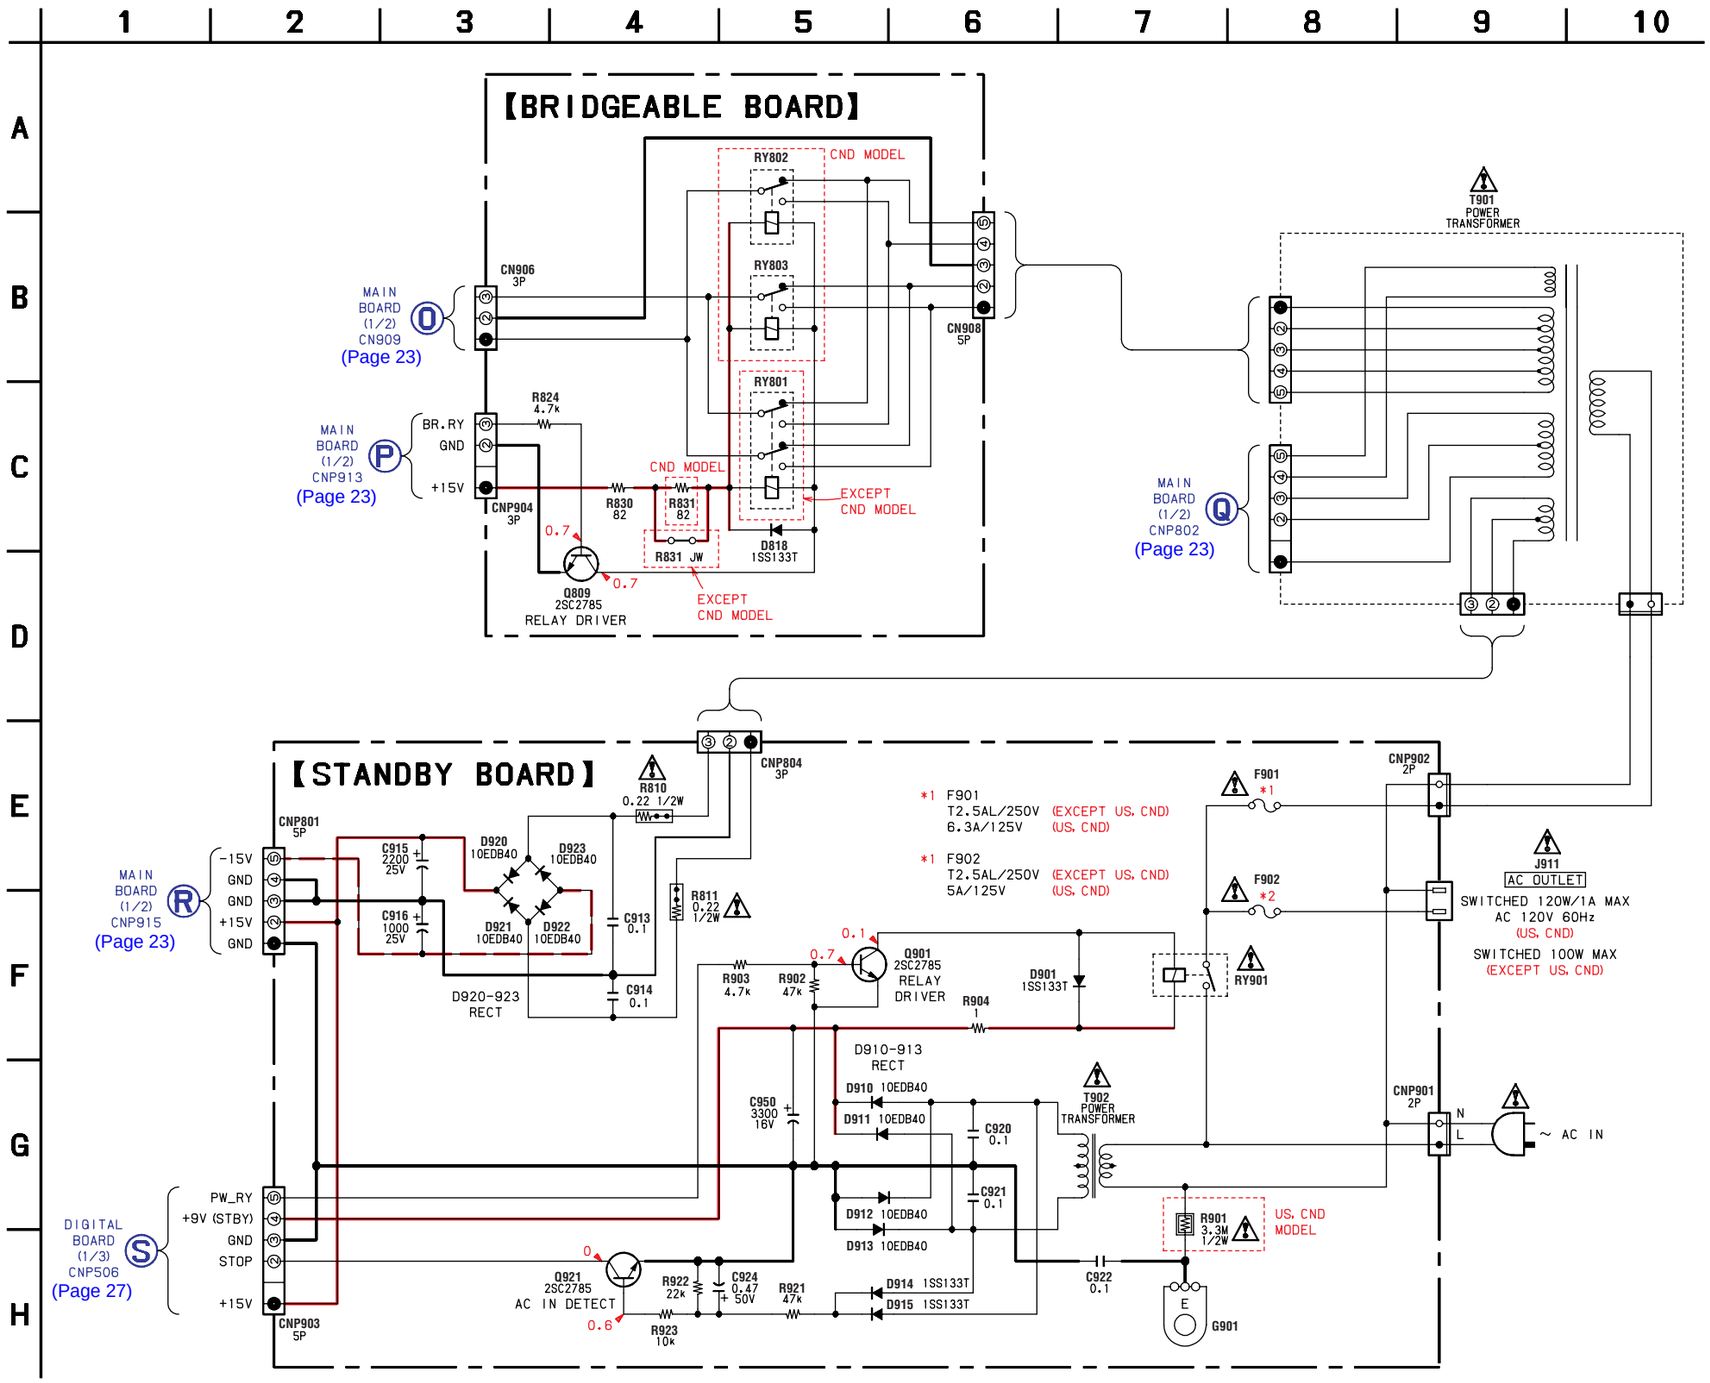

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-26. IC BLOCK DIAGRAMS

IC601 μPC2581V-S (MAIN BOARD (2/2))
IC701 μPC2581V-S (MAIN BOARD (2/2))
IC700 μPC2581V-S (SURR BACK BOARD)

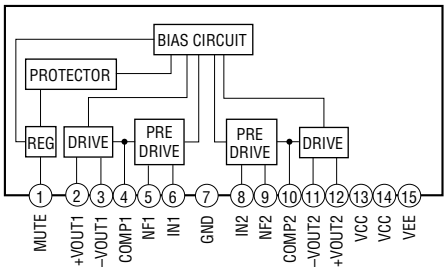

IC501 STK350-230 (MAIN BOARD (2/2))

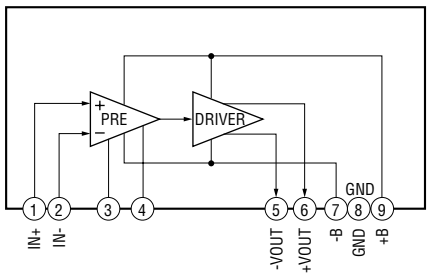

IC1302 TC74ACT153F(EL) (DIGITAL BOARD (1/3))

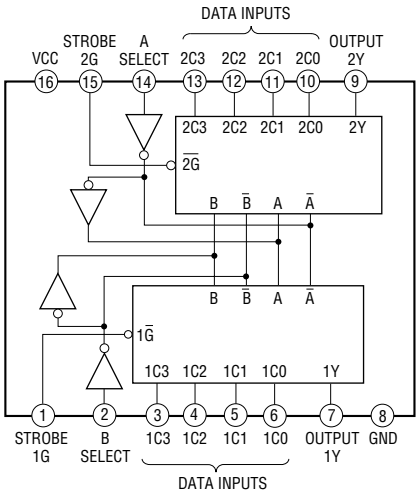

IC1301 LC89056W-E (DIGITAL BOARD (1/3))

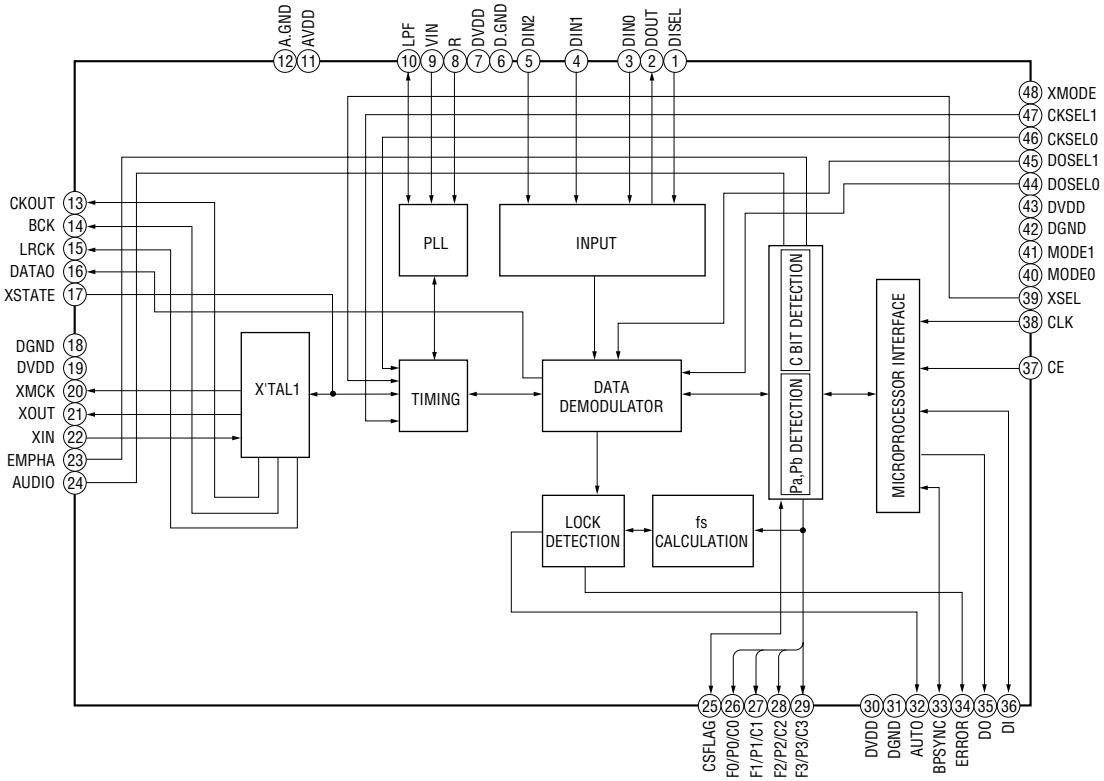

IC1401 AK5380VT-E2 (DIGITAL BOARD (2/3))

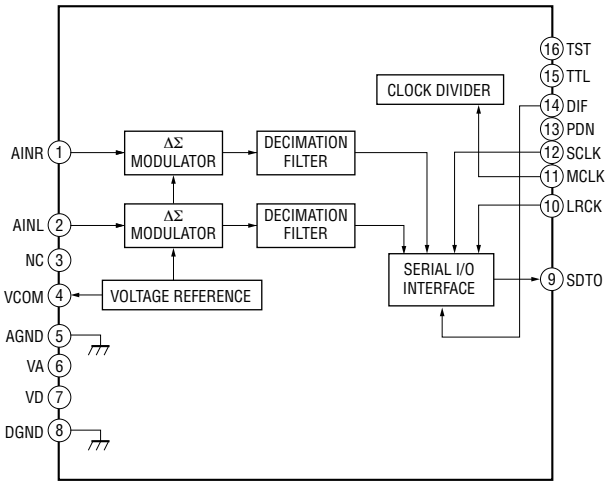

IC1452 AK4355VF-E2 (DIGITAL BOARD (2/3))

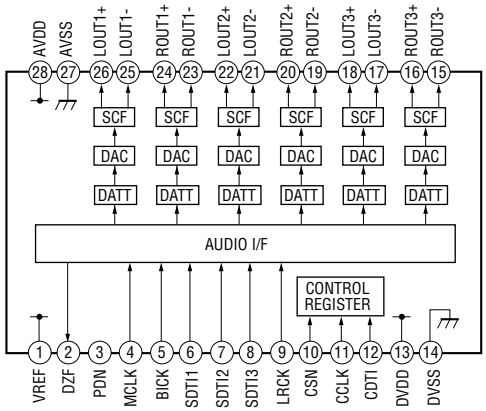

IC1451 AK4381VT-E2 (DIGITAL BOARD (3/3))

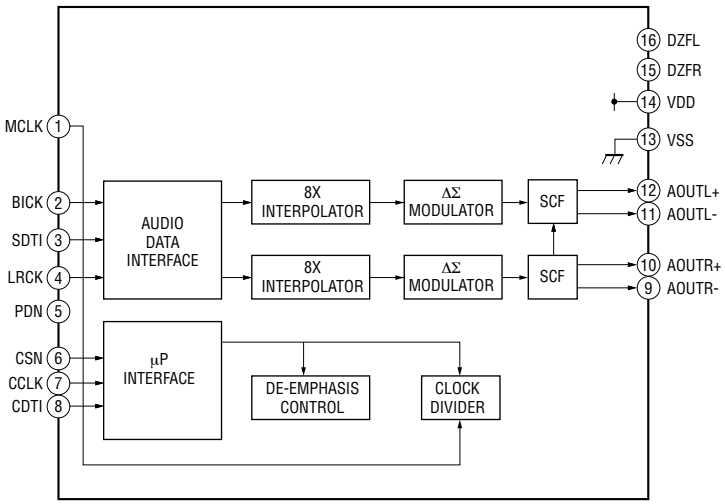

IC203 NJM2595D (VIDEO BOARD)
IC251 NJM2595D (S-VIDEO BOARD)
IC252 NJM2595D (S-VIDEO BOARD)

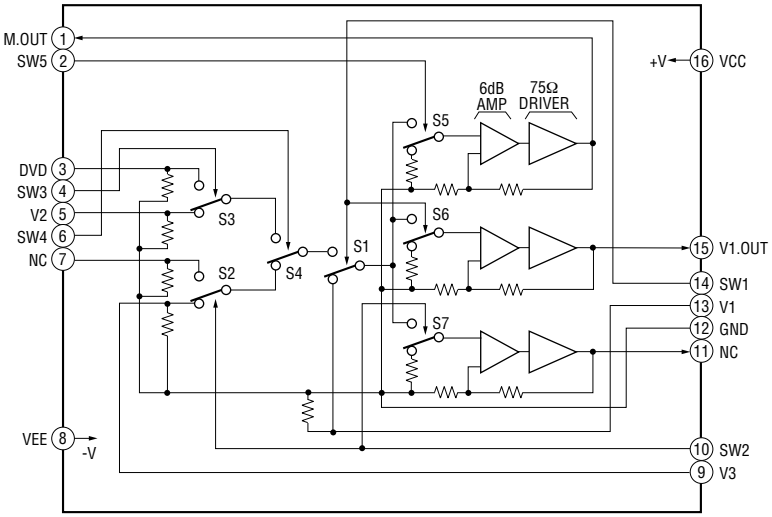

IC302 NJM2581D (VIDEO BOARD)

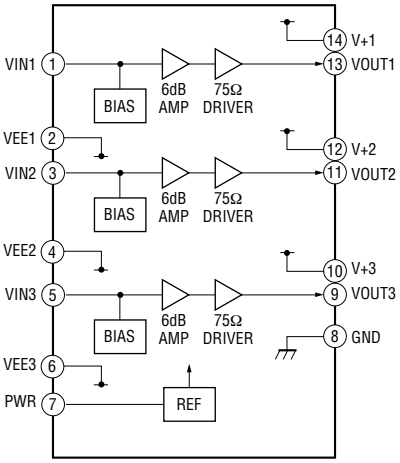

IC301 TC74HC4053AP (VIDEO BOARD)

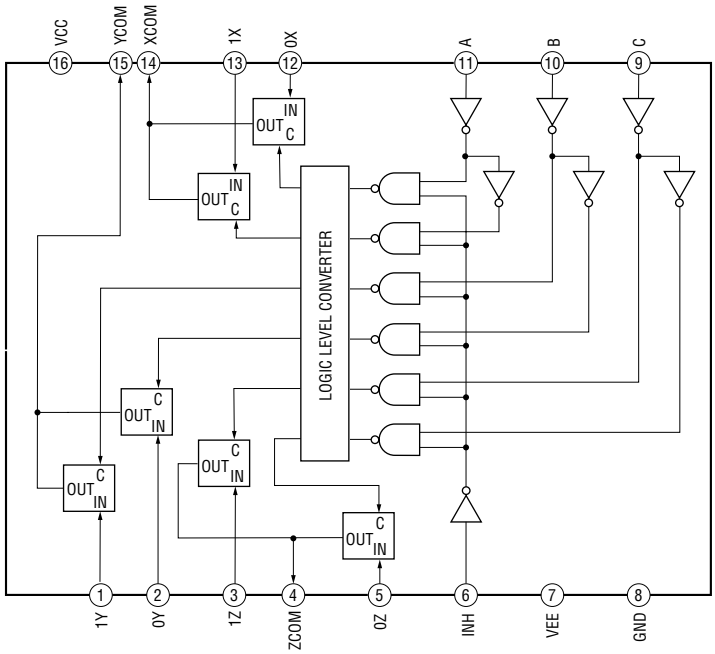

SECTION 5
EXPLODED VIEWS

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
  CND : Canadian model
  AUS : Australian model
  SP : Singapore model
  MY : Malaysia model
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE) ... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Accessories are given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

5-1. CASE SECTION

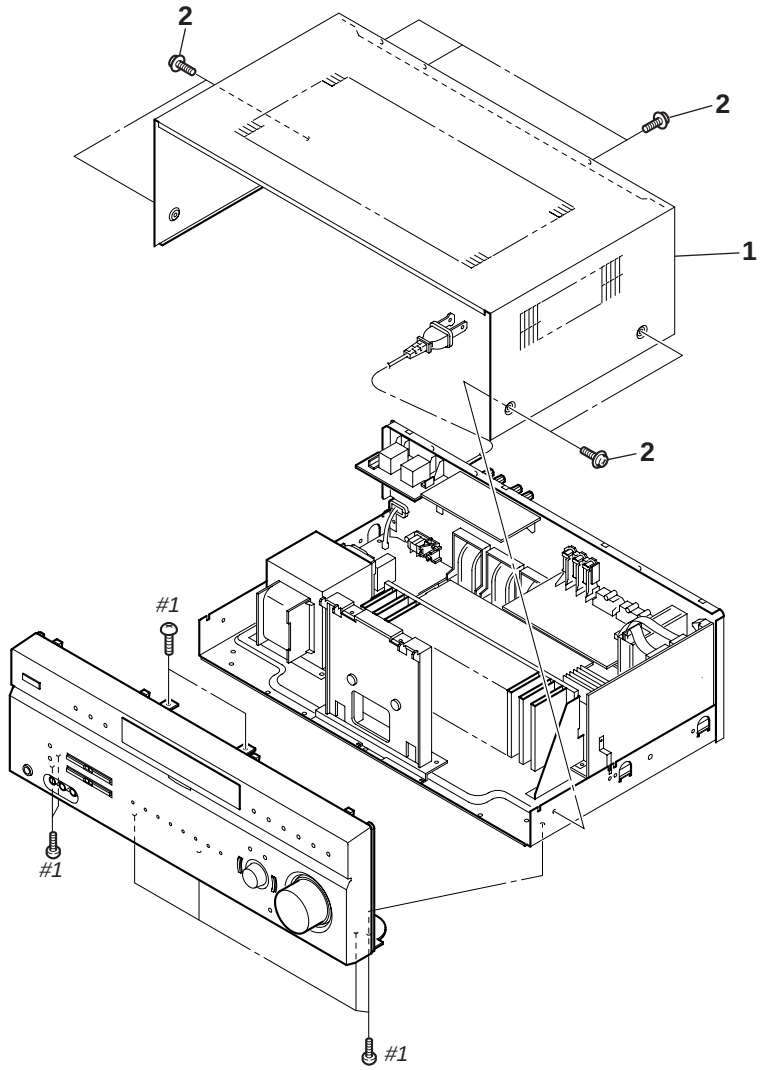

Ref. No.	Part No.	Description	Remark
1	4-232-418-02	CASE (BLACK)...(BLACK)	
1	4-232-418-22	CASE (SILVER)...(SILVER)	
1	4-232-418-43	CASE (GOLD)...(GOLD)	

Ref. No.	Part No.	Description	Remark
2	4-210-291-01	SCREW (CASE 3 TP2) (BLACK)...(BLACK)	
2	4-210-291-11	SCREW (CASE 3 TP2) (SILVER)...(SILVER,GOLD)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

5-2. FRONT PANEL SECTION

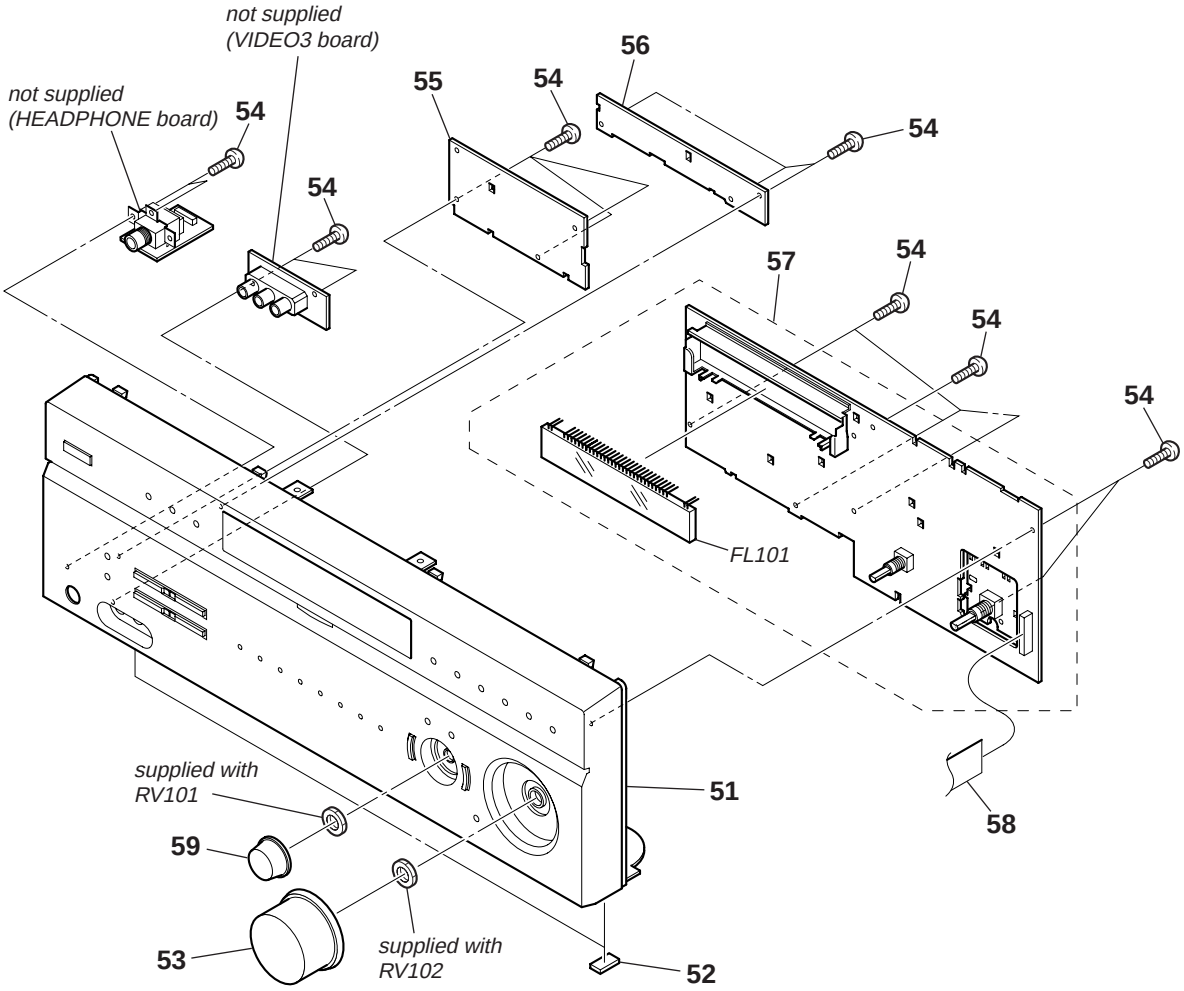

Ref. No.	Part No.	Description	Remark
51	X-4956-182-1	FRONT PANEL ASSY (BLACK)...(BLACK) (US)	
51	X-4956-184-1	FRONT PANEL ASSY (BLACK)...(BLACK) (CND,AUS,SP,MY)	
51	X-4956-427-1	FRONT PANEL ASSY (BLACK)...(BLACK) (AEP,UK)	
51	X-4956-428-1	FRONT PANEL ASSY (SILVER)...(SILVER) (AEP,UK)	
51	X-4956-433-1	FRONT PANEL ASSY (GOLD)...(GOLD)	
51	X-4956-439-1	FRONT PANEL ASSY (SILVER)...(SILVER) (AUS)	
52	4-977-358-01	CUSHION	
53	4-232-113-01	KNOB (VOL) (BLACK)...(BLACK)	
53	4-232-113-12	KNOB (VOL) (SILVER)...(SILVER)	
53	4-232-113-22	KNOB (VOL) (GOLD)...(GOLD)	

Ref. No.	Part No.	Description	Remark
54	4-951-620-01	SCREW (2.6X8), +BVTP	
55	1-861-056-11	TUNING BOARD	
56	1-861-057-11	POWER BOARD	
57	A-4750-808-A	DISPLAY BOARD, COMPLETE	
58	1-773-150-11	WIRE (FLAT TYPE) (21 CORE)	
59	4-252-389-01	KNOB (MENU) (BLACK)...(BLACK)	
59	4-252-389-11	KNOB (MENU) (SILVER)...(SILVER)	
59	4-252-389-21	KNOB (MENU) (GOLD)...(GOLD)	
FL101	1-518-966-11	VACUUM FLUORESCENT DISPLAY	

5-3. BACK PANEL SECTION

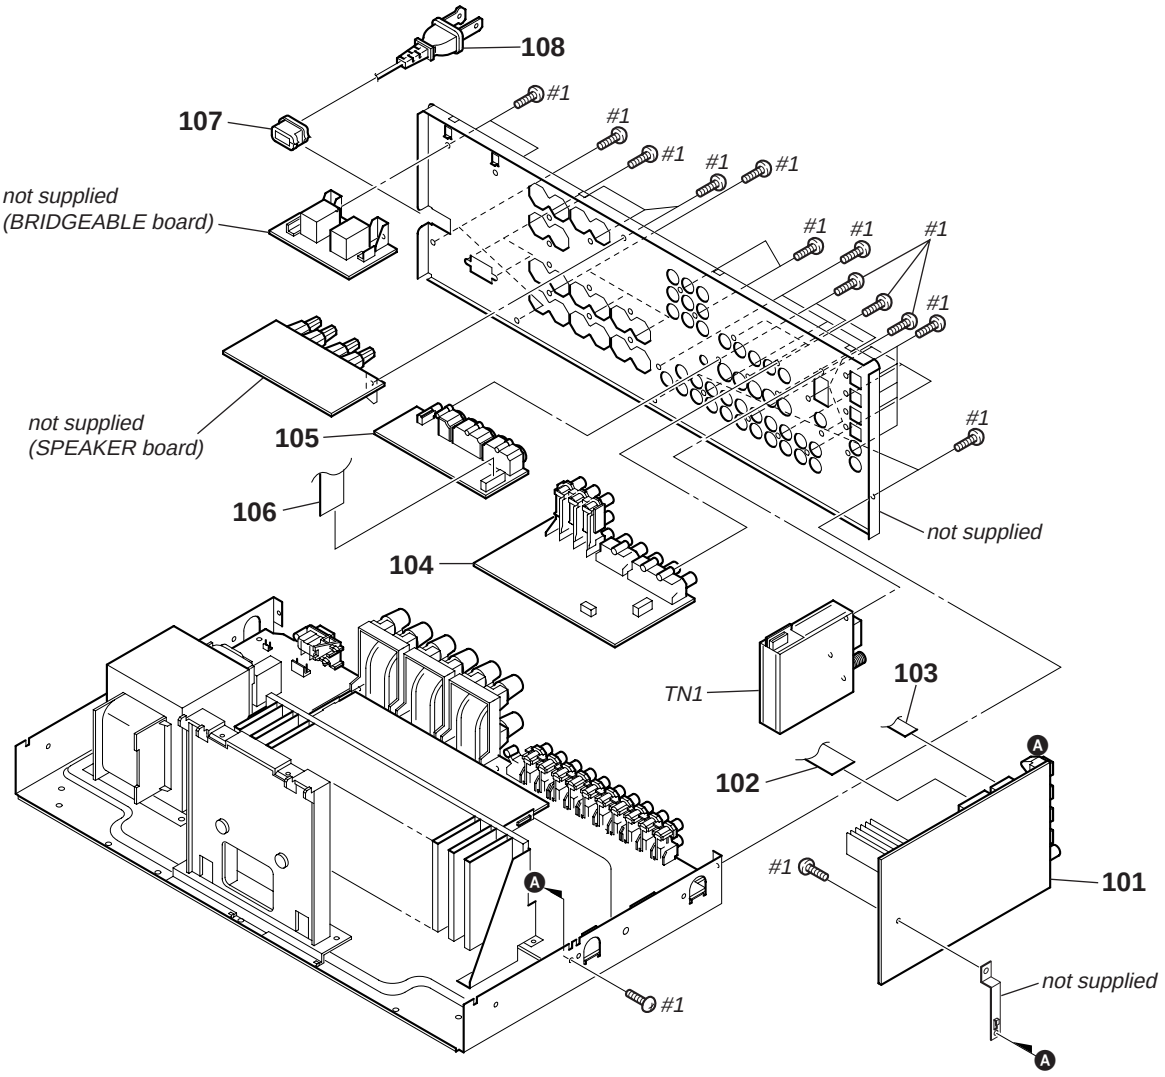

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
101	A-4752-722-A	DIGITAL BOARD, COMPLETE (US,CND)	
101	A-4752-779-A	DIGITAL BOARD, COMPLETE (AEP,UK)	
101	A-4752-786-A	DIGITAL BOARD, COMPLETE (SP,MY)	
101	A-4753-233-A	DIGITAL BOARD, COMPLETE (AUS)	
102	1-769-937-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP,UK)	
102	1-773-001-11	WIRE (FLAT TYPE) (15 CORE) (AEP,UK)	
103	1-769-879-11	WIRE (FLAT TYPE) (7 CORE)	
104	A-4752-720-A	VIDEO BOARD, COMPLETE (US,CND)	
104	A-4752-778-A	VIDEO BOARD, COMPLETE (AEP,UK)	
104	A-4752-785-A	VIDEO BOARD, COMPLETE (AUS,SP,MY)	
105	1-862-139-11	S-VIDEO BOARD	
106	1-769-905-11	WIRE (FLAT TYPE) (9 CORE)	
* 107	3-703-244-00	BUSHING (2104), CORD	
⚠108	1-696-847-22	CORD, POWER (AUS)	
⚠108	1-777-071-23	CORD, POWER (AEP,UK,SP,MY)	
⚠108	1-783-820-11	CORD, POWER (US,CND)	
TN1	1-693-577-21	TUNER PACK (ANTENNA) (US,CND)	
TN1	1-693-578-13	TUNER PACK (ANTENNA) (AEP,UK)	
TN1	1-693-580-24	TUNER PACK (ANTENNA) (AUS,SP,MY)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

5-4. CHASSIS SECTION

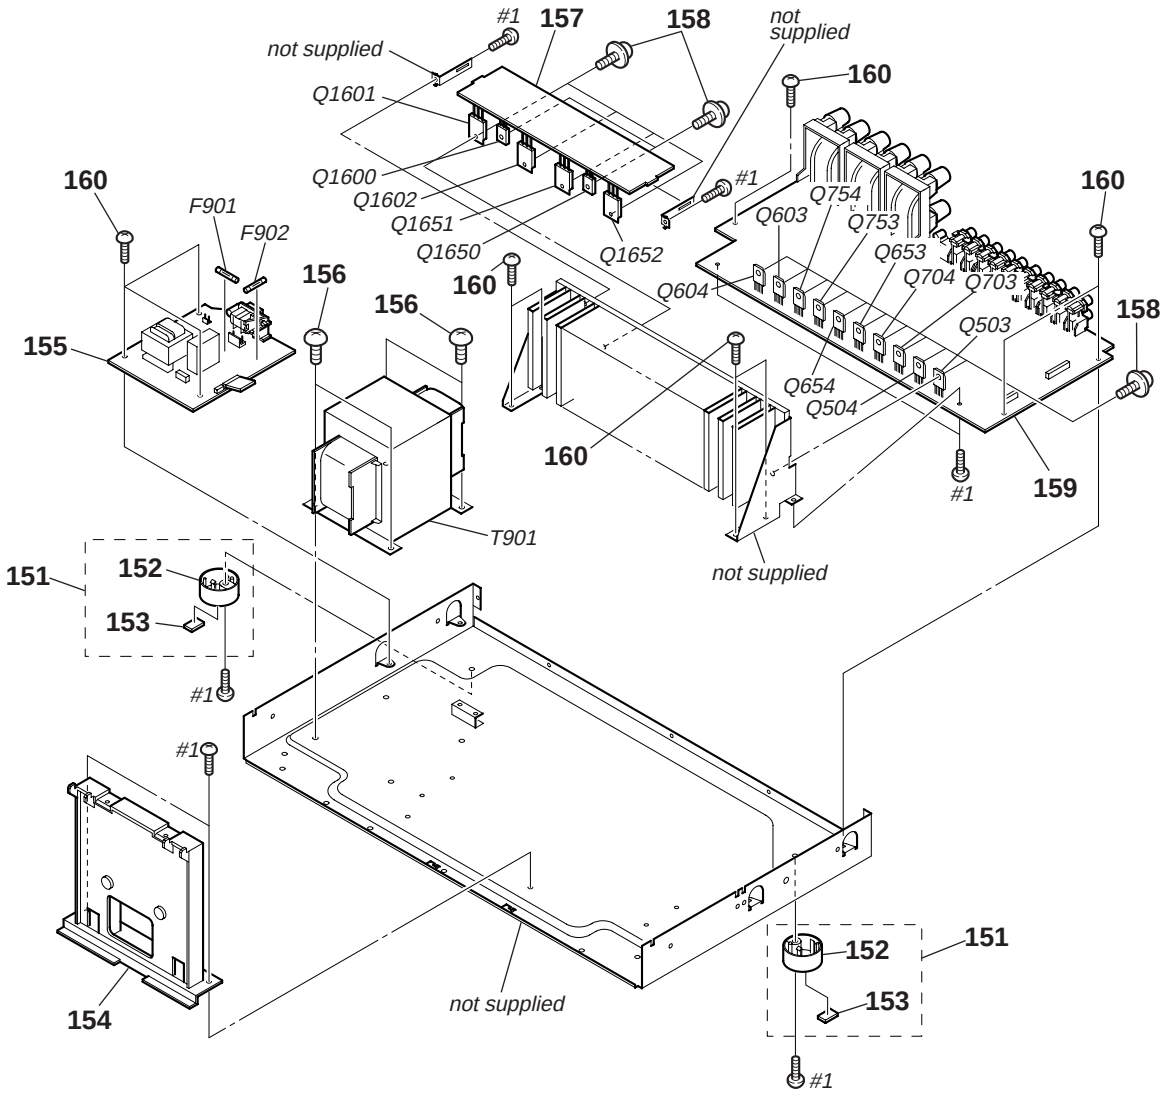

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
151	X-4953-448-1	FOOT ASSY	
152	4-232-237-01	FOOT (DIA.30)	
153	4-977-358-01	CUSHION	
154	4-233-263-01	SUB MOLD (DE9)	
155	A-4752-717-A	STANDBY BOARD, COMPLETE (US,CND)	
155	A-4752-775-A	STANDBY BOARD, COMPLETE (AEP,UK,SP,MY)	
155	A-4752-798-A	STANDBY BOARD, COMPLETE (AUS)	
156	4-249-675-01	+BV SUMITITE S 4X6 ROUND	
157	A-4752-721-A	SURR BACK BOARD, COMPLETE	
158	3-905-609-01	SCREW (TRANSISTOR)	
159	A-4752-716-A	MAIN BOARD, COMPLETE (US,CND)	
159	A-4752-774-A	MAIN BOARD, COMPLETE (AEP,UK)	
159	A-4752-782-A	MAIN BOARD, COMPLETE (SP,MY)	
159	A-4752-797-A	MAIN BOARD, COMPLETE (AUS)	
160	3-970-608-01	SUMITITE (B3), +BV	
⚠F901	1-533-454-12	FUSE, GLASS TUBE (DIA.5) (6.3A/125V) (US,CND)	
⚠F901	1-532-464-32	FUSE (T2.5AL/250V) (EXCEPT US,CND)	
⚠F902	1-533-453-12	FUSE, GLASS TUBE (DIA.5) (5A/125V) (US,CND)	
⚠F902	1-532-464-32	FUSE (T2.5AL/250V) (EXCEPT US,CND)	

Ref. No.	Part No.	Description	Remark
Q503	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q504	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q603	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q604	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q653	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q654	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q703	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q704	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q753	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q754	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q1600	8-729-026-08	TRANSISTOR 2SC4495	
Q1601	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q1602	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q1650	8-729-026-08	TRANSISTOR 2SC4495	
Q1651	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q1652	8-749-010-26	TRANSISTOR MP1620-OPY-M	
⚠T901	1-439-550-11	TRANSFORMER, POWER (EXCEPT US,CND)	
⚠T901	1-439-611-11	TRANSFORMER, POWER (US,CND)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

BRIDGEABLE **DIGITAL**

SECTION 6
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : µ, for example:
  uA.. : µA.. uPA.. : µPA..
  uPB.. : µPB.. uPC.. : µPC.. uPD.. : µPD..
- CAPACITORS
  uF : µF
- COILS
  uH : µH
- Abbreviation
  CND : Canadian model
  AUS : Australian model
  SP : Singapore model
  MY : Malaysia model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
		BRIDGEABLE BOARD			
		**********			
		< CONNECTOR >			
* CN906	1-564-104-00	PIN, CONNECTOR (3.96mm PITCH) 3P			
* CN908	1-564-242-00	PIN, CONNECTOR (3.96mm PITCH) 5P			
		< DIODE >			
D818	8-719-991-33	DIODE 1SS133T-77			
		< TRANSISTOR >			
Q809	8-729-119-79	TRANSISTOR 2SC2785-FEK			
		< RESISTOR >			
R824	1-247-847-11	CARBON	4.7K	5%	1/4W
R830	1-249-404-00	CARBON	82	5%	1/4W
R831	1-249-404-00	CARBON	82	5%	1/4W (CND)
		< RELAY >			
RY801	1-755-013-11	RELAY (EXCEPT CND)			
RY802	1-755-494-11	RELAY (CND)			
RY803	1-755-494-11	RELAY (CND)			
**********					
	A-4752-722-A	DIGITAL BOARD, COMPLETE (US,CND)			
	A-4752-779-A	DIGITAL BOARD, COMPLETE (AEP,UK)			
	A-4752-786-A	DIGITAL BOARD, COMPLETE (SP,MY)			
	A-4753-233-A	DIGITAL BOARD, COMPLETE (AUS)			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< CAPACITOR >			
C1001	1-126-925-11	ELECT	470uF	20%	10V
C1002	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1003	1-162-953-11	CERAMIC CHIP	100PF	5%	50V (US,CND)
C1003	1-162-966-11	CERAMIC CHIP	0.0022uF	10% (EXCEPT US,CND)	50V
C1021	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1022	1-126-925-11	ELECT	470uF	20%	10V
C1031	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1032	1-126-925-11	ELECT	470uF	20%	10V
C1045	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V
C1046	1-164-156-11	CERAMIC CHIP	0.1uF		25V

Ref. No.	Part No.	Description			Remark
C1047	1-126-395-11	ELECT CHIP	22uF	20%	16V
C1063	1-164-156-11	CERAMIC CHIP	0.1uF		25V (AEP,UK)
C1064	1-126-204-11	ELECT CHIP	47uF	20%	16V (AEP,UK)
C1100	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1102	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1103	1-126-204-11	ELECT CHIP	47uF	20%	16V
C1107	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1108	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1118	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1119	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1120	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1121	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1122	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1123	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1124	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1125	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C1126	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C1127	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1128	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1129	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1130	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1131	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1132	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1137	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1138	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1139	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1140	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1141	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1142	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1251	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1252	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1253	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1254	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C1255	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C1299	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1301	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1302	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1303	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1304	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1305	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1306	1-126-204-11	ELECT CHIP	47uF	20%	16V
C1308	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1309	1-162-918-11	CERAMIC CHIP	18PF	5%	50V

Ref. No.	Part No.	Description			Remark
C1310	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C1312	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1313	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1314	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1315	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1316	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1317	1-126-925-11	ELECT	470uF	20%	10V
C1351	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1352	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1353	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1354	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1355	1-126-395-11	ELECT CHIP	22uF	20%	16V
C1356	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1357	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V
C1358	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1359	1-126-916-11	ELECT	1000uF	20%	6.3V
C1360	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C1361	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1362	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1401	1-124-261-00	ELECT	10uF	20%	50V
C1402	1-126-964-11	ELECT	10uF	20%	50V
C1403	1-126-925-11	ELECT	470uF	20%	10V
C1404	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1405	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1406	1-126-925-11	ELECT	470uF	20%	10V
C1407	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1408	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1411	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1412	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1413	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1416	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1417	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1418	1-126-964-11	ELECT	10uF	20%	50V
C1421	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1422	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1423	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1428	1-126-964-11	ELECT	10uF	20%	50V
C1431	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1432	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1433	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1438	1-126-964-11	ELECT	10uF	20%	50V
C1441	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1442	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1443	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1448	1-126-964-11	ELECT	10uF	20%	50V
C1450	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1451	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1452	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1453	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1454	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1455	1-124-779-00	ELECT CHIP	10uF	20%	16V
C1456	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1457	1-124-779-00	ELECT CHIP	10uF	20%	16V
C1458	1-126-964-11	ELECT	10uF	20%	50V
C1459	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1460	1-124-779-00	ELECT CHIP	10uF	20%	16V
C1461	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1462	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1463	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1468	1-126-964-11	ELECT	10uF	20%	50V
C1471	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1472	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1473	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1478	1-126-964-11	ELECT	10uF	20%	50V
C1481	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C1482	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1483	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1487	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1488	1-126-964-11	ELECT	10uF	20%	50V
C1491	1-126-964-11	ELECT	10uF	20%	50V
C1494	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1495	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1496	1-124-779-00	ELECT CHIP	10uF	20%	16V
C1501	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1502	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1503	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1504	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1505	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1506	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1507	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1508	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1509	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1510	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1511	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1513	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1514	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1515	1-126-925-11	ELECT	470uF	20%	10V
C1516	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1517	1-126-925-11	ELECT	470uF	20%	10V
C1518	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1519	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1520	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1521	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C1522	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C1525	1-126-925-11	ELECT	470uF	20%	10V
C1547	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1557	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1566	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1567	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1568	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1569	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1604	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1605	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1620	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1905	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1906	1-126-925-11	ELECT	470uF	20%	10V
C1908	1-126-925-11	ELECT	470uF	20%	10V
C1913	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1914	1-126-204-11	ELECT CHIP	47uF	20%	16V

< CONNECTOR >

CNP503	1-568-826-11	CONNECTOR, FFC 7P
CNP506	1-779-799-11	PIN, CONNECTOR 9P
CNP507	1-784-922-11	PIN, CONNECTOR 5P
CNP510	1-784-923-11	PIN, CONNECTOR 7P
CNS501	1-766-720-41	CONNECTOR, BOARD TO BOARD 17P

DIGITAL

Ref. No.	Part No.	Description	Remark
CNS502	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P	
CNS505	1-568-838-11	CONNECTOR, FFC 21P	
CNS508	1-568-830-11	CONNECTOR, FFC 11P (EXCEPT AEP,UK)	
CNS508	1-784-776-11	CONNECTOR, FFC 15P (AEP,UK)	
CNS509	1-568-826-11	CONNECTOR, FFC 7P	
		< DIODE >	
D1003	8-719-049-09	DIODE 1SS367-T3SONY	
D1004	8-719-049-09	DIODE 1SS367-T3SONY	
D1102	8-719-016-74	DIODE 1SS352 (US,CND)	
D1102	8-719-988-61	DIODE 1SS355TE-17 (AUS,SP,MY)	
D1103	8-719-988-61	DIODE 1SS355TE-17	
D1105	8-719-988-61	DIODE 1SS355TE-17	
D1106	8-719-988-61	DIODE 1SS355TE-17	
D1107	8-719-988-61	DIODE 1SS355TE-17	
D1108	8-719-988-61	DIODE 1SS355TE-17	
D1110	8-719-988-61	DIODE 1SS355TE-17	
D1111	8-719-988-61	DIODE 1SS355TE-17	
D1301	8-719-988-61	DIODE 1SS355TE-17	
D1302	8-719-016-74	DIODE 1SS352	
		< FERRITE BEAD >	
FB1101	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1302	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1305	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1306	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1309	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1405	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1406	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1451	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1452	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1453	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1501	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1502	1-414-235-22	INDUCTOR, FERRITE BEAD	
FB1503	1-414-235-22	INDUCTOR, FERRITE BEAD	
		< IC >	
IC1001	8-759-231-53	IC TA7805S	
IC1031	8-759-450-47	IC BA05T	
IC1071	6-702-771-01	IC TA78033LS (AEP,UK)	
IC1101	6-804-384-01	IC MB90478PF-G-183-BNDE1	
IC1103	8-759-242-70	IC TC7WU04F	
IC1111	6-702-913-01	IC S-80929CNMC-G8ZT2G	
IC1131	6-704-004-01	IC BR24L16F-WE2	
IC1301	8-759-825-15	IC LC89056W-E	
IC1302	8-759-595-15	IC TC74ACT153F(EL)	
IC1303	8-759-242-70	IC TC7WU04F	
IC1351	6-600-014-01	IC TORX141L (DIGITAL VIDEO 2 IN (OPTICAL))	
IC1352	6-600-014-01	IC TORX141L (DIGITAL MD/TAPE IN (OPTICAL))	
IC1353	6-600-012-11	IC TOTX141L(RED) (DIGITAL MD/TAPE OUT (OPTICAL))	
IC1354	6-600-014-01	IC TORX141L (DIGITAL SA-CD/CD IN (OPTICAL))	
IC1401	6-702-527-01	IC AK5380VT-E2	
IC1402	8-759-710-97	IC NJM4565M-D	
IC1403	8-759-710-97	IC NJM4565M-D	
IC1404	8-759-710-97	IC NJM4565M-D	
IC1405	8-759-710-97	IC NJM4565M-D	
IC1406	8-759-710-97	IC NJM4565M-D	
IC1451	6-703-704-01	IC AK4381VT-E2	
IC1452	6-703-564-01	IC AK4355VF-E2	
IC1501	6-702-047-01	IC CXD9718Q	
IC1502	6-704-037-01	IC IC61LV6416-15TG	
IC1503	8-759-546-74	IC TC7WH157FU(TE12R)	
IC1504	8-759-546-74	IC TC7WH157FU(TE12R) (US,CND,AEP,UK)	
IC1901	6-701-887-02	IC SI-3004KWF	
IC1902	8-759-231-57	IC TA7810S	
IC1904	6-705-463-01	IC BA33BC0T	
		< JACK >	
J1301	1-818-314-11	JACK, PIN 2P (DIGITAL DVD IN (COAXIAL), SA-CD/CD IN (COAXIAL))	
		< JUMPER RESISTOR >	
JR1002	1-211-950-11	SHORT CHIP 0	
JR1007	1-211-950-11	SHORT CHIP 0	
JR1008	1-211-950-11	SHORT CHIP 0	
JR1009	1-211-950-11	SHORT CHIP 0	
JR1010	1-211-950-11	SHORT CHIP 0	
JR1020	1-216-864-11	SHORT CHIP 0	
JR1102	1-216-864-11	SHORT CHIP 0	
JR1202	1-216-864-11	SHORT CHIP 0 (EXCEPT AEP,UK)	
		< FERRITE BEAD >	
JR1511	1-414-235-22	INDUCTOR, FERRITE BEAD	
		< TRANSISTOR >	
Q1102	8-729-230-49	TRANSISTOR 2SC2712-YG (EXCEPT AEP,UK)	
Q1103	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q1104	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q1105	8-729-230-49	TRANSISTOR 2SC2712-YG	
		< RESISTOR >	
R1035	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R1039	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R1041	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1042	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1044	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1049	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R1050	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R1051	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R1055	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1056	1-216-854-11	METAL CHIP 560K 5% 1/10W	
R1057	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R1058	1-216-813-11	METAL CHIP 220 5% 1/10W (AEP,UK)	
R1059	1-216-813-11	METAL CHIP 220 5% 1/10W (AEP,UK)	
R1060	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R1065	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1066	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1067	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1068	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1071	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
R1072	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	

Ref. No.	Part No.	Description			Remark
R1073	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1075	1-216-809-11	METAL CHIP	100	5%	1/10W
R1076	1-216-809-11	METAL CHIP	100	5%	1/10W
R1077	1-216-809-11	METAL CHIP	100	5%	1/10W
R1078	1-216-809-11	METAL CHIP	100	5%	1/10W
R1079	1-216-833-11	METAL CHIP	10K	5%	1/10W (AEP,UK)
R1082	1-216-809-11	METAL CHIP	100	5%	1/10W
R1083	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1085	1-216-809-11	METAL CHIP	100	5%	1/10W
R1086	1-216-809-11	METAL CHIP	100	5%	1/10W
R1088	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1093	1-216-833-11	METAL CHIP	10K	5%	1/10W (EXCEPT AEP,UK)
R1094	1-216-833-11	METAL CHIP	10K	5%	1/10W (EXCEPT AEP,UK)
R1095	1-216-833-11	METAL CHIP	10K	5%	1/10W (EXCEPT AEP,UK)
R1096	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1097	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1098	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1099	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1106	1-216-809-11	METAL CHIP	100	5%	1/10W
R1107	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1108	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1109	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1110	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1111	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1112	1-216-809-11	METAL CHIP	100	5%	1/10W
R1113	1-216-809-11	METAL CHIP	100	5%	1/10W
R1114	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1115	1-216-809-11	METAL CHIP	100	5%	1/10W
R1117	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1118	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1119	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1120	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1121	1-216-809-11	METAL CHIP	100	5%	1/10W
R1122	1-216-809-11	METAL CHIP	100	5%	1/10W
R1123	1-216-809-11	METAL CHIP	100	5%	1/10W
R1124	1-216-809-11	METAL CHIP	100	5%	1/10W
R1127	1-216-809-11	METAL CHIP	100	5%	1/10W
R1128	1-216-809-11	METAL CHIP	100	5%	1/10W
R1129	1-216-809-11	METAL CHIP	100	5%	1/10W
R1134	1-216-809-11	METAL CHIP	100	5%	1/10W
R1135	1-216-809-11	METAL CHIP	100	5%	1/10W
R1136	1-216-809-11	METAL CHIP	100	5%	1/10W
R1137	1-216-809-11	METAL CHIP	100	5%	1/10W
R1139	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1140	1-216-809-11	METAL CHIP	100	5%	1/10W
R1142	1-216-809-11	METAL CHIP	100	5%	1/10W
R1143	1-216-809-11	METAL CHIP	100	5%	1/10W
R1144	1-216-809-11	METAL CHIP	100	5%	1/10W
R1145	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1146	1-216-830-11	METAL CHIP	5.6K	5%	1/10W (EXCEPT AEP,UK)
R1147	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1148	1-216-797-11	METAL CHIP	10	5%	1/10W (EXCEPT AEP,UK)
R1149	1-216-809-11	METAL CHIP	100	5%	1/10W
R1150	1-216-809-11	METAL CHIP	100	5%	1/10W
R1151	1-216-809-11	METAL CHIP	100	5%	1/10W
R1152	1-216-809-11	METAL CHIP	100	5%	1/10W
R1153	1-216-809-11	METAL CHIP	100	5%	1/10W
R1154	1-216-809-11	METAL CHIP	100	5%	1/10W
R1155	1-216-809-11	METAL CHIP	100	5%	1/10W
R1156	1-216-809-11	METAL CHIP	100	5%	1/10W
R1158	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1159	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1160	1-216-809-11	METAL CHIP	100	5%	1/10W
R1161	1-216-809-11	METAL CHIP	100	5%	1/10W
R1162	1-216-809-11	METAL CHIP	100	5%	1/10W
R1163	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1164	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1167	1-216-809-11	METAL CHIP	100	5%	1/10W
R1168	1-216-809-11	METAL CHIP	100	5%	1/10W
R1169	1-216-809-11	METAL CHIP	100	5%	1/10W
R1175	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP,UK)
R1176	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1177	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1178	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1179	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1180	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1181	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1182	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1185	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1186	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1187	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1189	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1190	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1191	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1192	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1193	1-216-833-11	METAL CHIP	10K	5%	1/10W (AUS)
R1193	1-216-841-11	METAL CHIP	47K	5%	1/10W (AEP,UK,SP,MY)
R1194	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (AEP,UK)
R1194	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (SP,MY)
R1194	1-216-841-11	METAL CHIP	47K	5%	1/10W (AUS)
R1194	1-216-864-11	SHORT CHIP	0 (US,CND)		
R1201	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1251	1-216-840-11	METAL CHIP	39K	5%	1/10W
R1252	1-216-840-11	METAL CHIP	39K	5%	1/10W
R1260	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1261	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1301	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R1302	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1303	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1304	1-216-809-11	METAL CHIP	100	5%	1/10W
R1305	1-216-817-11	METAL CHIP	470	5%	1/10W
R1306	1-216-801-11	METAL CHIP	22	5%	1/10W
R1307	1-216-809-11	METAL CHIP	100	5%	1/10W
R1308	1-216-809-11	METAL CHIP	100	5%	1/10W
R1309	1-216-809-11	METAL CHIP	100	5%	1/10W

DIGITAL

Ref. No.	Part No.	Description			Remark
R1310	1-216-857-11	METAL CHIP	1M	5%	1/10W
R1311	1-216-809-11	METAL CHIP	100	5%	1/10W
R1312	1-216-809-11	METAL CHIP	100	5%	1/10W
R1313	1-216-809-11	METAL CHIP	100	5%	1/10W
R1314	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1315	1-216-809-11	METAL CHIP	100	5%	1/10W
R1316	1-216-809-11	METAL CHIP	100	5%	1/10W
R1318	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1351	1-216-809-11	METAL CHIP	100	5%	1/10W
R1352	1-216-809-11	METAL CHIP	100	5%	1/10W
R1353	1-216-809-11	METAL CHIP	100	5%	1/10W
R1354	1-216-809-11	METAL CHIP	100	5%	1/10W
R1355	1-218-285-11	METAL CHIP	75	5%	1/10W
R1356	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1357	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1358	1-216-854-11	METAL CHIP	560K	5%	1/10W
R1359	1-216-809-11	METAL CHIP	100	5%	1/10W
R1360	1-216-809-11	METAL CHIP	100	5%	1/10W
R1362	1-216-809-11	METAL CHIP	100	5%	1/10W
R1366	1-218-285-11	METAL CHIP	75	5%	1/10W
R1402	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1403	1-216-809-11	METAL CHIP	100	5%	1/10W
R1404	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1405	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1406	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1407	1-216-809-11	METAL CHIP	100	5%	1/10W
R1408	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1409	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1410	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R1411	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R1412	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1413	1-216-812-11	METAL CHIP	180	5%	1/10W
R1414	1-216-812-11	METAL CHIP	180	5%	1/10W
R1415	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1416	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1420	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1421	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1422	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1423	1-216-812-11	METAL CHIP	180	5%	1/10W
R1424	1-216-812-11	METAL CHIP	180	5%	1/10W
R1425	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1426	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1430	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1431	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1432	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1433	1-216-812-11	METAL CHIP	180	5%	1/10W
R1434	1-216-812-11	METAL CHIP	180	5%	1/10W
R1435	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1436	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1440	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1441	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1442	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1443	1-216-812-11	METAL CHIP	180	5%	1/10W
R1444	1-216-812-11	METAL CHIP	180	5%	1/10W
R1445	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1446	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1450	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R1451	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R1452	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1453	1-216-812-11	METAL CHIP	180	5%	1/10W
R1454	1-216-812-11	METAL CHIP	180	5%	1/10W
R1455	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1456	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1460	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1461	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1462	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1463	1-216-812-11	METAL CHIP	180	5%	1/10W
R1464	1-216-812-11	METAL CHIP	180	5%	1/10W
R1465	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1466	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1470	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1471	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1472	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1473	1-216-812-11	METAL CHIP	180	5%	1/10W
R1474	1-216-812-11	METAL CHIP	180	5%	1/10W
R1475	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1476	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1480	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1481	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1482	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1483	1-216-812-11	METAL CHIP	180	5%	1/10W
R1484	1-216-812-11	METAL CHIP	180	5%	1/10W
R1485	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1486	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1492	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1493	1-216-809-11	METAL CHIP	100	5%	1/10W
R1494	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1501	1-216-809-11	METAL CHIP	100	5%	1/10W
R1502	1-216-809-11	METAL CHIP	100	5%	1/10W
R1503	1-216-813-11	METAL CHIP	220	5%	1/10W
R1504	1-216-809-11	METAL CHIP	100	5%	1/10W
R1505	1-216-809-11	METAL CHIP	100	5%	1/10W
R1506	1-216-809-11	METAL CHIP	100	5%	1/10W
R1507	1-216-809-11	METAL CHIP	100	5%	1/10W
R1508	1-216-809-11	METAL CHIP	100	5%	1/10W
R1509	1-216-809-11	METAL CHIP	100	5%	1/10W
R1510	1-216-809-11	METAL CHIP	100	5%	1/10W
R1511	1-216-809-11	METAL CHIP	100	5%	1/10W
R1512	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1513	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1514	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1515	1-216-857-11	METAL CHIP	1M	5%	1/10W
R1517	1-216-813-11	METAL CHIP	220	5%	1/10W
R1518	1-216-813-11	METAL CHIP	220	5%	1/10W
R1519	1-216-813-11	METAL CHIP	220	5%	1/10W
R1520	1-216-813-11	METAL CHIP	220	5%	1/10W
R1521	1-216-813-11	METAL CHIP	220	5%	1/10W
R1522	1-216-813-11	METAL CHIP	220	5%	1/10W
R1523	1-216-813-11	METAL CHIP	220	5%	1/10W
R1525	1-216-813-11	METAL CHIP	220	5%	1/10W
R1526	1-216-813-11	METAL CHIP	220	5%	1/10W
R1527	1-216-813-11	METAL CHIP	220	5%	1/10W
R1528	1-216-813-11	METAL CHIP	220	5%	1/10W
R1532	1-216-813-11	METAL CHIP	220	5%	1/10W
R1533	1-216-813-11	METAL CHIP	220	5%	1/10W
R1534	1-216-813-11	METAL CHIP	220	5%	1/10W

Ref. No.	Part No.	Description			Remark
R1535	1-216-813-11	METAL CHIP	220	5%	1/10W
R1536	1-216-813-11	METAL CHIP	220	5%	1/10W
R1537	1-216-813-11	METAL CHIP	220	5%	1/10W
R1538	1-216-813-11	METAL CHIP	220	5%	1/10W
R1539	1-216-813-11	METAL CHIP	220	5%	1/10W
R1540	1-216-813-11	METAL CHIP	220	5%	1/10W
R1541	1-216-813-11	METAL CHIP	220	5%	1/10W
R1542	1-216-813-11	METAL CHIP	220	5%	1/10W
R1543	1-216-813-11	METAL CHIP	220	5%	1/10W
R1544	1-216-813-11	METAL CHIP	220	5%	1/10W
R1545	1-216-813-11	METAL CHIP	220	5%	1/10W
R1546	1-216-813-11	METAL CHIP	220	5%	1/10W
R1547	1-216-813-11	METAL CHIP	220	5%	1/10W
R1548	1-216-813-11	METAL CHIP	220	5%	1/10W
R1549	1-216-813-11	METAL CHIP	220	5%	1/10W
R1550	1-216-813-11	METAL CHIP	220	5%	1/10W
R1551	1-216-813-11	METAL CHIP	220	5%	1/10W
R1552	1-216-813-11	METAL CHIP	220	5%	1/10W
R1553	1-216-813-11	METAL CHIP	220	5%	1/10W
R1554	1-216-813-11	METAL CHIP	220	5%	1/10W
R1555	1-216-813-11	METAL CHIP	220	5%	1/10W
R1556	1-216-809-11	METAL CHIP	100	5%	1/10W
R1570	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1571	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1572	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1573	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1574	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1635	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1636	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< VIBRATOR >			
X1101	1-767-922-11	VIBRATOR, CERAMIC (16MHz)			
X1301	1-795-126-21	VIBRATOR, CRYSTAL (12.288MHz)			
X1502	1-579-993-21	VIBRATOR, CERAMIC (13.5MHz)			

****

	A-4750-808-A	DISPLAY BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C100	1-164-159-11	CERAMIC	0.1uF		50V
C101	1-164-159-11	CERAMIC	0.1uF		50V
C104	1-164-159-11	CERAMIC	0.1uF		50V
C105	1-126-795-11	ELECT	10uF	20%	50V
C108	1-164-159-11	CERAMIC	0.1uF		50V
C109	1-164-159-11	CERAMIC	0.1uF		50V
C110	1-128-825-11	CERAMIC	0.0022uF	5%	50V
C111	1-128-813-11	CERAMIC	220PF	5%	50V
C112	1-128-813-11	CERAMIC	220PF	5%	50V
C114	1-164-159-11	CERAMIC	0.1uF		50V
C115	1-126-795-11	ELECT	10uF	20%	50V
C132	1-128-813-11	CERAMIC	220PF	5%	50V
C133	1-128-813-11	CERAMIC	220PF	5%	50V
C134	1-128-813-11	CERAMIC	220PF	5%	50V
C135	1-128-813-11	CERAMIC	220PF	5%	50V
C136	1-128-813-11	CERAMIC	220PF	5%	50V
C137	1-128-813-11	CERAMIC	220PF	5%	50V
C138	1-128-813-11	CERAMIC	220PF	5%	50V
C139	1-128-813-11	CERAMIC	220PF	5%	50V
C140	1-128-813-11	CERAMIC	220PF	5%	50V
C141	1-128-813-11	CERAMIC	220PF	5%	50V
C142	1-128-813-11	CERAMIC	220PF	5%	50V
C143	1-128-813-11	CERAMIC	220PF	5%	50V
C144	1-164-159-11	CERAMIC	0.1uF		50V
C150	1-164-159-11	CERAMIC	0.1uF		50V
C151	1-126-795-11	ELECT	10uF	20%	50V
C152	1-128-813-11	CERAMIC	220PF	5%	50V
C153	1-128-813-11	CERAMIC	220PF	5%	50V
C154	1-128-813-11	CERAMIC	220PF	5%	50V
C155	1-164-159-11	CERAMIC	0.1uF		50V
C156	1-164-159-11	CERAMIC	0.1uF		50V
C157	1-164-159-11	CERAMIC	0.1uF		50V
		< CONNECTOR >			
* CNP101	1-564-518-11	PLUG, CONNECTOR 3P			
* CNP103	1-564-518-11	PLUG, CONNECTOR 3P			
CNS100	1-568-838-11	CONNECTOR, FFC 21P			
		< DIODE >			
D101	6-500-647-01	LED SEL5E20C-STP15 (MULTI CHANNEL DECODING)			
D102	8-719-061-96	LED SLR-325DCT31 (2CH)			
D103	8-719-061-96	LED SLR-325DCT31 (MUSIC)			
D104	8-719-061-96	LED SLR-325DCT31 (MOVIE)			
D105	8-719-061-96	LED SLR-325DCT31 (A.F.D.)			
		< VACUUM FLUORESCENT DISPLAY >			
FL101	1-518-966-11	VACUUM FLUORESCENT DISPLAY			
		< IC >			
IC100	8-759-643-83	IC uPD16315GB-3BS			
IC101	8-759-036-90	IC MC74ACT08N			
IC102	6-600-349-31	IC NJL24H400A (IR)			
		< TRANSISTOR >			
Q100	8-729-119-78	TRANSISTOR 2SC2785-HFE			
		< RESISTOR >			
R101	1-249-409-11	CARBON	220	5%	1/4W
R102	1-249-411-11	CARBON	330	5%	1/4W
R103	1-249-413-11	CARBON	470	5%	1/4W
R104	1-249-415-11	CARBON	680	5%	1/4W
R105	1-247-831-11	CARBON	1K	5%	1/4W
R106	1-249-419-11	CARBON	1.5K	5%	1/4W
R107	1-249-421-11	CARBON	2.2K	5%	1/4W
R108	1-247-847-11	CARBON	4.7K	5%	1/4W
R109	1-249-429-11	CARBON	10K	5%	1/4W
R121	1-249-409-11	CARBON	220	5%	1/4W
R122	1-249-411-11	CARBON	330	5%	1/4W
R123	1-249-413-11	CARBON	470	5%	1/4W
R124	1-249-415-11	CARBON	680	5%	1/4W
R125	1-247-831-11	CARBON	1K	5%	1/4W
R126	1-249-419-11	CARBON	1.5K	5%	1/4W
R131	1-249-409-11	CARBON	220	5%	1/4W
R132	1-249-411-11	CARBON	330	5%	1/4W
R133	1-249-413-11	CARBON	470	5%	1/4W
R141	1-249-421-11	CARBON	2.2K	5%	1/4W

DISPLAY | HEADPHONE | MAIN

Ref. No.	Part No.	Description			Remark
R150	1-249-440-11	CARBON	82K	5%	1/4W
R153	1-247-807-31	CARBON	100	5%	1/4W
R154	1-249-393-11	CARBON	10	5%	1/4W
R160	1-247-804-11	CARBON	75	5%	1/4W
R161	1-249-409-11	CARBON	220	5%	1/4W
R162	1-249-429-11	CARBON	10K	5%	1/4W
R172	1-247-807-31	CARBON	100	5%	1/4W
R173	1-247-807-31	CARBON	100	5%	1/4W
R174	1-247-807-31	CARBON	100	5%	1/4W
R175	1-249-393-11	CARBON	10	5%	1/4W
R198	1-249-381-11	CARBON	1	5%	1/4W
R199	1-249-381-11	CARBON	1	5%	1/4W
		< ROTARY ENCODER >			
RV101	1-418-817-11	ENCODER, ROTARY (–/+)			
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)			
		< SWITCH >			
S100	1-771-410-21	SWITCH, TACTILE (>)			
S101	1-771-410-21	SWITCH, TACTILE (INPUT MODE)			
S102	1-771-410-21	SWITCH, TACTILE (DVD)			
S104	1-771-410-21	SWITCH, TACTILE (MD/TAPE)			
S106	1-771-410-21	SWITCH, TACTILE (SA-CD/CD)			
S108	1-771-410-21	SWITCH, TACTILE (TUNER FM/AM)			
S110	1-771-410-21	SWITCH, TACTILE (MAIN MENU)			
S111	1-771-410-21	SWITCH, TACTILE (ENTER)			
S112	1-771-410-21	SWITCH, TACTILE (<)			
S114	1-771-410-21	SWITCH, TACTILE (AUX)			
S120	1-771-410-21	SWITCH, TACTILE (SURR BACK DECODING)			
S121	1-771-410-21	SWITCH, TACTILE (MUSIC)			
S122	1-771-410-21	SWITCH, TACTILE (MOVIE)			
S123	1-771-410-21	SWITCH, TACTILE (A.F.D.)			
S124	1-771-410-21	SWITCH, TACTILE (2CH)			
S125	1-771-410-21	SWITCH, TACTILE (MULTI CH IN)			
S131	1-771-410-21	SWITCH, TACTILE (VIDEO 3)			
S133	1-771-410-21	SWITCH, TACTILE (VIDEO 2)			
S135	1-771-410-21	SWITCH, TACTILE (VIDEO 1)			

****

HEADPHONE BOARD
****

< CAPACITOR >

C790	1-164-159-11	CERAMIC	0.1uF	50V

< CONNECTOR >

CNP791	1-691-766-11	PLUG (MICRO CONNECTOR) 4P		

< JACK >

J791	1-815-313-21	JACK (PHONES) (GOLD)...(GOLD)		
J791	1-815-314-21	JACK (PHONES) (SILVER)...(BLACK,SILVER)		

****

Ref. No.	Part No.	Description			Remark
	A-4752-716-A	MAIN BOARD, COMPLETE (US,CND)			
	A-4752-774-A	MAIN BOARD, COMPLETE (AEP,UK)			
	A-4752-782-A	MAIN BOARD, COMPLETE (SP,MY)			
	A-4752-797-A	MAIN BOARD, COMPLETE (AUS)			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< CAPACITOR >			
C300	1-161-494-00	CERAMIC	0.022uF		25V
C310	1-161-494-00	CERAMIC	0.022uF		25V
C320	1-161-494-00	CERAMIC	0.022uF		25V
C330	1-161-494-00	CERAMIC	0.022uF		25V
C340	1-161-494-00	CERAMIC	0.022uF		25V
C350	1-161-494-00	CERAMIC	0.022uF		25V
C360	1-161-494-00	CERAMIC	0.022uF		25V
C370	1-161-494-00	CERAMIC	0.022uF		25V
C400	1-128-825-11	CERAMIC	0.0022uF	5%	50V
C403	1-128-825-11	CERAMIC	0.0022uF	5%	50V
C408	1-126-963-11	ELECT	4.7uF	20%	50V
C409	1-126-963-11	ELECT	4.7uF	20%	50V
C444	1-128-825-11	CERAMIC	0.0022uF	5%	50V
C445	1-128-825-11	CERAMIC	0.0022uF	5%	50V
C453	1-128-813-11	CERAMIC	220PF	5%	50V
C458	1-126-963-11	ELECT	4.7uF	20%	50V
C459	1-126-963-11	ELECT	4.7uF	20%	50V
C463	1-128-813-11	CERAMIC	220PF	5%	50V
C464	1-164-159-11	CERAMIC	0.1uF		50V
C466	1-126-923-11	ELECT	220uF	20%	10V
C467	1-164-159-11	CERAMIC	0.1uF		50V
C468	1-128-809-11	CERAMIC	100PF	5%	50V
C469	1-128-809-11	CERAMIC	100PF	5%	50V
C470	1-128-809-11	CERAMIC	100PF	5%	50V
C471	1-126-963-11	ELECT	4.7uF	20%	50V
C472	1-126-963-11	ELECT	4.7uF	20%	50V
C481	1-126-963-11	ELECT	4.7uF	20%	50V
C482	1-126-963-11	ELECT	4.7uF	20%	50V
C483	1-126-963-11	ELECT	4.7uF	20%	50V
C484	1-126-963-11	ELECT	4.7uF	20%	50V
C485	1-126-963-11	ELECT	4.7uF	20%	50V
C486	1-126-963-11	ELECT	4.7uF	20%	50V
C488	1-164-159-11	CERAMIC	0.1uF		50V
C489	1-126-963-11	ELECT	4.7uF	20%	50V
C490	1-126-963-11	ELECT	4.7uF	20%	50V
C491	1-126-963-11	ELECT	4.7uF	20%	50V
C492	1-126-963-11	ELECT	4.7uF	20%	50V
C493	1-126-963-11	ELECT	4.7uF	20%	50V
C494	1-126-963-11	ELECT	4.7uF	20%	50V
C495	1-126-963-11	ELECT	4.7uF	20%	50V
C496	1-126-963-11	ELECT	4.7uF	20%	50V
C497	1-126-963-11	ELECT	4.7uF	20%	50V
C498	1-126-963-11	ELECT	4.7uF	20%	50V
C499	1-162-211-31	CERAMIC	33PF	5%	50V
C501	1-126-963-11	ELECT	4.7uF	20%	50V
C503	1-104-658-11	ELECT	100uF	20%	10V
C504	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C505	1-102-978-00	CERAMIC	220PF	5%	50V
C506	1-107-616-11	CERAMIC	150PF	5%	500V
C507	1-128-809-11	CERAMIC	100PF	5%	50V

Ref. No.	Part No.	Description			Remark
C510	1-126-947-11	ELECT	47uF	20%	35V
C511	1-136-157-00	FILM	0.022uF	5%	50V
C516	1-162-815-11	CERAMIC	47PF	5%	500V
C517	1-162-815-11	CERAMIC	47PF	5%	500V
C519	1-128-813-11	CERAMIC	220PF	5%	50V
C540	1-126-964-11	ELECT	10uF	20%	50V
C541	1-127-876-11	CERAMIC	0.01uF	10%	50V
C601	1-126-963-11	ELECT	4.7uF	20%	50V
C603	1-104-658-11	ELECT	100uF	20%	10V
C604	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C605	1-102-233-00	CERAMIC	33PF	10%	500V
C606	1-128-809-11	CERAMIC	100PF	5%	50V
C607	1-128-809-11	CERAMIC	100PF	5%	50V
C610	1-126-947-11	ELECT	47uF	20%	35V
C611	1-136-157-00	FILM	0.022uF	5%	50V
C619	1-128-813-11	CERAMIC	220PF	5%	50V
C620	1-162-815-11	CERAMIC	47PF	5%	500V
C621	1-162-815-11	CERAMIC	47PF	5%	500V
C640	1-126-964-11	ELECT	10uF	20%	50V
C642	1-127-876-11	CERAMIC	0.01uF	10%	50V
C651	1-126-963-11	ELECT	4.7uF	20%	50V
C653	1-104-658-11	ELECT	100uF	20%	10V
C654	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C655	1-102-233-00	CERAMIC	33PF	10%	500V
C656	1-128-809-11	CERAMIC	100PF	5%	50V
C657	1-128-809-11	CERAMIC	100PF	5%	50V
C660	1-126-947-11	ELECT	47uF	20%	35V
C661	1-136-157-00	FILM	0.022uF	5%	50V
C666	1-162-815-11	CERAMIC	47PF	5%	500V
C669	1-162-815-11	CERAMIC	47PF	5%	500V
C670	1-128-813-11	CERAMIC	220PF	5%	50V
C680	1-126-964-11	ELECT	10uF	20%	50V
C681	1-127-876-11	CERAMIC	0.01uF	10%	50V
C691	1-164-159-11	CERAMIC	0.1uF		50V
C701	1-126-963-11	ELECT	4.7uF	20%	50V
C703	1-104-658-11	ELECT	100uF	20%	10V
C704	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C705	1-102-233-00	CERAMIC	33PF	10%	500V
C706	1-128-809-11	CERAMIC	100PF	5%	50V
C707	1-128-809-11	CERAMIC	100PF	5%	50V
C710	1-126-947-11	ELECT	47uF	20%	35V
C711	1-136-157-00	FILM	0.022uF	5%	50V
C716	1-162-815-11	CERAMIC	47PF	5%	500V
C717	1-162-815-11	CERAMIC	47PF	5%	500V
C720	1-128-813-11	CERAMIC	220PF	5%	50V
C721	1-126-923-11	ELECT	220uF	20%	10V
C722	1-126-964-11	ELECT	10uF	20%	50V
C732	1-128-582-11	ELECT	10uF	20%	100V
C733	1-128-582-11	ELECT	10uF	20%	100V
C740	1-126-964-11	ELECT	10uF	20%	50V
C742	1-127-876-11	CERAMIC	0.01uF	10%	50V
C743	1-128-579-11	ELECT	2.2uF	20%	100V
C744	1-128-579-11	ELECT	2.2uF	20%	100V
C750	1-126-964-11	ELECT	10uF	20%	50V
C751	1-126-963-11	ELECT	4.7uF	20%	50V
C752	1-127-876-11	CERAMIC	0.01uF	10%	50V
C753	1-104-658-11	ELECT	100uF	20%	10V
C754	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C755	1-102-233-00	CERAMIC	33PF	10%	500V
C756	1-128-809-11	CERAMIC	100PF	5%	50V
C757	1-128-809-11	CERAMIC	100PF	5%	50V
C760	1-126-947-11	ELECT	47uF	20%	35V
C761	1-136-157-00	FILM	0.022uF	5%	50V
C766	1-162-815-11	CERAMIC	47PF	5%	500V
C767	1-162-815-11	CERAMIC	47PF	5%	500V
C770	1-128-813-11	CERAMIC	220PF	5%	50V
C801	1-126-947-11	ELECT	47uF	20%	35V
C802	1-126-947-11	ELECT	47uF	20%	35V
C803	1-109-932-13	ELECT	10000uF	20%	71V (US,CND)
C803	1-165-707-11	ELECT	10000uF	20%	71V (EXCEPT US,CND)
C804	1-109-932-13	ELECT	10000uF	20%	71V (US,CND)
C804	1-165-707-11	ELECT	10000uF	20%	71V (EXCEPT US,CND)
C805	1-135-851-21	MYLAR	0.22uF		100V
C806	1-135-851-21	MYLAR	0.22uF		100V
C807	1-126-947-11	ELECT	47uF	20%	35V
C808	1-126-947-11	ELECT	47uF	20%	35V
C809	1-164-159-11	CERAMIC	0.1uF		50V
C810	1-164-159-11	CERAMIC	0.1uF		50V
C811	1-164-159-11	CERAMIC	0.1uF		50V
C822	1-126-947-11	ELECT	47uF	20%	35V
C830	1-164-159-11	CERAMIC	0.1uF		50V
C831	1-164-159-11	CERAMIC	0.1uF		50V
C832	1-126-936-11	ELECT	3300uF	20%	16V
CC01	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC02	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC04	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC05	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC06	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC07	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC08	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC09	1-128-809-11	CERAMIC	100PF	5%	50V (EXCEPT US,CND)
CC11	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC13	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC15	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC17	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC19	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC21	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC31	1-128-809-11	CERAMIC	100PF	5%	50V (SP,MY)
CC31	1-128-813-11	CERAMIC	220PF	5%	50V (AEP,UK,AUS)

MAIN

Ref. No.	Part No.	Description			Remark
CC32	1-128-809-11	CERAMIC	100PF	5% 50V	(SP,MY)
CC32	1-128-813-11	CERAMIC	220PF	5% 50V	(AEP,UK,AUS)
CC33	1-128-809-11	CERAMIC	100PF	5% 50V	(SP,MY)
CC33	1-128-813-11	CERAMIC	220PF	5% 50V	(AEP,UK,AUS)
CC34	1-128-809-11	CERAMIC	100PF	5% 50V	(SP,MY)
CC34	1-128-813-11	CERAMIC	220PF	5% 50V	(AEP,UK,AUS)
CC35	1-128-809-11	CERAMIC	100PF	5% 50V	(SP,MY)
CC35	1-128-813-11	CERAMIC	220PF	5% 50V	(AEP,UK,AUS)
CC36	1-128-809-11	CERAMIC	100PF	5% 50V	(SP,MY)
CC36	1-128-813-11	CERAMIC	220PF	5% 50V	(AEP,UK,AUS)
CC51	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC52	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC54	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC55	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC56	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC57	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC58	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
CC59	1-128-809-11	CERAMIC	100PF	5% 50V	(EXCEPT US,CND)
		< CONNECTOR >			
CN808	1-564-320-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
CNP500	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P			
* CNP501	1-766-718-21	CONNECTOR, BOARD TO BOARD 17P			
CNP503	1-779-978-11	PIN, CONNECTOR 3P			
CNP802	1-691-767-11	PLUG (MICRO CONNECTOR) 5P			
CNP911	1-784-926-11	PIN, CONNECTOR 11P			
CNP912	1-784-921-11	PIN, CONNECTOR 4P			
CNP913	1-779-978-11	PIN, CONNECTOR 3P			
CNP915	1-766-200-11	SOCKET, CONNECTOR PIN 5P			
		< DIODE >			
D505	8-719-991-33	DIODE 1SS133T-77			
D540	8-719-991-33	DIODE 1SS133T-77			
D560	8-719-991-33	DIODE 1SS133T-77			
D605	8-719-991-33	DIODE 1SS133T-77			
D610	8-719-991-33	DIODE 1SS133T-77			
D611	8-719-991-33	DIODE 1SS133T-77			
D640	8-719-991-33	DIODE 1SS133T-77			
D665	8-719-991-33	DIODE 1SS133T-77			
D680	8-719-991-33	DIODE 1SS133T-77			
D690	8-719-934-21	DIODE HZS30-1L			
D691	8-719-991-33	DIODE 1SS133T-77			
D705	8-719-991-33	DIODE 1SS133T-77			

Ref. No.	Part No.	Description	Remark
D710	8-719-991-33	DIODE 1SS133T-77	
D721	8-719-991-33	DIODE 1SS133T-77	
D722	8-719-991-33	DIODE 1SS133T-77	
D732	8-719-991-33	DIODE 1SS133T-77	
D740	8-719-991-33	DIODE 1SS133T-77	
D750	8-719-991-33	DIODE 1SS133T-77	
D765	8-719-991-33	DIODE 1SS133T-77	
D791	8-719-991-33	DIODE 1SS133T-77	
D801	8-719-933-95	DIODE HZS20-1L	
D802	8-719-072-05	DIODE RBV-602LF-A	
D804	8-719-068-28	DIODE HZ6.8BP-TK	
D805	6-500-522-11	DIODE 10EDB40-TA2B5	
D806	6-500-522-11	DIODE 10EDB40-TA2B5	
D807	6-500-522-11	DIODE 10EDB40-TA2B5	
D808	6-500-522-11	DIODE 10EDB40-TA2B5	
D896	8-719-043-76	DIODE AK04V0	
		< IC >	
IC401	6-703-500-01	IC M61532FP	
IC402	8-759-167-88	IC NJM4565D	
IC501	8-749-011-16	IC STK350-230	
IC601	6-700-943-01	IC uPC2581V-S	
IC691	8-759-167-88	IC NJM4565D	
IC701	6-700-943-01	IC uPC2581V-S	
IC801	8-759-071-48	IC TA7807S	
IC802	8-759-071-47	IC TA7907S	
		< JACK >	
J309	1-770-377-21	JACK, PIN 1P (SUB WOOFER AUDIO OUT)	
J400	1-774-411-11	JACK, PIN 6P (AUX IN,SA-CD/CD IN, MD/TAPE OUT)	
J401	1-793-775-12	JACK, PIN 6P (MULTI CH IN FRONT,SURROUND,CENTER,SUB WOOFER)	
J403	1-770-614-11	JACK, PIN 4P (MD/TAPE IN,DVD AUDIO IN)	
J404	1-774-411-11	JACK, PIN 6P (VIDEO 2 AUDIO IN, VIDEO 1 AUDIO OUT/AUDIO IN)	
		< COIL >	
L601	1-420-872-52	COIL, AIR-CORE	
L651	1-420-872-52	COIL, AIR-CORE	
L701	1-420-872-52	COIL, AIR-CORE	
L751	1-420-872-52	COIL, AIR-CORE	
		< TRANSISTOR >	
Q300	8-729-823-22	TRANSISTOR 2SC3576	
Q310	8-729-823-22	TRANSISTOR 2SC3576	
Q320	8-729-823-22	TRANSISTOR 2SC3576	
Q330	8-729-823-22	TRANSISTOR 2SC3576	
Q340	8-729-823-22	TRANSISTOR 2SC3576	
Q350	8-729-823-22	TRANSISTOR 2SC3576	
Q360	8-729-823-22	TRANSISTOR 2SC3576	
Q370	8-729-823-22	TRANSISTOR 2SC3576	
Q379	8-729-900-63	TRANSISTOR DTA124ES	
Q471	8-729-823-22	TRANSISTOR 2SC3576	
Q501	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q502	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q505	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q506	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q540	8-729-281-53	TRANSISTOR 2SC1815-GR	

Ref. No.	Part No.	Description	Remark
Q560	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q601	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q602	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q605	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q606	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q610	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q611	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q640	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q651	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q652	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q655	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q656	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q680	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q691	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q692	8-729-900-63	TRANSISTOR DTA124ES	
Q701	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q702	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q705	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q706	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q710	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q722	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
Q723	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q725	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q740	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q750	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q751	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q752	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q755	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q756	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q790	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q801	8-729-140-97	TRANSISTOR 2SB734-34	

< RESISTOR >

Ref. No.	Part No.	Description			Remark
R300	1-247-831-11	CARBON	1K	5%	1/4W
R301	1-247-879-11	CARBON	100K	5%	1/4W
R302	1-247-847-11	CARBON	4.7K	5%	1/4W
R310	1-247-831-11	CARBON	1K	5%	1/4W
R311	1-247-879-11	CARBON	100K	5%	1/4W
R312	1-247-847-11	CARBON	4.7K	5%	1/4W
R320	1-247-831-11	CARBON	1K	5%	1/4W
R321	1-247-879-11	CARBON	100K	5%	1/4W
R322	1-247-847-11	CARBON	4.7K	5%	1/4W
R330	1-247-831-11	CARBON	1K	5%	1/4W
R331	1-247-879-11	CARBON	100K	5%	1/4W
R332	1-247-847-11	CARBON	4.7K	5%	1/4W
R340	1-247-831-11	CARBON	1K	5%	1/4W
R341	1-247-879-11	CARBON	100K	5%	1/4W
R342	1-247-847-11	CARBON	4.7K	5%	1/4W
R350	1-247-831-11	CARBON	1K	5%	1/4W
R351	1-247-879-11	CARBON	100K	5%	1/4W
R352	1-247-847-11	CARBON	4.7K	5%	1/4W
R360	1-247-831-11	CARBON	1K	5%	1/4W
R361	1-247-879-11	CARBON	100K	5%	1/4W
R362	1-247-847-11	CARBON	4.7K	5%	1/4W
R370	1-247-831-11	CARBON	1K	5%	1/4W
R371	1-247-879-11	CARBON	100K	5%	1/4W
R372	1-247-847-11	CARBON	4.7K	5%	1/4W
R380	1-247-879-11	CARBON	100K	5%	1/4W
R381	1-249-429-11	CARBON	10K	5%	1/4W
R401	1-247-831-11	CARBON	1K	5%	1/4W
R402	1-247-831-11	CARBON	1K	5%	1/4W
R404	1-247-831-11	CARBON	1K	5%	1/4W
R405	1-247-831-11	CARBON	1K	5%	1/4W
R406	1-247-831-11	CARBON	1K	5%	1/4W
R407	1-247-831-11	CARBON	1K	5%	1/4W
R408	1-247-831-11	CARBON	1K	5%	1/4W
R409	1-247-831-11	CARBON	1K	5%	1/4W
R428	1-247-831-11	CARBON	1K	5%	1/4W
R429	1-247-831-11	CARBON	1K	5%	1/4W
R430	1-247-831-11	CARBON	1K	5%	1/4W
R431	1-247-831-11	CARBON	1K	5%	1/4W
R432	1-247-831-11	CARBON	1K	5%	1/4W
R433	1-247-831-11	CARBON	1K	5%	1/4W
R434	1-247-831-11	CARBON	1K	5%	1/4W
R435	1-247-831-11	CARBON	1K	5%	1/4W
R436	1-247-831-11	CARBON	1K	5%	1/4W
R451	1-247-831-11	CARBON	1K	5%	1/4W
R452	1-247-831-11	CARBON	1K	5%	1/4W
R454	1-247-831-11	CARBON	1K	5%	1/4W
R455	1-247-831-11	CARBON	1K	5%	1/4W
R456	1-247-831-11	CARBON	1K	5%	1/4W
R457	1-247-831-11	CARBON	1K	5%	1/4W
R458	1-247-831-11	CARBON	1K	5%	1/4W
R459	1-247-831-11	CARBON	1K	5%	1/4W
R469	1-247-831-11	CARBON	1K	5%	1/4W
R470	1-247-871-11	CARBON	47K	5%	1/4W
R471	1-247-831-11	CARBON	1K	5%	1/4W
R472	1-249-415-11	CARBON	680	5%	1/4W
R473	1-249-429-11	CARBON	10K	5%	1/4W
R474	1-249-429-11	CARBON	10K	5%	1/4W
R475	1-249-421-11	CARBON	2.2K	5%	1/4W
R480	1-247-871-11	CARBON	47K	5%	1/4W
R499	1-247-871-11	CARBON	47K	5%	1/4W
R501	1-247-831-11	CARBON	1K	5%	1/4W
R502	1-249-439-11	CARBON	68K	5%	1/4W
R503	1-249-421-11	CARBON	2.2K	5%	1/4W
R504	1-249-411-11	CARBON	330	5%	1/4W
R505	1-249-439-11	CARBON	68K	5%	1/4W
R510	1-249-421-11	CARBON	2.2K	5%	1/4W
R511	1-249-440-11	CARBON	82K	5%	1/4W
R513	1-249-414-11	CARBON	560	5%	1/4W
R514	1-249-399-11	CARBON	33	5%	1/4W
R515	1-249-399-11	CARBON	33	5%	1/4W
R516	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R517	1-249-393-11	CARBON	10	5%	1/4W
R520	1-247-847-11	CARBON	4.7K	5%	1/4W
R521	1-240-855-81	CARBON	6.2K	5%	1/4W
R522	1-249-419-11	CARBON	1.5K	5%	1/4W
R524	1-249-431-11	CARBON	15K	5%	1/4W
R525	1-249-439-11	CARBON	68K	5%	1/4W
R532	1-247-847-11	CARBON	4.7K	5%	1/4W
R533	1-247-871-11	CARBON	47K	5%	1/4W
R540	1-247-863-11	CARBON	22K	5%	1/4W
R546	1-249-431-11	CARBON	15K	5%	1/4W
R555	1-247-871-11	CARBON	47K	5%	1/4W
R556	1-247-863-11	CARBON	22K	5%	1/4W

MAIN

Ref. No.	Part No.	Description			Remark
R557	1-249-431-11	CARBON	15K	5%	1/4W
R573	1-247-871-11	CARBON	47K	5%	1/4W
R601	1-247-831-11	CARBON	1K	5%	1/4W
R602	1-249-439-11	CARBON	68K	5%	1/4W
R603	1-249-421-11	CARBON	2.2K	5%	1/4W
R604	1-249-439-11	CARBON	68K	5%	1/4W
R610	1-249-421-11	CARBON	2.2K	5%	1/4W
R611	1-249-440-11	CARBON	82K	5%	1/4W
R613	1-249-414-11	CARBON	560	5%	1/4W
R614	1-249-399-11	CARBON	33	5%	1/4W
R615	1-249-399-11	CARBON	33	5%	1/4W
R616	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R617	1-249-393-11	CARBON	10	5%	1/4W
R618	1-249-389-11	CARBON	4.7	5%	1/4W
R620	1-247-847-11	CARBON	4.7K	5%	1/4W
R621	1-240-855-81	CARBON	6.2K	5%	1/4W
R622	1-249-419-11	CARBON	1.5K	5%	1/4W
R623	1-247-871-11	CARBON	47K	5%	1/4W
R624	1-249-431-11	CARBON	15K	5%	1/4W
R625	1-249-439-11	CARBON	68K	5%	1/4W
R631	1-247-847-11	CARBON	4.7K	5%	1/4W
R632	1-247-847-11	CARBON	4.7K	5%	1/4W
R634	1-249-404-00	CARBON	82	5%	1/4W
R635	1-249-404-00	CARBON	82	5%	1/4W
R638	1-249-439-11	CARBON	68K	5%	1/4W
R640	1-247-863-11	CARBON	22K	5%	1/4W
R648	1-249-431-11	CARBON	15K	5%	1/4W
R651	1-247-831-11	CARBON	1K	5%	1/4W
R652	1-249-439-11	CARBON	68K	5%	1/4W
R653	1-249-421-11	CARBON	2.2K	5%	1/4W
R654	1-249-439-11	CARBON	68K	5%	1/4W
R655	1-247-871-11	CARBON	47K	5%	1/4W
R656	1-247-863-11	CARBON	22K	5%	1/4W
R657	1-249-431-11	CARBON	15K	5%	1/4W
R660	1-249-421-11	CARBON	2.2K	5%	1/4W
R661	1-249-440-11	CARBON	82K	5%	1/4W
R663	1-249-414-11	CARBON	560	5%	1/4W
R664	1-249-399-11	CARBON	33	5%	1/4W
R665	1-249-399-11	CARBON	33	5%	1/4W
R666	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R667	1-249-393-11	CARBON	10	5%	1/4W
R668	1-249-389-11	CARBON	4.7	5%	1/4W
R669	1-247-847-11	CARBON	4.7K	5%	1/4W
R671	1-240-855-81	CARBON	6.2K	5%	1/4W
R672	1-249-419-11	CARBON	1.5K	5%	1/4W
R673	1-247-871-11	CARBON	47K	5%	1/4W
R674	1-249-431-11	CARBON	15K	5%	1/4W
R675	1-247-871-11	CARBON	47K	5%	1/4W
R676	1-247-863-11	CARBON	22K	5%	1/4W
R677	1-249-431-11	CARBON	15K	5%	1/4W
R680	1-247-863-11	CARBON	22K	5%	1/4W
R681	1-249-431-11	CARBON	15K	5%	1/4W
R690	1-247-887-00	CARBON	220K	5%	1/4W
⚠R691	1-215-888-00	METAL OXIDE	220	5%	2W F
⚠R692	1-215-888-00	METAL OXIDE	220	5%	2W F
R693	1-249-429-11	CARBON	10K	5%	1/4W
R694	1-249-429-11	CARBON	10K	5%	1/4W
R695	1-249-429-11	CARBON	10K	5%	1/4W

Ref. No.	Part No.	Description			Remark
R696	1-249-436-11	CARBON	39K	5%	1/4W
R698	1-249-429-11	CARBON	10K	5%	1/4W
R699	1-247-895-00	CARBON	470K	5%	1/4W
R701	1-247-831-11	CARBON	1K	5%	1/4W
R702	1-249-439-11	CARBON	68K	5%	1/4W
R703	1-249-421-11	CARBON	2.2K	5%	1/4W
R704	1-249-439-11	CARBON	68K	5%	1/4W
R710	1-249-421-11	CARBON	2.2K	5%	1/4W
R711	1-249-440-11	CARBON	82K	5%	1/4W
R713	1-249-414-11	CARBON	560	5%	1/4W
R714	1-249-399-11	CARBON	33	5%	1/4W
R715	1-249-399-11	CARBON	33	5%	1/4W
R716	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R717	1-249-393-11	CARBON	10	5%	1/4W
R718	1-249-389-11	CARBON	4.7	5%	1/4W
R719	1-247-847-11	CARBON	4.7K	5%	1/4W
R721	1-240-855-81	CARBON	6.2K	5%	1/4W
R722	1-249-419-11	CARBON	1.5K	5%	1/4W
R723	1-247-871-11	CARBON	47K	5%	1/4W
R724	1-249-431-11	CARBON	15K	5%	1/4W
R725	1-249-439-11	CARBON	68K	5%	1/4W
R731	1-247-847-11	CARBON	4.7K	5%	1/4W
R732	1-249-381-11	CARBON	1	5%	1/4W
R733	1-249-381-11	CARBON	1	5%	1/4W
R734	1-249-404-00	CARBON	82	5%	1/4W
R735	1-249-427-11	CARBON	6.8K	5%	1/4W
R736	1-247-831-11	CARBON	1K	5%	1/4W
R737	1-249-436-11	CARBON	39K	5%	1/4W
R740	1-247-863-11	CARBON	22K	5%	1/4W
R743	1-247-863-11	CARBON	22K	5%	1/4W
R744	1-247-863-11	CARBON	22K	5%	1/4W
R745	1-247-871-11	CARBON	47K	5%	1/4W
R746	1-247-863-11	CARBON	22K	5%	1/4W
R747	1-249-431-11	CARBON	15K	5%	1/4W
R748	1-249-431-11	CARBON	15K	5%	1/4W
R750	1-247-863-11	CARBON	22K	5%	1/4W
R751	1-247-831-11	CARBON	1K	5%	1/4W
R752	1-249-439-11	CARBON	68K	5%	1/4W
R753	1-249-421-11	CARBON	2.2K	5%	1/4W
R754	1-249-439-11	CARBON	68K	5%	1/4W
R755	1-247-871-11	CARBON	47K	5%	1/4W
R756	1-247-863-11	CARBON	22K	5%	1/4W
R757	1-249-431-11	CARBON	15K	5%	1/4W
R758	1-249-431-11	CARBON	15K	5%	1/4W
R760	1-249-421-11	CARBON	2.2K	5%	1/4W
R761	1-249-440-11	CARBON	82K	5%	1/4W
R763	1-249-414-11	CARBON	560	5%	1/4W
R764	1-249-399-11	CARBON	33	5%	1/4W
R765	1-249-399-11	CARBON	33	5%	1/4W
R766	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R767	1-249-393-11	CARBON	10	5%	1/4W
R768	1-249-389-11	CARBON	4.7	5%	1/4W
R769	1-247-847-11	CARBON	4.7K	5%	1/4W
R770	1-247-871-11	CARBON	47K	5%	1/4W
R771	1-240-855-81	CARBON	6.2K	5%	1/4W
R772	1-249-419-11	CARBON	1.5K	5%	1/4W
R773	1-247-871-11	CARBON	47K	5%	1/4W
R775	1-249-439-11	CARBON	68K	5%	1/4W

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remark
R778	1-249-431-11	CARBON	15K	5%	1/4W
R780	1-249-429-11	CARBON	10K	5%	1/4W
R791	1-247-847-11	CARBON	4.7K	5%	1/4W
⚠R792	1-215-868-00	METAL OXIDE	680	5%	1W F
R793	1-249-404-00	CARBON	82	5%	1/4W
⚠R794	1-215-868-00	METAL OXIDE	680	5%	1W F
R802	1-249-404-00	CARBON	82	5%	1/4W
R803	1-249-389-11	CARBON	4.7	5%	1/4W
R804	1-249-429-11	CARBON	10K	5%	1/4W
R806	1-247-863-11	CARBON	22K	5%	1/4W
⚠R910	1-240-877-11	FUSIBLE	0.15	5%	1/2W F
RR11	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR12	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR13	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR14	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR15	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR16	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
		< RELAY >			
RY560	1-755-267-11	RELAY			
RY601	1-755-421-11	RELAY			
RY602	1-755-421-11	RELAY			
RY701	1-755-421-11	RELAY			
RY791	1-755-421-11	RELAY			
		< TERMINAL BOARD >			
TM601	1-694-935-12	TERMINAL BOARD (8P) (SPEAKERS FRONT A,SURROUND)			
TM602	1-694-933-12	TERMINAL BOARD (4P) (SPEAKERS FRONT B)			
**********					
	1-861-057-11	POWER BOARD			
		**********			
		< RESISTOR >			
R127	1-249-421-11	CARBON	2.2K	5%	1/4W
R128	1-247-847-11	CARBON	4.7K	5%	1/4W
		< SWITCH >			
S126	1-771-410-21	SWITCH, TACTILE (SPEAKERS (OFF/A/B/A+B))			
S127	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
S128	1-771-410-21	SWITCH, TACTILE (DIMMER)			
S152	1-771-410-21	SWITCH, TACTILE (I/⏻)			
**********					
		SPEAKER BOARD			
		**********			
		< CAPACITOR >			
CC15	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC16	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)
CC17	1-127-876-11	CERAMIC	0.01uF	10%	50V (EXCEPT US,CND)

Ref. No.	Part No.	Description			Remark
		< CONNECTOR >			
CNP501	1-564-320-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
CNP502	1-779-978-11	PIN, CONNECTOR 3P			
CNP503	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
		< DIODE >			
D510	8-719-991-33	DIODE 1SS133T-77			
D760	8-719-991-33	DIODE 1SS133T-77			
		< COIL >			
L571	1-420-872-52	COIL, AIR-CORE			
L751	1-420-872-52	COIL, AIR-CORE			
L752	1-420-872-52	COIL, AIR-CORE			
		< TRANSISTOR >			
Q550	8-729-119-79	TRANSISTOR 2SC2785-FEK			
Q760	8-729-119-79	TRANSISTOR 2SC2785-FEK			
		< RESISTOR >			
R531	1-247-847-11	CARBON	4.7K	5%	1/4W
R534	1-249-404-00	CARBON	82	5%	1/4W
R578	1-249-389-11	CARBON	4.7	5%	1/4W
R751	1-249-389-11	CARBON	4.7	5%	1/4W
R752	1-249-389-11	CARBON	4.7	5%	1/4W
R753	1-247-847-11	CARBON	4.7K	5%	1/4W
R774	1-249-404-00	CARBON	82	5%	1/4W
RR15	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR16	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
RR17	1-249-393-11	CARBON	10	5%	1/4W (EXCEPT US,CND)
		< RELAY >			
RY501	1-755-421-11	RELAY			
RY751	1-755-421-11	RELAY			
		< TERMINAL BOARD >			
TM501	1-694-934-12	TERMINAL BOARD (6P) (SPEAKERS SURROUND BACK,CENTER)			
**********					
	A-4752-717-A	STANDBY BOARD, COMPLETE (US,CND)			
	A-4752-775-A	STANDBY BOARD, COMPLETE (AEP,UK,SP,MY)			
	A-4752-798-A	STANDBY BOARD, COMPLETE (AUS)			
		**********			
	1-533-399-11	HOLDER, FUSE			
		< CAPACITOR >			
C913	1-164-159-11	CERAMIC	0.1uF		50V
C914	1-164-159-11	CERAMIC	0.1uF		50V
C915	1-126-943-11	ELECT	2200uF	20%	25V
C916	1-126-942-61	ELECT	1000uF	20%	25V
C920	1-164-159-11	CERAMIC	0.1uF		50V
C921	1-164-159-11	CERAMIC	0.1uF		50V
C922	1-164-159-11	CERAMIC	0.1uF		50V
C924	1-126-959-11	ELECT	0.47uF	20%	50V
C950	1-126-936-11	ELECT	3300uF	20%	16V

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

STANDBY SURR BACK

Ref. No.	Part No.	Description			Remark
		< CONNECTOR >			
CNP801	1-766-203-11	PLUG, CONNECTOR PIN (PC BOARD) 5P			
CNP804	1-564-506-11	PLUG, CONNECTOR 3P			
CNP901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
CNP902	1-794-577-21	PIN, CONNECTOR (POWER) 2P			
CNP903	1-784-922-11	PIN, CONNECTOR 5P			
		< DIODE >			
D901	8-719-991-33	DIODE 1SS133T-77			
D910	6-500-522-11	DIODE 10EDB40-TA2B5			
D911	6-500-522-11	DIODE 10EDB40-TA2B5			
D912	6-500-522-11	DIODE 10EDB40-TA2B5			
D913	6-500-522-11	DIODE 10EDB40-TA2B5			
D914	8-719-991-33	DIODE 1SS133T-77			
D915	8-719-991-33	DIODE 1SS133T-77			
D920	6-500-522-11	DIODE 10EDB40-TA2B5			
D921	6-500-522-11	DIODE 10EDB40-TA2B5			
D922	6-500-522-11	DIODE 10EDB40-TA2B5			
D923	6-500-522-11	DIODE 10EDB40-TA2B5			
		< EARTH TERMINAL >			
* G901	1-537-738-21	TERMINAL, EARTH			
		< AC OUTLET >			
⚠J911	1-251-417-11	OUTLET, AC (AC OUTLET) (AUS)			
⚠J911	1-785-285-11	OUTLET, AC (1P) (AC OUTLET) (AEP,UK,SP,MY)			
⚠J911	1-785-834-11	OUTLET, AC (1P) (AC OUTLET) (US,CND)			
		< TRANSISTOR >			
Q901	8-729-119-79	TRANSISTOR 2SC2785-FEK			
Q921	8-729-119-79	TRANSISTOR 2SC2785-FEK			
		< RESISTOR >			
⚠R810	1-243-634-11	FUSIBLE	0.22	5%	1/2W F
⚠R811	1-243-634-11	FUSIBLE	0.22	5%	1/2W F
⚠R901	1-219-237-11	SOLID	3.3M	20%	1/2W F (US,CND)
R902	1-247-871-11	CARBON	47K	5%	1/4W
R903	1-247-847-11	CARBON	4.7K	5%	1/4W
R904	1-249-381-11	CARBON	1	5%	1/4W
R921	1-247-871-11	CARBON	47K	5%	1/4W
R922	1-247-863-11	CARBON	22K	5%	1/4W
R923	1-249-429-11	CARBON	10K	5%	1/4W
		< RELAY >			
⚠RY901	1-755-298-11	RELAY			
		< TRANSFORMER >			
⚠T902	1-435-281-11	TRANSFORMER, POWER (US,CND)			
⚠T902	1-435-282-11	TRANSFORMER, POWER (EXCEPT US,CND)			

****

Ref. No.	Part No.	Description			Remark
	A-4752-721-A	SURR BACK BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1600	1-128-579-11	ELECT	2.2uF	20%	100V
C1601	1-126-963-11	ELECT	4.7uF	20%	50V
C1602	1-128-809-11	CERAMIC	100PF	5%	50V
C1603	1-102-233-00	CERAMIC	33PF	10%	500V
C1604	1-128-809-11	CERAMIC	100PF	5%	50V
C1605	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C1606	1-104-658-11	ELECT	100uF	20%	10V
C1607	1-126-947-11	ELECT	47uF	20%	35V
C1608	1-162-815-11	CERAMIC	47PF	5%	500V
C1609	1-162-815-11	CERAMIC	47PF	5%	500V
C1610	1-128-813-11	CERAMIC	220PF	5%	50V
C1611	1-136-157-00	FILM	0.022uF	5%	50V
C1612	1-127-876-11	CERAMIC	0.01uF	10%	50V
C1613	1-126-964-11	ELECT	10uF	20%	50V
C1651	1-126-963-11	ELECT	4.7uF	20%	50V
C1652	1-128-809-11	CERAMIC	100PF	5%	50V
C1653	1-102-233-00	CERAMIC	33PF	10%	500V
C1654	1-128-809-11	CERAMIC	100PF	5%	50V
C1655	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C1656	1-104-658-11	ELECT	100uF	20%	10V
C1657	1-126-947-11	ELECT	47uF	20%	35V
C1658	1-162-815-11	CERAMIC	47PF	5%	500V
C1659	1-162-815-11	CERAMIC	47PF	5%	500V
C1660	1-128-813-11	CERAMIC	220PF	5%	50V
C1661	1-136-157-00	FILM	0.022uF	5%	50V
C1662	1-127-876-11	CERAMIC	0.01uF	10%	50V
C1663	1-126-964-11	ELECT	10uF	20%	50V
		< CONNECTOR >			
* CNP572	1-564-241-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
		< DIODE >			
D1600	8-719-991-33	DIODE 1SS133T-77			
D1601	8-719-991-33	DIODE 1SS133T-77			
D1650	8-719-991-33	DIODE 1SS133T-77			
D1651	8-719-991-33	DIODE 1SS133T-77			
		< IC >			
IC700	6-700-943-01	IC uPC2581V-S			
		< TRANSISTOR >			
Q1603	8-729-140-82	TRANSISTOR 2SA988-PAFAEA			
Q1604	8-729-140-82	TRANSISTOR 2SA988-PAFAEA			
Q1605	8-729-281-53	TRANSISTOR 2SC1815-GR			
Q1653	8-729-140-82	TRANSISTOR 2SA988-PAFAEA			
Q1654	8-729-140-82	TRANSISTOR 2SA988-PAFAEA			
Q1655	8-729-281-53	TRANSISTOR 2SC1815-GR			
		< RESISTOR >			
R1600	1-247-863-11	CARBON	22K	5%	1/4W
R1601	1-247-831-11	CARBON	1K	5%	1/4W
R1602	1-249-439-11	CARBON	68K	5%	1/4W
R1603	1-249-439-11	CARBON	68K	5%	1/4W

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remark
R1604	1-249-421-11	CARBON	2.2K	5%	1/4W
R1605	1-247-847-11	CARBON	4.7K	5%	1/4W
R1606	1-249-428-11	CARBON	8.2K	5%	1/4W
R1607	1-247-831-11	CARBON	1K	5%	1/4W
R1608	1-249-399-11	CARBON	33	5%	1/4W
R1609	1-249-399-11	CARBON	33	5%	1/4W
R1610	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R1611	1-240-855-81	CARBON	6.2K	5%	1/4W
R1612	1-247-847-11	CARBON	4.7K	5%	1/4W
R1613	1-249-419-11	CARBON	1.5K	5%	1/4W
R1614	1-249-439-11	CARBON	68K	5%	1/4W
R1615	1-249-393-11	CARBON	10	5%	1/4W
R1616	1-247-871-11	CARBON	47K	5%	1/4W
R1617	1-249-431-11	CARBON	15K	5%	1/4W
R1618	1-247-863-11	CARBON	22K	5%	1/4W
R1619	1-249-431-11	CARBON	15K	5%	1/4W
R1620	1-249-431-11	CARBON	15K	5%	1/4W
R1621	1-247-871-11	CARBON	47K	5%	1/4W
R1622	1-247-863-11	CARBON	22K	5%	1/4W
R1651	1-247-831-11	CARBON	1K	5%	1/4W
R1652	1-249-439-11	CARBON	68K	5%	1/4W
R1653	1-249-439-11	CARBON	68K	5%	1/4W
R1654	1-249-421-11	CARBON	2.2K	5%	1/4W
R1655	1-247-847-11	CARBON	4.7K	5%	1/4W
R1656	1-249-428-11	CARBON	8.2K	5%	1/4W
R1657	1-247-831-11	CARBON	1K	5%	1/4W
R1658	1-249-399-11	CARBON	33	5%	1/4W
R1659	1-249-399-11	CARBON	33	5%	1/4W
R1660	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R1661	1-240-855-81	CARBON	6.2K	5%	1/4W
R1662	1-247-847-11	CARBON	4.7K	5%	1/4W
R1663	1-249-419-11	CARBON	1.5K	5%	1/4W
R1664	1-249-439-11	CARBON	68K	5%	1/4W
R1665	1-249-393-11	CARBON	10	5%	1/4W
R1666	1-247-871-11	CARBON	47K	5%	1/4W
R1667	1-249-431-11	CARBON	15K	5%	1/4W
R1668	1-247-863-11	CARBON	22K	5%	1/4W
R1669	1-249-431-11	CARBON	15K	5%	1/4W
R1670	1-249-431-11	CARBON	15K	5%	1/4W
R1671	1-247-871-11	CARBON	47K	5%	1/4W
R1672	1-247-863-11	CARBON	22K	5%	1/4W

****

1-862-139-11 S-VIDEO BOARD

****

< CAPACITOR >

C251	1-126-947-11	ELECT	47uF	20%	35V
C252	1-164-159-11	CERAMIC	0.1uF		50V
C253	1-164-159-11	CERAMIC	0.1uF		50V
C254	1-126-947-11	ELECT	47uF	20%	35V
C255	1-164-159-11	CERAMIC	0.1uF		50V
C256	1-164-159-11	CERAMIC	0.1uF		50V
C257	1-128-817-11	CERAMIC	470PF	5%	50V
C258	1-128-805-11	CERAMIC	47PF	5%	50V
C259	1-128-805-11	CERAMIC	47PF	5%	50V
C260	1-126-964-11	ELECT	10uF	20%	50V
C261	1-164-159-11	CERAMIC	0.1uF		50V
C262	1-126-964-11	ELECT	10uF	20%	50V
C263	1-164-159-11	CERAMIC	0.1uF		50V
C265	1-128-805-11	CERAMIC	47PF	5%	50V
C266	1-128-805-11	CERAMIC	47PF	5%	50V
C267	1-128-817-11	CERAMIC	470PF	5%	50V
C268	1-126-964-11	ELECT	10uF	20%	50V
C269	1-164-159-11	CERAMIC	0.1uF		50V
C272	1-164-159-11	CERAMIC	0.1uF		50V
C275	1-128-817-11	CERAMIC	470PF	5%	50V

< CONNECTOR >

CNS252	1-568-442-11	SOCKET, CONNECTOR 9P

< DIODE >

D251	8-719-991-33	DIODE 1SS133T-77
D252	8-719-991-33	DIODE 1SS133T-77

< IC >

IC251	6-701-890-01	IC NJM2595D
IC252	6-701-890-01	IC NJM2595D

< JACK >

J251	1-537-943-11	CONNECTOR (DIN) 1P (MONITOR S-VIDEO OUT)
J252	1-794-937-11	CONNECTOR (DIN) 2P (DVD S-VIDEO IN,VIDEO 2 S-VIDEO IN)
J253	1-794-937-11	CONNECTOR (DIN) 2P (VIDEO 1 S-VIDEO OUT/IN)
J254	1-563-330-11	JACK (CTRL A1 II) (EXCEPT AEP,UK)

< RESISTOR >

R206	1-247-804-11	CARBON	75	5%	1/4W
R251	1-247-804-11	CARBON	75	5%	1/4W
R252	1-247-804-11	CARBON	75	5%	1/4W
R253	1-247-804-11	CARBON	75	5%	1/4W
R254	1-247-804-11	CARBON	75	5%	1/4W
R255	1-247-804-11	CARBON	75	5%	1/4W
R257	1-247-804-11	CARBON	75	5%	1/4W
R258	1-247-804-11	CARBON	75	5%	1/4W
R259	1-247-804-11	CARBON	75	5%	1/4W
R260	1-247-804-11	CARBON	75	5%	1/4W

****

1-861-056-11 TUNING BOARD

****

< RESISTOR >

R134	1-249-415-11	CARBON	680	5%	1/4W
R135	1-247-831-11	CARBON	1K	5%	1/4W
R136	1-249-419-11	CARBON	1.5K	5%	1/4W
R137	1-249-421-11	CARBON	2.2K	5%	1/4W
R138	1-247-847-11	CARBON	4.7K	5%	1/4W

< SWITCH >

S136	1-771-410-21	SWITCH, TACTILE (TUNING –)
S137	1-771-410-21	SWITCH, TACTILE (FM MODE)
S138	1-771-410-21	SWITCH, TACTILE (MEMORY)
S139	1-771-410-21	SWITCH, TACTILE (PRESET TUNING –)
S140	1-771-410-21	SWITCH, TACTILE (PRESET TUNING +)
S141	1-771-410-21	SWITCH, TACTILE (TUNING +)

****

VIDEO

Ref. No.	Part No.	Description			Remark
	A-4752-720-A	VIDEO BOARD, COMPLETE (US,CND)			
	A-4752-778-A	VIDEO BOARD, COMPLETE (AEP,UK)			
	A-4752-785-A	VIDEO BOARD, COMPLETE (AUS,SP,MY)			
		**********			
		< CAPACITOR >			
C200	1-128-805-11	CERAMIC	47PF	5% 50V	
C201	1-128-805-11	CERAMIC	47PF	5% 50V	
C206	1-126-964-11	ELECT	10uF	20% 50V	
C207	1-126-964-11	ELECT	10uF	20% 50V	
C208	1-126-964-11	ELECT	10uF	20% 50V	
C209	1-126-964-11	ELECT	10uF	20% 50V	
C210	1-126-964-11	ELECT	10uF	20% 50V	
C213	1-126-923-11	ELECT	220uF	20% 10V	
C214	1-164-159-11	CERAMIC	0.1uF	50V	
C215	1-164-159-11	CERAMIC	0.1uF	50V	
C220	1-126-947-11	ELECT	47uF	20% 35V	
C221	1-126-923-11	ELECT	220uF	20% 10V	
C223	1-164-159-11	CERAMIC	0.1uF	50V	
C224	1-164-159-11	CERAMIC	0.1uF	50V	
C248	1-128-825-11	CERAMIC	0.0022uF	5% 50V	
C308	1-126-964-11	ELECT	10uF	20% 50V (EXCEPT AEP,UK)	
C309	1-126-964-11	ELECT	10uF	20% 50V (EXCEPT AEP,UK)	
C310	1-126-964-11	ELECT	10uF	20% 50V (EXCEPT AEP,UK)	
C311	1-126-964-11	ELECT	10uF	20% 50V (EXCEPT AEP,UK)	
C312	1-126-964-11	ELECT	10uF	20% 50V (EXCEPT AEP,UK)	
C313	1-126-964-11	ELECT	10uF	20% 50V (EXCEPT AEP,UK)	
C316	1-128-825-11	CERAMIC	0.0022uF	5% 50V	
C317	1-126-947-11	ELECT	47uF	20% 35V (EXCEPT AEP,UK)	
C329	1-164-159-11	CERAMIC	0.1uF	50V (EXCEPT AEP,UK)	
C330	1-164-159-11	CERAMIC	0.1uF	50V (EXCEPT AEP,UK)	
C331	1-164-159-11	CERAMIC	0.1uF	50V (EXCEPT AEP,UK)	
C332	1-164-159-11	CERAMIC	0.1uF	50V (EXCEPT AEP,UK)	
C338	1-126-947-11	ELECT	47uF	20% 35V (EXCEPT AEP,UK)	
		< CONNECTOR >			
* CNP202	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
CNP203	1-691-765-11	PLUG (MICRO CONNECTOR) 3P			
CNS201	1-568-442-11	SOCKET, CONNECTOR 9P			
CNS250	1-568-439-11	SOCKET, CONNECTOR 7P			
		< DIODE >			
D203	8-719-991-33	DIODE 1SS133T-77			
D204	8-719-991-33	DIODE 1SS133T-77			
		< IC >			
IC203	6-701-890-01	IC NJM2595D			
IC301	8-759-231-66	IC TC74HC4053AP (EXCEPT AEP,UK)			

Ref. No.	Part No.	Description			Remark
IC302	6-701-891-01	IC NJM2581D (EXCEPT AEP,UK)			
IC804	8-759-701-65	IC NJM79M05FA			
IC807	8-759-231-53	IC TA7805S			
		< JACK >			
J200	1-794-978-11	JACK, PIN 3P (DVD VIDEO IN, VIDEO 2 VIDEO IN,VIDEO 1 VIDEO OUT)			
J201	1-815-043-11	JACK, PIN 2P (VIDEO 1 VIDEO IN,MONITOR VIDEO OUT)			
J301	1-816-592-11	JACK, PIN 9P (COMPONENT VIDEO DVD IN,VIDEO 2 IN,MONITOR OUT) (EXCEPT AEP,UK)			
		< TRANSISTOR >			
Q301	8-729-116-02	TRANSISTOR BA1A4M-TP (EXCEPT AEP,UK)			
		< RESISTOR >			
R200	1-247-804-11	CARBON	75	5% 1/4W	
R201	1-247-804-11	CARBON	75	5% 1/4W	
R218	1-247-804-11	CARBON	75	5% 1/4W	
R219	1-247-804-11	CARBON	75	5% 1/4W	
R220	1-247-804-11	CARBON	75	5% 1/4W	
R221	1-247-804-11	CARBON	75	5% 1/4W	
R301	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R302	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R303	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R304	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R305	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R306	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R307	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R308	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R309	1-247-804-11	CARBON	75	5% 1/4W (EXCEPT AEP,UK)	
R310	1-247-831-11	CARBON	1K	5% 1/4W (EXCEPT AEP,UK)	
R311	1-247-831-11	CARBON	1K	5% 1/4W (EXCEPT AEP,UK)	
R312	1-247-831-11	CARBON	1K	5% 1/4W (EXCEPT AEP,UK)	
R313	1-247-863-11	CARBON	22K	5% 1/4W (EXCEPT AEP,UK)	
R325	1-249-429-11	CARBON	10K	5% 1/4W (EXCEPT AEP,UK)	
R347	1-247-807-31	CARBON	100	5% 1/4W (EXCEPT AEP,UK)	
**********					

Ref. No.	Part No.	Description			Remark
		VIDEO3 BOARD			
		**********			
		< CAPACITOR >			
C293	1-164-159-11	CERAMIC	0.1uF		50V
C294	1-164-159-11	CERAMIC	0.1uF		50V
		< CONNECTOR >			
CN201	1-784-922-11	PIN, CONNECTOR 5P			
		< JACK >			
J298	1-815-684-11	JACK, PIN 3P (VIDEO 3 INPUT VIDEO,AUDIO L/R) (SILVER)...(BLACK,SILVER)			
J298	1-817-374-11	JACK, PIN 3P (VIDEO 3 INPUT VIDEO,AUDIO L/R) (GOLD)...(GOLD)			
		< RESISTOR >			
R298	1-247-831-11	CARBON	1K	5%	1/4W
R299	1-247-831-11	CARBON	1K	5%	1/4W
		< LEAD WIRE >			
* W290	1-690-880-31	LEAD (WITH CONNECTOR)			

****

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	
		**********	
58	1-773-150-11	WIRE (FLAT TYPE) (21 CORE)	
102	1-769-937-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP,UK)	
102	1-773-001-11	WIRE (FLAT TYPE) (15 CORE) (AEP,UK)	
103	1-769-879-11	WIRE (FLAT TYPE) (7 CORE)	
106	1-769-905-11	WIRE (FLAT TYPE) (9 CORE)	
⚠108	1-696-847-22	CORD, POWER (AUS)	
⚠108	1-777-071-23	CORD, POWER (AEP,UK,SP,MY)	
⚠108	1-783-820-11	CORD, POWER (US,CND)	
⚠F901	1-533-454-12	FUSE, GLASS TUBE (DIA.5) (6.3A/125V)	(US,CND)
⚠F901	1-532-464-32	FUSE (T2.5AL/250V) (EXCEPT US,CND)	
⚠F902	1-533-453-12	FUSE, GLASS TUBE (DIA.5) (5A/125V)	(US,CND)
⚠F902	1-532-464-32	FUSE (T2.5AL/250V) (EXCEPT US,CND)	
Q503	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q504	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q603	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q604	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q653	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q654	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q703	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q704	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q753	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q754	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q1600	8-729-026-08	TRANSISTOR 2SC4495	
Q1601	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q1602	8-749-010-26	TRANSISTOR MP1620-OPY-M	
Q1650	8-729-026-08	TRANSISTOR 2SC4495	
Q1651	8-749-010-25	TRANSISTOR MN2488-OPY-M	
Q1652	8-749-010-26	TRANSISTOR MP1620-OPY-M	
⚠T901	1-439-550-11	TRANSFORMER, POWER (EXCEPT US,CND)	
⚠T901	1-439-611-11	TRANSFORMER, POWER (US,CND)	
TN1	1-693-577-21	TUNER PACK (ANTENNA) (US,CND)	
TN1	1-693-578-13	TUNER PACK (ANTENNA) (AEP,UK)	
TN1	1-693-580-24	TUNER PACK (ANTENNA) (AUS,SP,MY)	

****

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
		ACCESSORIES	
		**********	
	1-477-785-31	COMMANDER, STANDARD (RM-U307)	(EXCEPT US,CND)
	1-478-633-11	COMMANDER, STANDARD (RM-PP413)	(US,CND)
	1-501-374-12	ANTENNA, LOOP (AM)	
	1-501-807-12	ANTENNA (FM) (EXCEPT US,CND)	
⚠	1-770-019-51	ADAPTOR, CONVERSION PLUG (UK)	
	1-793-184-23	CONNECTOR (F TYPE ADAPTOR) (FM)	(US,CND)
	3-071-119-01	COVER, BATTERY (for RM-PP413) (US,CND)	
	4-228-696-01	COVER, BATTERY (for RM-U307)	(EXCEPT US,CND)
	4-252-272-11	MANUAL, INSTRUCTION (ENGLISH) (US,CND)	
	4-252-272-21	MANUAL, INSTRUCTION (FRENCH) (CND)	
	4-252-272-31	MANUAL, INSTRUCTION (ENGLISH)	(EXCEPT US,CND)
	4-252-272-41	MANUAL, INSTRUCTION (FRENCH)	(AEP,SP,MY)
	4-252-272-51	MANUAL, INSTRUCTION (SPANISH)	(AEP,SP,MY)
	4-252-272-61	MANUAL, INSTRUCTION (GERMAN,DUTCH,	SWEDISH) (AEP)
	4-252-272-71	MANUAL, INSTRUCTION (ITALIAN,POLISH)	(AEP)
	4-252-272-81	MANUAL, INSTRUCTION	(TRADITIONAL CHINESE) (SP,MY)
	4-255-414-11	MANUAL, INSTRUCTION (DANISH,FINNISH)	(AEP)
	4-255-414-21	MANUAL, INSTRUCTION (PORTUGUESE) (AEP)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2004. 04	New
1.1	2004. 10	KNOB (MENU) addition. (SPM-04106)